


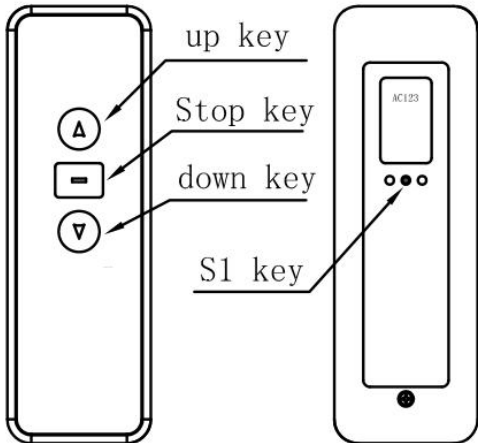

Manual for
Remote Control for
Pergola Gazebo
San Fernando

Install the remote control battery	
1. Uninstall the rear screws 2. Slide the rear cover upwards 3. Remove the back cover 4. Take out the battery 5. Install the battery with CE mark facing up 6. Slide the rear cover downwards 7. Fixing screws	 The diagram shows two views of the remote control. The left view shows the back cover with three screws and three keys: an up key (triangle up), a stop key (square with a horizontal line), and a down key (triangle down). The right view shows the internal battery compartment with a battery labeled 'AC123' and three small circles representing the battery contacts. An arrow points from the 'S1 key' label to the bottom of the battery compartment.
Code assignment	
Put your finger through the hole, press the yellow button once, then press the up button on the remote control once.	
Cancel emitter	
Put your finger through the hole, keep pressing the yellow button for 7 seconds, the motor will run twice, then press the button, and no response, the emitter has been successfully cleared.	
Trip settings	
A. Trip: Fabric close	
Press the up key once, the motor will run for a while, long press the up key, the motor will run continuously until the product fabric is closed to the specified position, press the stop key once, and then press the "S1" key on the back of the remote control twice.	
A. Trip: Fabric open	
Press the down key once, the motor will run for a while, long press the down key, the motor will run continuously until the product fabric is opened to the specified position, press the stop key once, and then press the "S1" key on the back of the transmitter twice.	

Contact information

Austria



Belgium



Croatia



Denmark



Estonia



Finland



France



Germany



Ireland



Italy



Latvia



Lithuania



Nederland



Norway



Poland



Portugal



Spain



Sweden



Switzerland



UK

