


DANCOVER[®]

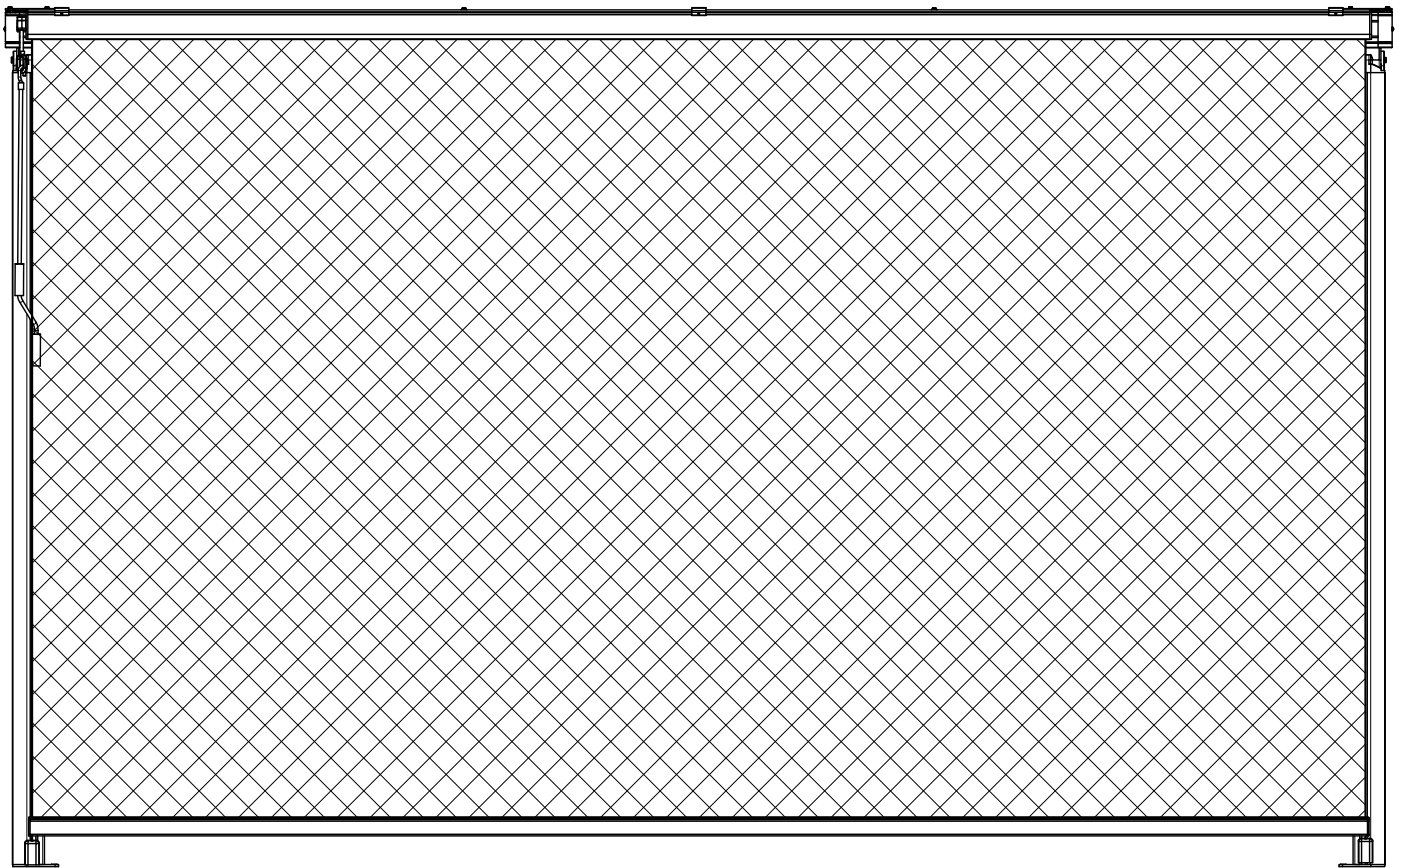


Manual
for
Screen/Sidewall 3m+4m
for Patio Cover Santa Ynez


Manual Instruction for Side Screen







Spare parts list

Label No.	Description	Drawing	Qty
L	Handle crank		1
M	Brackets		3
N	The Screen		1
O	Cable support bracket		2
P	Plastic cover		2
Q	Ring		1
K1	Screw M4*20 Nut M4		1
K2	Self-drilling screws (Cross recessed large flat head) ST4.2*25		6
K3	Self-drilling Screws (Countersunk head) ST4.2*22		9
K4	Cross recessed countersunk head tapping screws ST4.2*13		4


Fixing the part M with the part K3 onto the beam

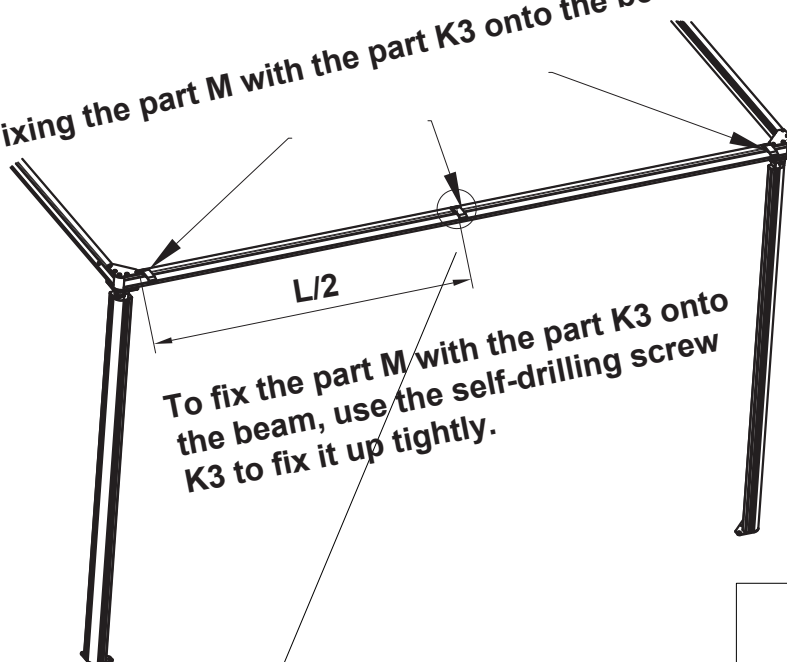

To fix the part M with the part K3 onto the beam, use the self-drilling screw K3 to fix it up tightly.

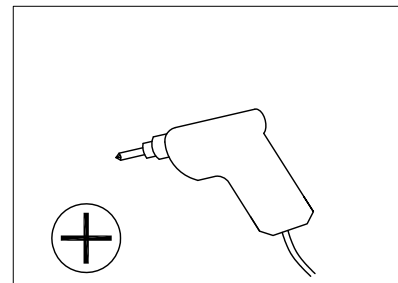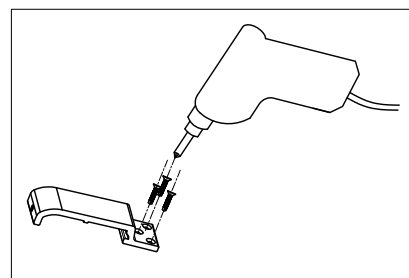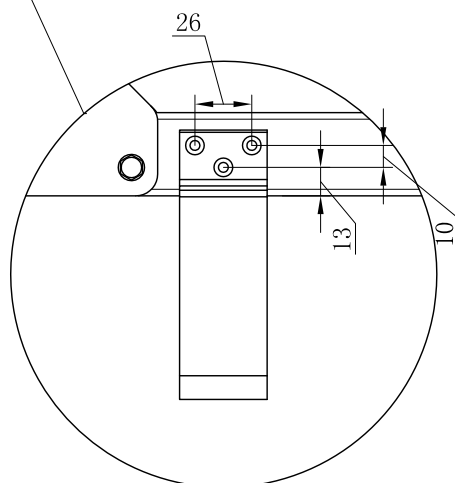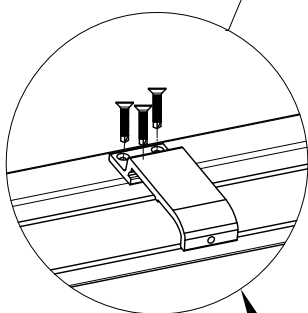

M




QTY: 3PCS




K3




QTY: 9PCS

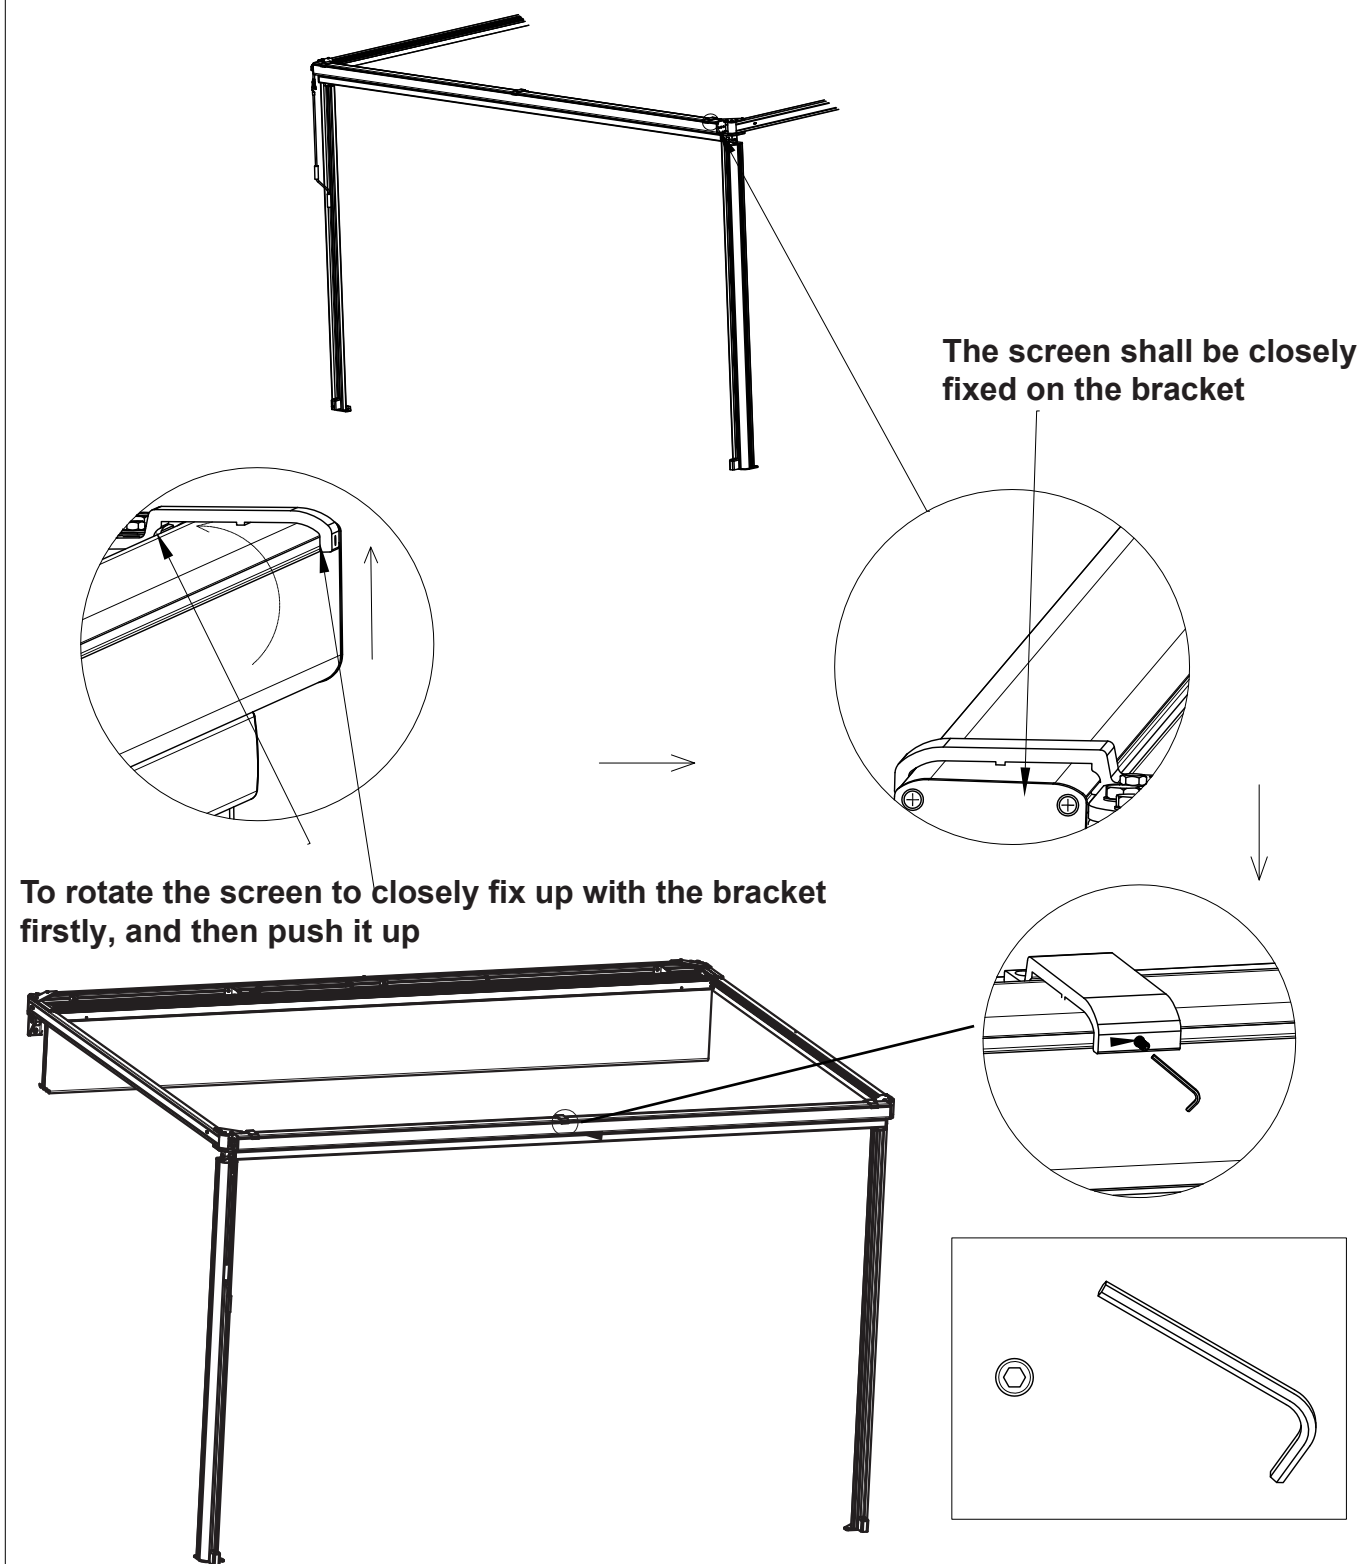

Q		QTY: 1PC	K1		QTY: 1PC
N		QTY: 1PC	L		QTY: 1PC

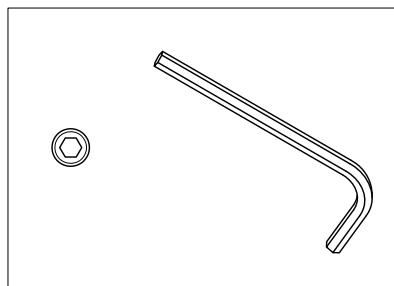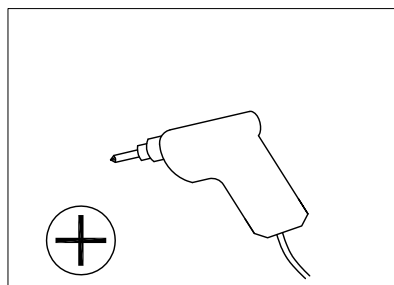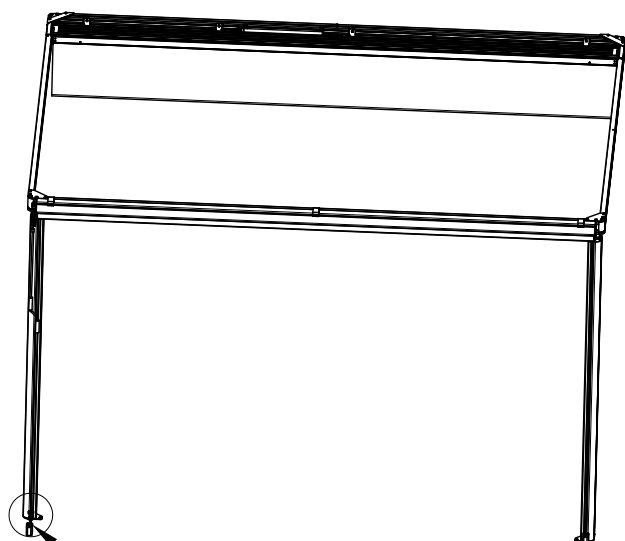


**To loosen the internal screw firstly,
and tighten it up when the regulator is lifted**

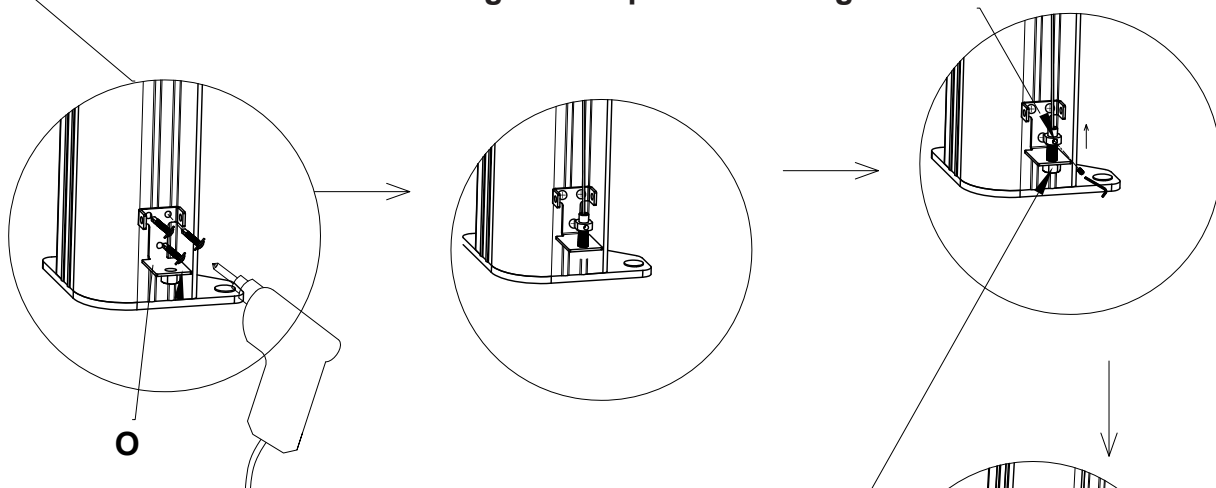


**To lift the regulator up by the arrow
direction, then tighten the screw nut below**

To put the cover back for the last step

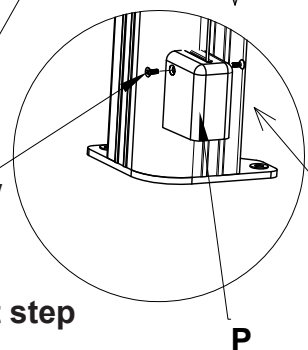

O



QTY: 2PCS

P



QTY: 2PCS

K2



QTY: 6PCS

K4



QTY: 4PCS

Contact information

Austria




Belgium



Croatia



Denmark

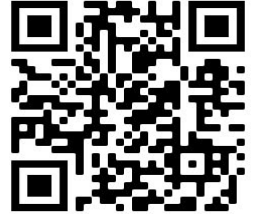

Estonia



Finland




France




Germany



Ireland

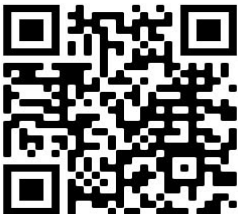

Italy

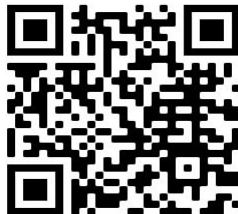

Latvia



Lithuania



Nederland



Norway




Poland



Portugal



Spain

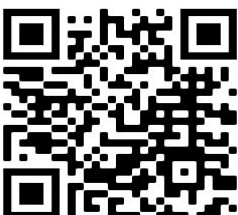

Sweden



Switzerland



UK

