



Manual
for
Greenhouse TITAN Arch 320



Dear clients!

After making the decision of buying a greenhouse you received a carefully made item. Its framework is made from special (1mm of thickness and 78mm width) profiles produced from galvanized metal which are extremely strong.

Due to uncomplicated instruction this greenhouse is easy to construct.

Because of additional items, you will be able to accomplish your ideas.

We keep the rights to make variations associated with the improvements of technologies. Some pictures and instructions may be different because of that.

We wish you a lot of joy and success with our greenhouse.

Attention!

Always use protective work measures (safety gloves, clothes) when constructing the framework of the greenhouse and working with polycarbonate cover.

Tools you will need for the construction:

- Hexagon wrench with the diameter of 8 mm or wrench with open end.
- Cross-head screwdriver or screwdriver for battery
- Shovel to dig pits
- Spirit level to measure equability of the ground.
- Rope to measure the diagonal
- Knife to cut polycarbonate sheets

If necessary, follow the instructions from local building area.

In case of strong wind or storm close the windows and doors.

Before starting the construction, you should read all the instruction at least once and understand different sections and profiles. This is a helpful guide for you. Compare the list of parts with the parts in the package. Then sort out the sections and leave them in separate places.

It is highly recommended to screw the screws easily with hands at first – if needed, you will be able to rotate sections. After the construction, you should measure equability of the framework and only then tighten the screws.

The list of parts

No	Name	Length, mm	TITAN Arch 320		
			6m ²	12m ²	Extension 2 m.
NO. 1	Short arch (top)	1820 mm	4	7	3
NO. 2	Side arch (left, right on top)	1200 mm	8	14	6
NO. 3	Side – bottom stilt of the arch(left, right)	1310 mm	8	14	6
NO. 4	Pillars to the ground	200 mm	12	18	6
NO. 5	Fastenings of the arches - crossbars	2030 mm	5	10	-
NO. 6	Fastenings of the arches - crossbars for extension	2030 mm	-	-	5
NO. 7	Profile for the fastening	1465 mm	2	4	2
NO. 8	Stilt of the door - window	2050 mm	4	4	-
NO. 8A	Fixing the door-window pillar to the ground	400 mm	4	4	-
NO. 9	Side fastenings of the front – back part	900 mm	4	4	-
NO. 10	Transversal stilt of the door - window	985mm	3	3	-
NO. 11	Sides of the foundation basis	2000 mm	2	4	-
NO. 12	Extension of the side of the foundation basis	1965mm	-	-	2
NO. 13	Front and back parts of the foundation basis	3000mm (or 1500 mm)	2 (4)	2 (4)	-
NO. 14	Angles of the foundation		4	4	-
NO. 15	Plates for linking the foundation (If the front and rear of the foundation base 1500x2)		- (+4)	2 (+4)	2
NO. 16	Screws M5-12 with the injectable head	l-12mm	279	369	90
NO. 17	Screws M5-40	l-40mm	100	126	26
NO. 18	Screws M5-16 to attach polycarbonate to plates and angles	l-16mm	19	19	-
NO. 19	Internal screws M5		398	514	116
NO. 20	Gasket slides		124	154	24
NO. 21	Handle		3	3	-
NO. 22	Angles of attaching polycarbonate and stilt (Big angle)		4	4	-
NO. 23	Angles of attaching polycarbonate and stilt (Small angle)		18	18	-
NO. 24	Plates for attaching polycarbonate		5	5	-
NO. 25	Protective band for sealing plates (for doors)	m	5	5	-

NO. 26	Plastic door opening handle		2	2	-
NO. 27	Screw with loop		2	2	-
NO. 28	Gum to seal gap between the wall and the roof	m	12	12	-
DOOR NO. 1	Part of the door with hinges	930mm	3	3	-
DOOR NO. 2	Part of the door with a handle	930mm	3	3	-
DOOR NO. 3	Bottom/top part of the door (horizontal part)	885mm	9	9	-
DOOR NO. 4	Transverse part of the door (vertical parts)	400mm	6	6	-


Dimensions of polycarbonate

	Width/ Height	6 m ²	12 m ²	extension 2 m.	Remark
1; 2; 3; 4 Side parts	1050x2000	4	4	-	Cutting sheets depends on the equipment If you received only big(2,10x6,00m)sheets (6 m2 – 2 pc; 12 m2 – 3 pc etc.) All these parts should be cut from 2,10x6,00 m 1 sheet.
5 The top part of the door	1050x990	1	1	-	
6 The bottom part of the door	1050x940	1	1	-	
7 Window	1050x990	1	1	-	
8 Bottom of the window	1050x940	1	1	-	
9 Upper	1050x170	2	2	-	
10 Top part	2100x6000	1	2	1	

Scheme for cutting polycarbonate



Correctly separate sides of the polycarbonate. Attach the side with UV protection to the outside. UV protection layer is covered with the tape with note signs, while other side (attaching to the inside) is covered with the clear sheet. **YOU MUST USE GLOVES WHILE CUTTING!** It is recommended to cut sheet with electric disc saw, saw or sharp knife.

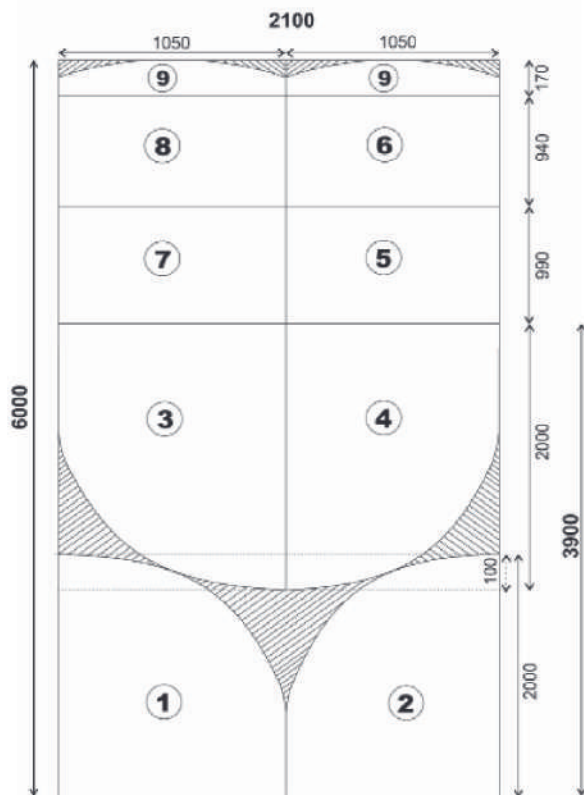

-1-; -2-; -3-; -4-; Side parts

-5- The top part of the door

-6- Bottom part of the door

-7- Window

-8- Bottom of the window


-9- Upper polycarbonate of the window of the door

ATTENTION! If you received 2,10x6,00 m sheets and additionally 1,05x2,00 m, you shouldn't cut big sheets like it is shown in the scheme.

Big 2,10x6,00 m sheets are used for roof, 1,05x2,00 m sheets are used for ends, door and window. Follow the measurements shown in the table "Dimensions of polycarbonate"

Installation instruction:

1. For the construction of the foundation basis you should use: Front and back parts of the foundation basis (13), sides of the foundation basis (11). You should connect all 4 parts and make a rectangle. To make a rectangle use: angles of the foundation (14), screw the parts together with screws M5-12 (16), internal screws M5 (19) (1.1 - 1.4 fig.).

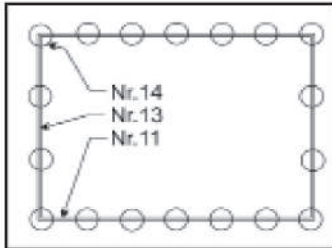

1.1 fig



1.2 fig



1.3 fig


For bigger than 12m² greenhouse, in order to increase the length of the basis Plates for linking the foundation (15) are used. They are screwed from both sides with screws M5-12 (16), internal screws M5 (19) (2.1 fig.).

If the length of the greenhouse is 6m - foundation basis is connected: 2m (11) + 1.965m extension of the foundation basis (12) + 2m (11) (2.1 fig.).

If the length of the greenhouse is 8m - foundation basis is connected: 2m (11) + 1.965m extension of the foundation basis (12) + 1.965m (12) + 2m (11) (2.1 fig.).



1.4 fig

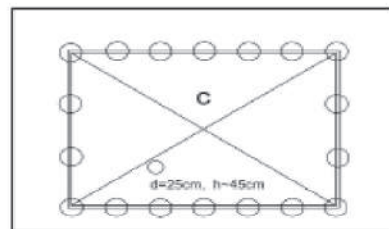


1.5 fig

2. Measure the diagonal of the foundation basis. Lengths of the diagonals must be equal. If they are equal – tighten the screws of the foundation basis (1.5 fig.).

3. Dig pits (25cm diameter, 40cm depth) for digging in Side – bottom stilt of the arch (NO. 3). Dig them along the perimeter of the foundation basis, near the fastening points marked on the foundation basis (2 fig.).



2 fig

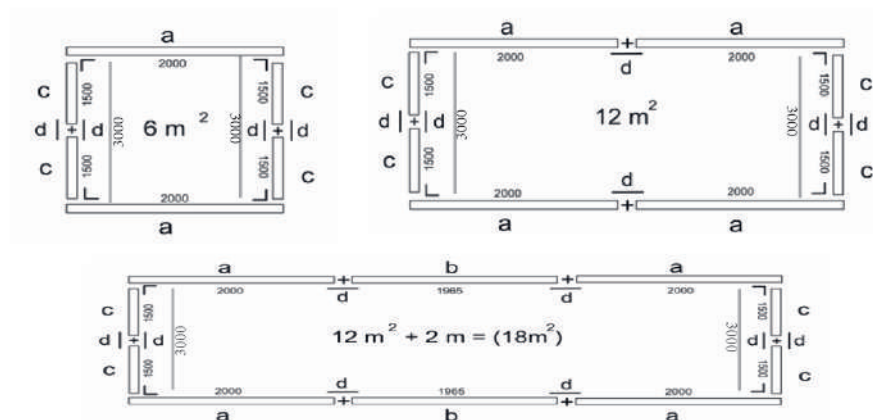

3.1 fig

NOTE: If the sides of the foundation basis was received not 4 meters long, please look installation instruction at this page.

	Name	Length, mm			
			6 m ²	12 m ²	extension 2 m.
a	Sides of the foundation basis (11)	2000 mm	2	4	-
b	Extension of the side of the foundation basis (12)	1965 mm	-	-	2
c	Front and back parts of the foundation basis (13)	3000 / 1500 mm	2 / 4	2 / 4	-
d	Plates for linking the foundation (15)		0 / 4	2 / 6	2

If greenhouse is bigger than 6m², for the extension of the foundation basis need to use plates for linking the foundation. Need to put in one side and fix with screws M5-12 and M5 nuts (2.1 fig).

*If greenhouse 4 m – foundation basis need to connect: 2000mm (a) + 2000 mm (a)

*If greenhouse 6 m – foundation basis need to connect: 2000mm (a) + 1965mm (b) + 2000mm (a)


*If greenhouse 8 m – foundation basis need to connect: 2000mm (a) + 1965mm (b) + 1965mm (b) + 2000mm (a)

If you received the front and rear parts of the foundation 4 pcs. After 1500 mm, they are installed as follows: 1500 mm (c) + 1500 mm (c), use plates for linking the foundation from both sides and fix with screws M5-12 and M5 nuts.



3.2 fig

4. To the top of front and back parts of the foundation basis (13) fasten the Plates for attaching polycarbonate (24) with M5-12 screws (16) and internal screws M5 (19) (4.1 - 4.2 fig.).

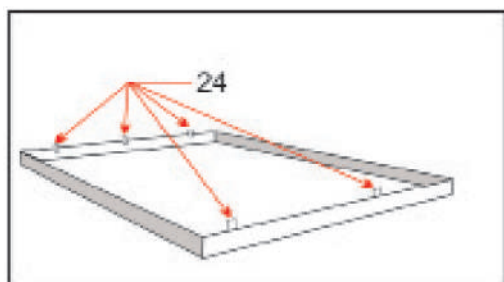


4.1 fig



4.2 fig


5. Preparing the stilt for digging in. To the bottom of Side – bottom stilt of the arch (NO. 3), screw Pillars to the ground (NO. 4) with the screws M5-12(16) and internal screws M5 (19) (5 fig.).

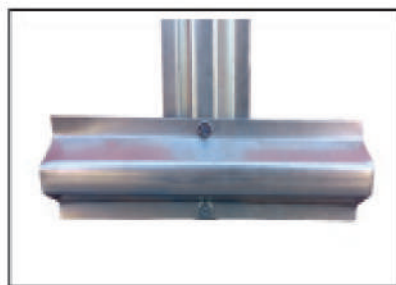

5 fig


6. Construction of arches. The most comfortable way is to collect all arches on the ground. To Side – bottom stilt of the arch (NO. 3) connect side arches (NO. 2) from the both sides. Connect short arch (NO. 1) on top, in the middle to the side arches. Use screws (16) and internal screws (19) (6 fig.).

REMARK: Every upper part covers the part that is underneath. End of the part NO. 2 which has 2 vertical connecting holes (for fastenings of the arches – crossbars (NO.5)) is connected to the part NO. 1

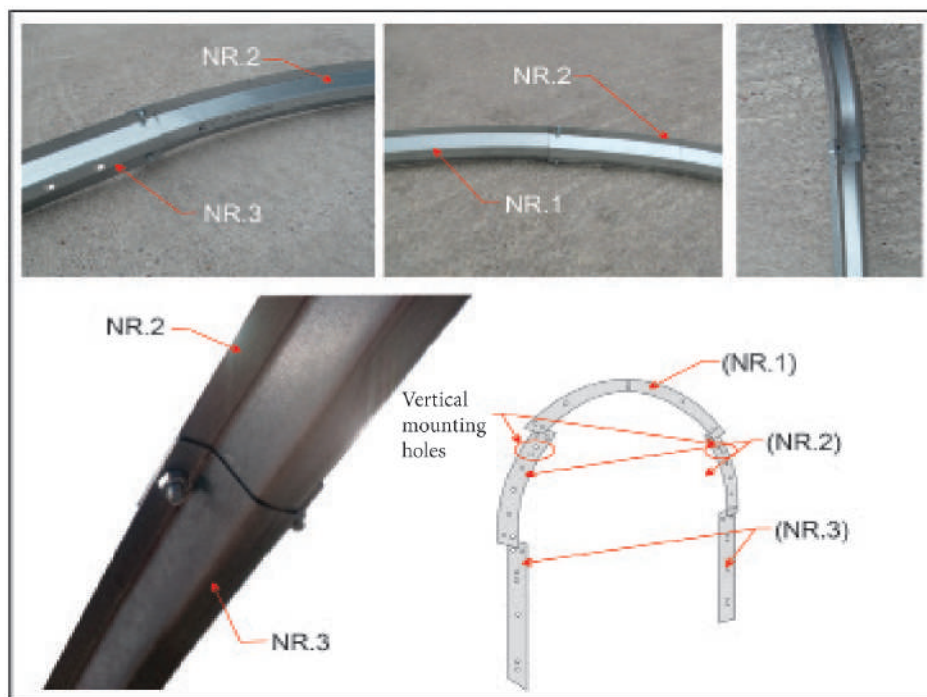

6 fig

7. To already constructed foundation basis screw arches with screws M5-12 (16) and internal screws (19) (7.1 - 7.2 fig.).

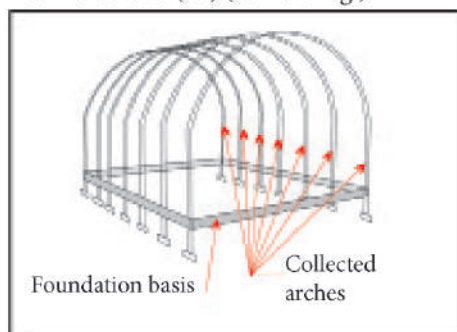


7.1 fig




7.2 fig

8. To already constructed and screwed to the foundation arches, you should attach five fastenings of the arches – crossbars (NO. 5) with screws M5-12 (16) and internal screws (19) (8.1 fig.).

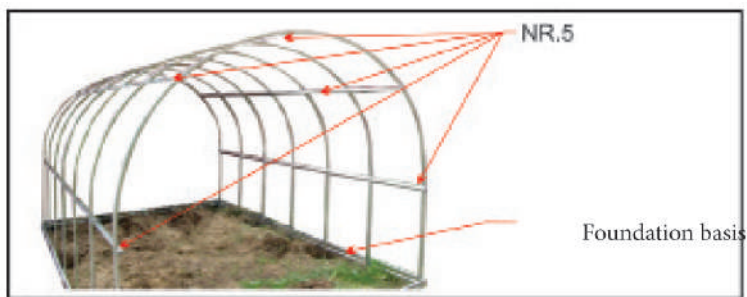

8.1 fig

For bigger than 6m² arch greenhouse TITAN Arch 320, additional crossbars are used to strengthen arches (8.2 fig.).

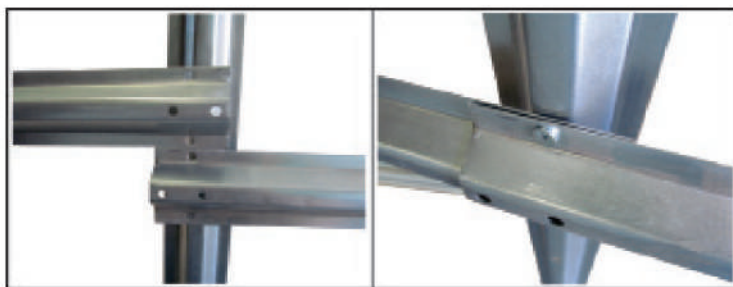

8.2 fig

9. To the front and back arches you should screw fastening angles of the stilt and polycarbonate. On the each side you should use 9 pcs small angles (23) and 2 pcs big angles (22).

Positions of angles measuring from the foundation from left to right (Measured with upright angle) (9.1 - 9.3 fig.):

- 1) 5 cm big angle (22). Narrow part to the front
- 2) 83 cm small angle (23). Wide part to the front
- 3) 109 cm small angle (23). Wide part to the front
- 4) 170 cm small angle (23). Wide part to the front
- 5) 196 cm small angle (23). Wide part to the front
- 6) 202 cm small angle (23). Wide part to the front
- 7) 196 cm small angle (23). Wide part to the front
- 8) 170 cm small angle (23). Wide part to the front
- 9) 109 cm small angle (23). Wide part to the front
- 10) 83 cm small angle (23). Wide part to the front
- 11) 5 cm big angle (22). Narrow part to the front


10. Stilt of the door – window (No. 8) should be attached to foundation basis and collected arches with the screws M5-12 (16) and internal screws (19). With the front of the foundation basis (13) it is attached directly with the screws M5-12 (16) and internal screws (19). Arch on top (No. 1) is attached with Angles of attaching polycarbonate and stilt (23) (10.1 - 10.2 fig.).




9.1 fig



Big angle
9.2 fig

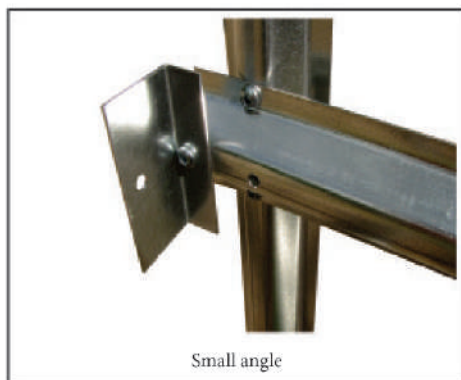

Small angle
9.3 fig

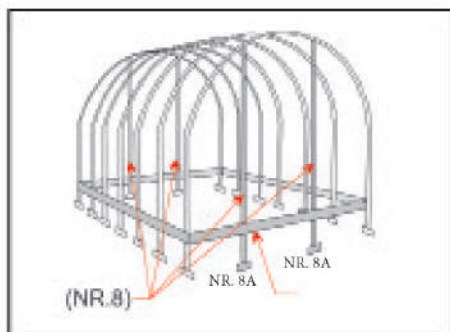

10.1fig



10.2 fig

11. By the part (NO.8), screw Transversal stilt of the door – window 985mm (No. 10) to Stilt of the door – window. Use screws M5-12 (16) and internal screws M5 (19)(11.1 - 11.2 fig.).




11.1 fig




11.2 fig

11.1 Stilt of the door-window consists of and is connected by three parts no. 8 (2050 mm) + Nr. 8A (400 mm) + Nr. 4 (200mm) (figure 11.3). Attach part no. 4 to part no. 8A with bolts M5-12 (16) and nuts M5 (19). The assembled part is then assembled together with part no. 8 Fasten to the front and rear of the base with bolts M5-12 (16) and nuts M5 (19) (fig. 11.4).

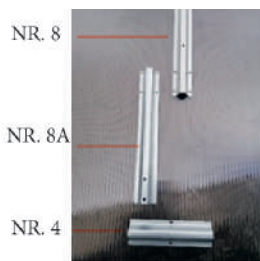

11.3 pic

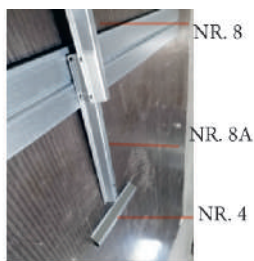

11.4 pic

12. By the part (NO.8) and angles of attaching polycarbonate and stilt (Small angle) (23), screw directly Side fastenings of the front – back part 900mm (No. 9) to Stilt of the door – window(No. 8) and Angles of attaching polycarbonate and stilt (Small angle) (23). Use screws M5-12 (16) and internal screws M5 (19) (12 fig.)



12 fig

13. Firstly, screw profiles for fastening 1465mm (No. 7) with screws M5-12 (16) and internal screws M5 (19) to the side arch in height of 1,96m from the foundation basis. Another part of the profile should be placed on fastening of the arch – crossbar (No. 5) and screwed with screws M5-12 (16) and internal screws M5 (19) (13.1-13.4 fig).

NOTE: It is recommended to screw with one M5-40 screw through all three parts: side stilt, fastening of the arch – crossbar, profile for fastening.




13.1 fig



13.2 fig



13.3 fig

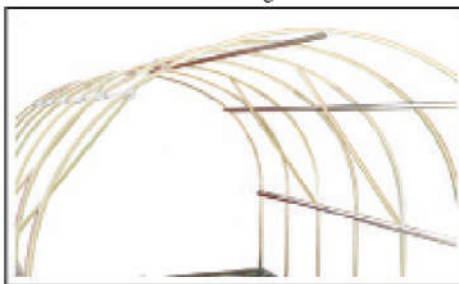


13.4 fig

1 fastening profile is designed to strengthen one 2m length segment on the both sides. I.E. Greenhouse's length is 2m – 2pcs of fastening profiles (one on each sides); Greenhouse's length is 4m – 4pcs of fastening profiles (two on both sides) and etc.

14. After collecting the framework of the greenhouse, cut the polycarbonate based on the given measurements and attach it to the framework. Attach sheets of polycarbonate (Scheme for cutting polycarbonate – 1; 2; 3; 4) – attach side parts to polycarbonate and angles of attaching polycarbonate and stilt (22, 23) and plates for attaching polycarbonate (24) with screws M5-16 (18) and internal screws M5 (19) and gasket slides (20). Also, attach it to stilt of the door - window and crossbar (No. 8 No. 10) and side fastenings of the front – back part (No. 9) with screws M5-40 (17) and internal screws M5 (19) and gasket slides (20) (14 fig.).




Correctly separate sides of the polycarbonate. Attach the side with UV protection to the outside. UV protection layer is covered with the tape with note signs, while other side (attaching to the inside) is covered with the clear sheet. **YOU MUST USE GLOVES WHILE CUTTING!** it is recommended to cut sheet with electric disc saw, saw or sharp knife.

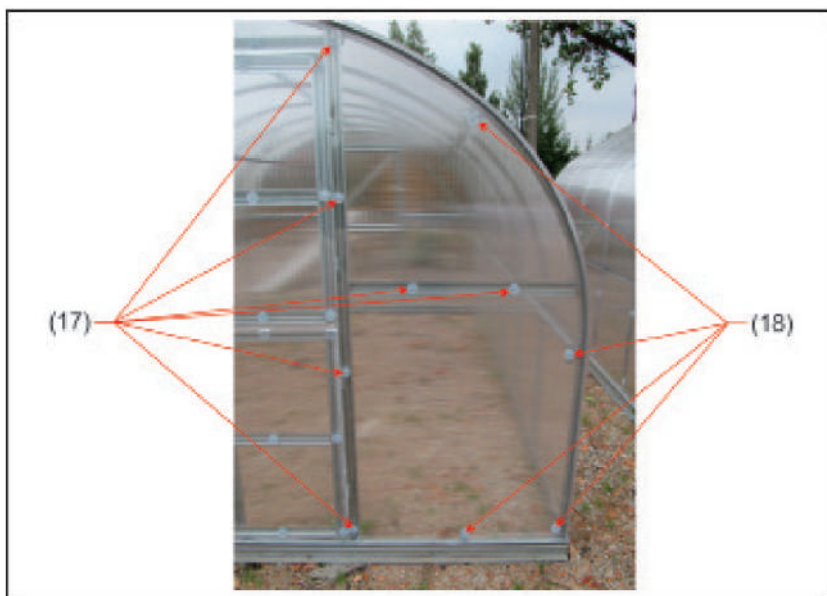


14 fig

15. If sides of the polycarbonate are over the framework of arches, cut them along the carcass. Place gum to seal gap between the wall and the roof (28) on the top of the sheets and only then place upper part of the polycarbonate (-10- 2100x6000mm) (15 fig).

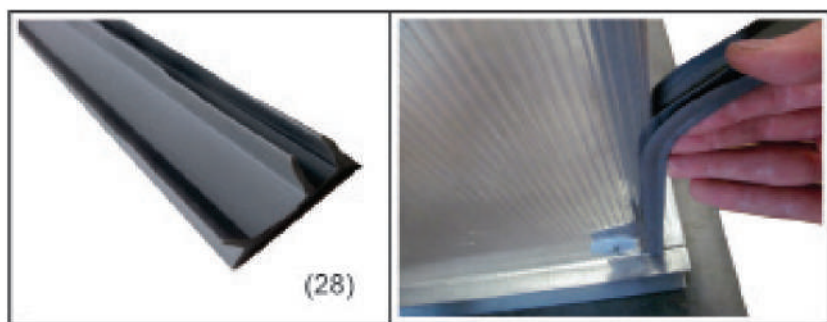


15 fig

16. Top parts (10) should be placed from the bottom to the top along the one side. Polycarbonate is attached with screws M5-12 (16) and internal screws M5 (19) and gasket slides (20). On one band of the arch are 5 (five) attachment points. Attach ONLY on those points. Another side must be attached from the top to the bottom. If the sheet of polycarbonate is too long, cut it along the foundation basis (11). The front and back polycarbonate sheets should be flush with the edges of the foundation (16 fig.).

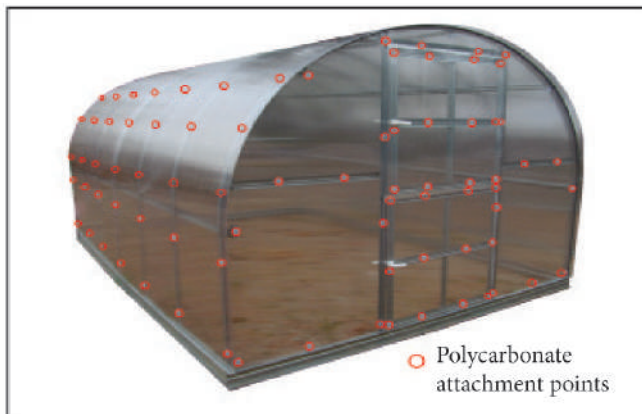

16 fig


17. Another sheet of polycarbonate (10) should be placed on top of the fitted sheet. Screw it only on attachment points same like in the step 16. Polycarbonate sheets should be equal to the side of foundation basis both in front and back. The front and back polycarbonate sheets should be flush with the edges of the foundation (17 fig.).

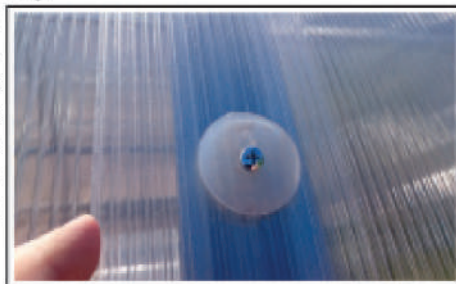


17 fig

18. Construction on door-window. All parts packed in door equipment should be joined to square. (DOOR No. 1; DOOR No. 2; DOOR No. 3) with screws M5-12 (16) and internal screws M5 (19). Screw Transverse part of the door to the constructed framework. Part of the door with hinges must be screwed to Stilt of the door - window with screws M5-12 (16) and internal screws M5 (19) (18.2 fig.).

NOTE: Door must be attached to the stilt of the door while being opened and with the extended hinge to the hole, through polycarbonate (18.1 fig.).

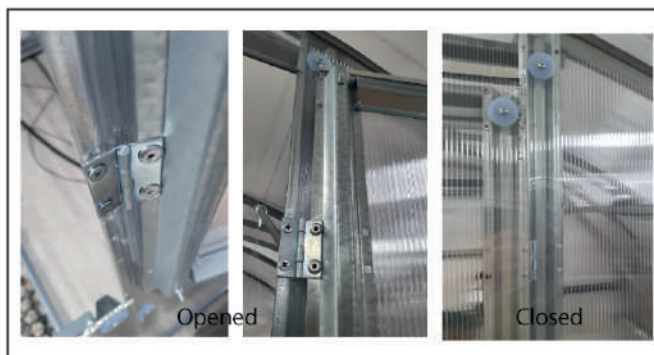

18.1 fig

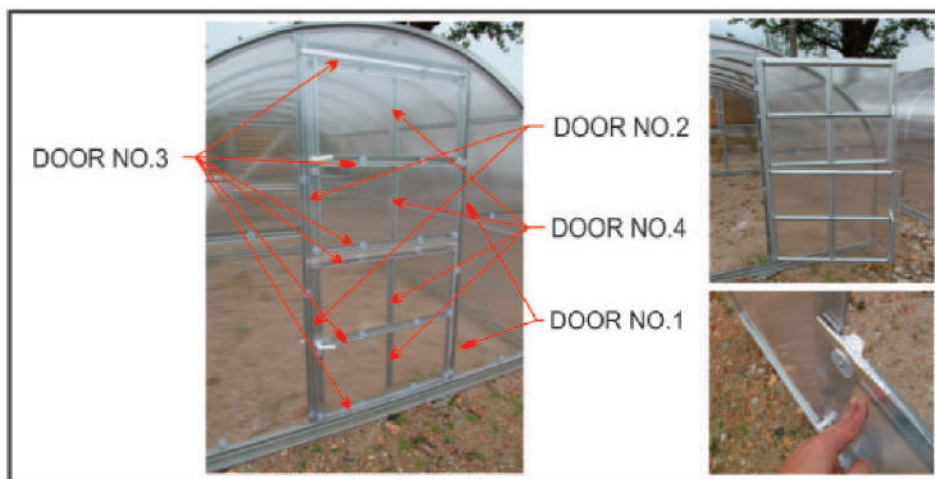

18.2 fig

19. Based on the given scheme, cut the polycarbonate (5;6;7;8;9)

Polycarbonate parts of the door window must be fitted only when the door hinges are attached to the framework of the greenhouse.

Polycarbonate sheets of door – window are attached with screws M5-12 (16) and internal screws M5 (19) and gasket slides (20) to the door frame.

Polycarbonate ends of the door-window must be sealed with protective band for sealing plates (25). Join handles (21) to its place (19 fig.). Make a hole in polycarbonate sheet with sharp knife. Cut X shaped holes opposite the metal holes. Make a hole from the outside of the cover.



19 fig

20. Screw the screw with loop (27) on its place on the same level as the door handle. Make a loop from the given plastic door opening handle (26) (20 fig.).



20 fig

Contact information

Head office:

Dancover A/S
Lyngelvej 16A, Nørre Herlev
3400 Hillerød
Denmark

For more information
please visit:

www.dancovershop.com

National contact

Denmark:

denmark@dancover.com

UK:

uk@dancover.com

Germany:

germany@dancover.com

France:

france@dancover.com

Sweden:

sverige@dancover.com

Finland:

suomi@dancover.com

Poland:

polska@dancover.com

Luxembourg:

luxembourg@dancover.com

Portugal:

portugal@dancover.com

Spain:

espana@dancover.com

Italy:

italia@dancover.com

Switzerland:

schweiz@dancover.com

Austria:

austria@dancover.com

Norway:

norge@dancover.com

Nederland:

nederland@dancover.com

Ireland:

ireland@dancover.com

Belgium:

belgique@dancover.com