


DANCOVER[®]

.com


Manual
for
Greenhouse
2,47x3,62x2,13m

ASSEMBLY INSTRUCTIONS









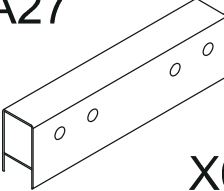
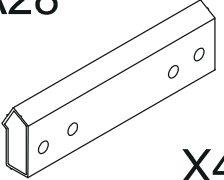
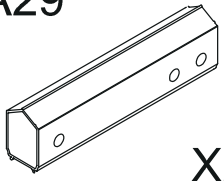
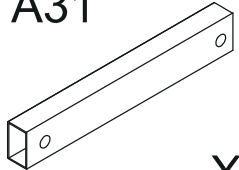
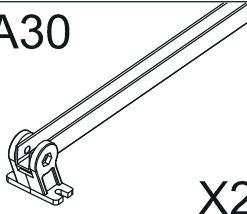

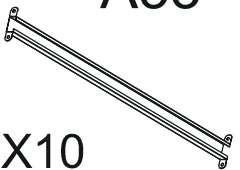
Greenhouse

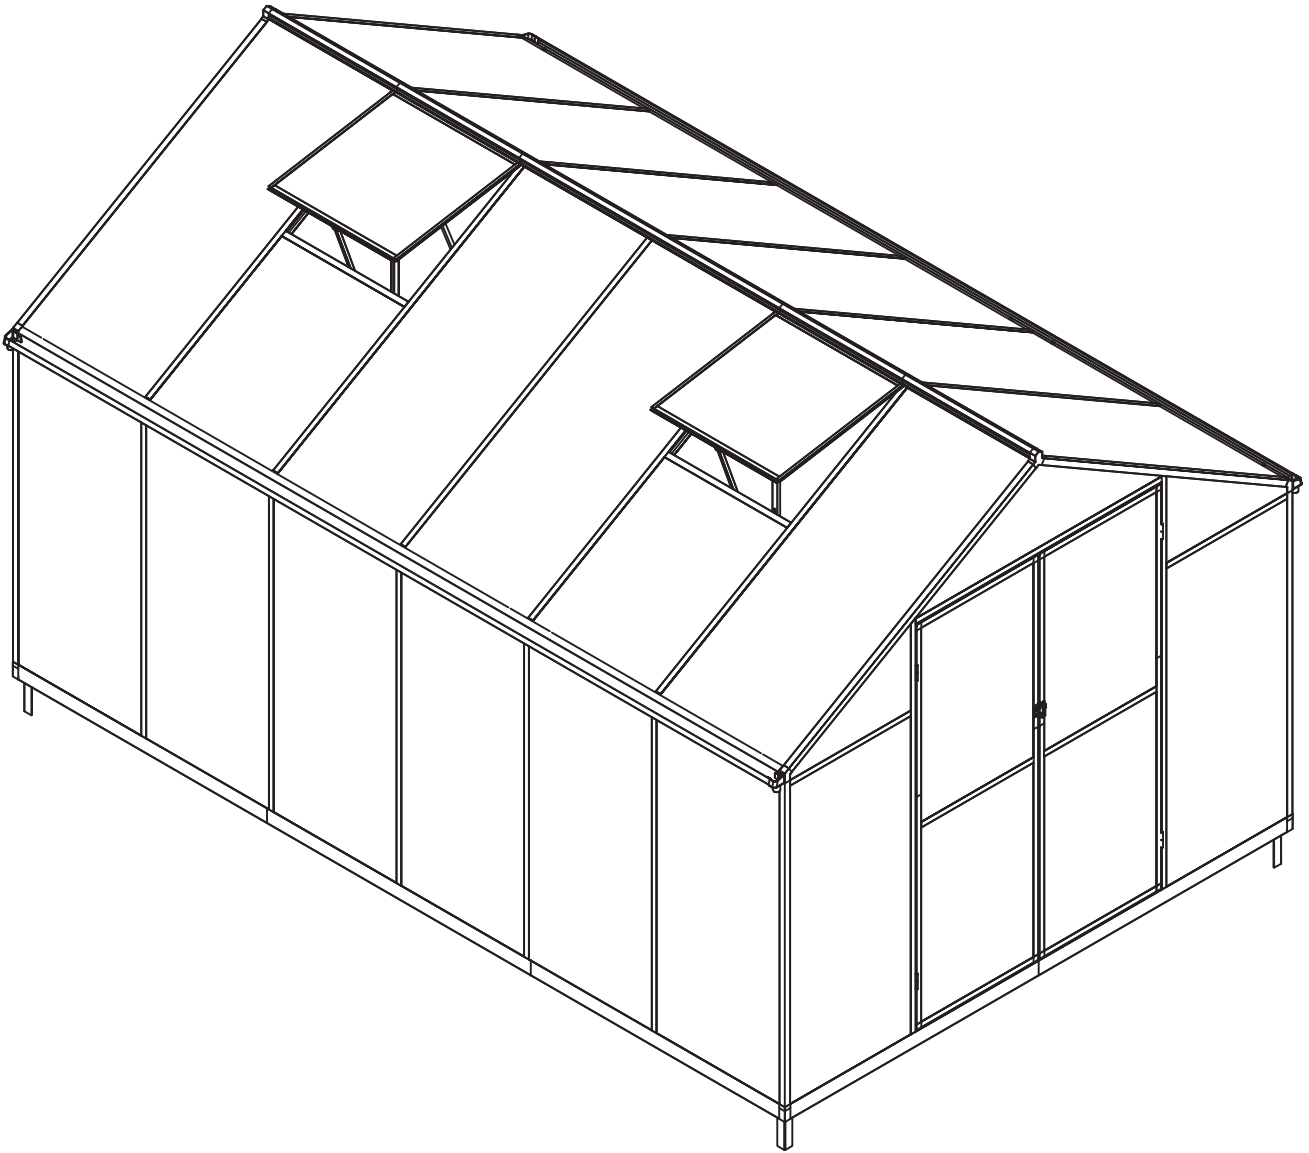

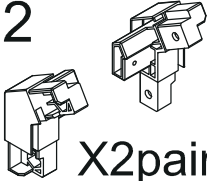
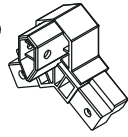


















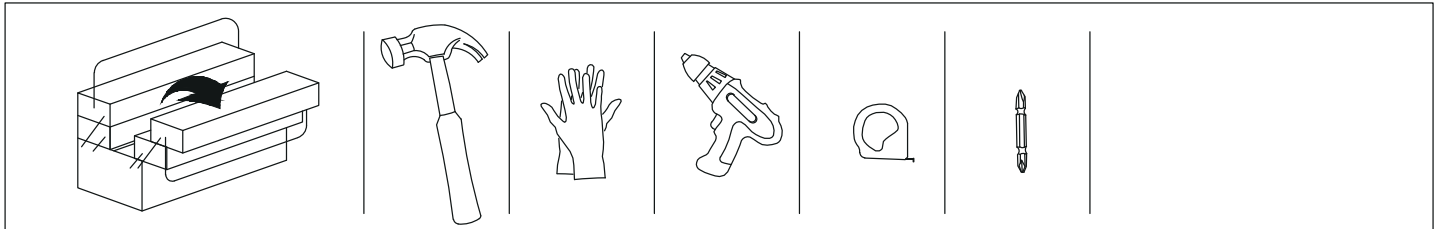






3620x2470x2130mm

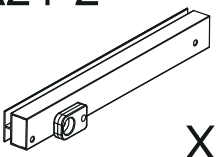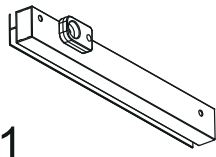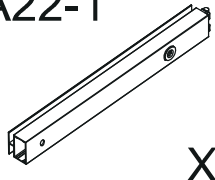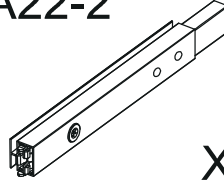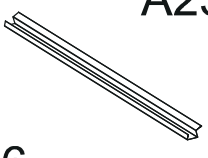


				A1-1 X4	A1-2 X4
A2 X2	A3-1 X2	A3-2 X2	A3-3 X2	A4-1 X2	
A4-2 X1	A5 X4	A6-1 X2	A6-2 X2	A7-1 X1	
A7-3 X1	A7-2 X1	A7-4 X1	A8 X1	A9 X1	
A10-1 X2	A10-2 X2	A11-1 X1	A11-3 X1	A11-2 X1	
A11-4 X1	A12 X6	A14 X10	A15 X6	A16 X2	
A17-1 X1	A17-2 X1	A17-3 X1	A17-4 X1	A18-1 X1	
A18-2 X1	A19-1 X1	A19-2 X1	A20 X2	A21-1 X2	


A21-2  X1	A21-3  X1	A22-1  X1	A22-2  X1	A23  X6
A24  X4	A25  X5	A26  X10	A27  X6	A28  X4
A29  X2	A31  X8	A30  X2	A32  X2	A33  X10

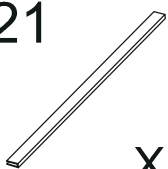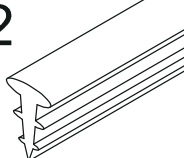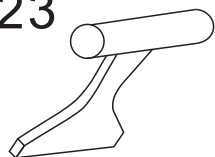
	H1  X4	H2  X2pairs	H3  X2	H4  X4pairs
H5  X2pairs	H6  M6x30 X34	H7  X1	H8  M6x12 X81	H9  M6 X50
H10  X4	H11  4x8 X60	H12  5x10 X16	H13  5x16 X18	H14  X1
H15  X1	H16  X2	H17  X4	H18  M6x20 X32	H20  M4X40 X2
H21  X15	H22 	H23 		

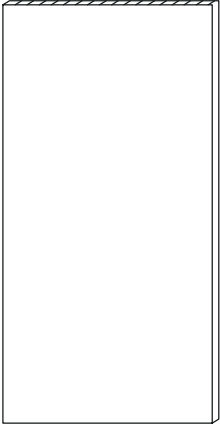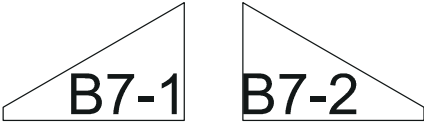

	B1	6PCS
	B2	12PCS
	B3	2PCS
	B4	4PCS
	B8	2PCS
	B9	10PCS
	B7-1	2PCS
	B7-2	2PCS
	B6	2PCS
	B5	2PCS


The white film
is inside

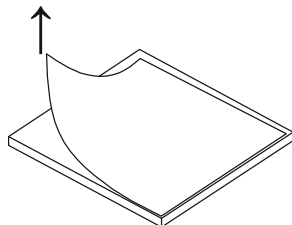


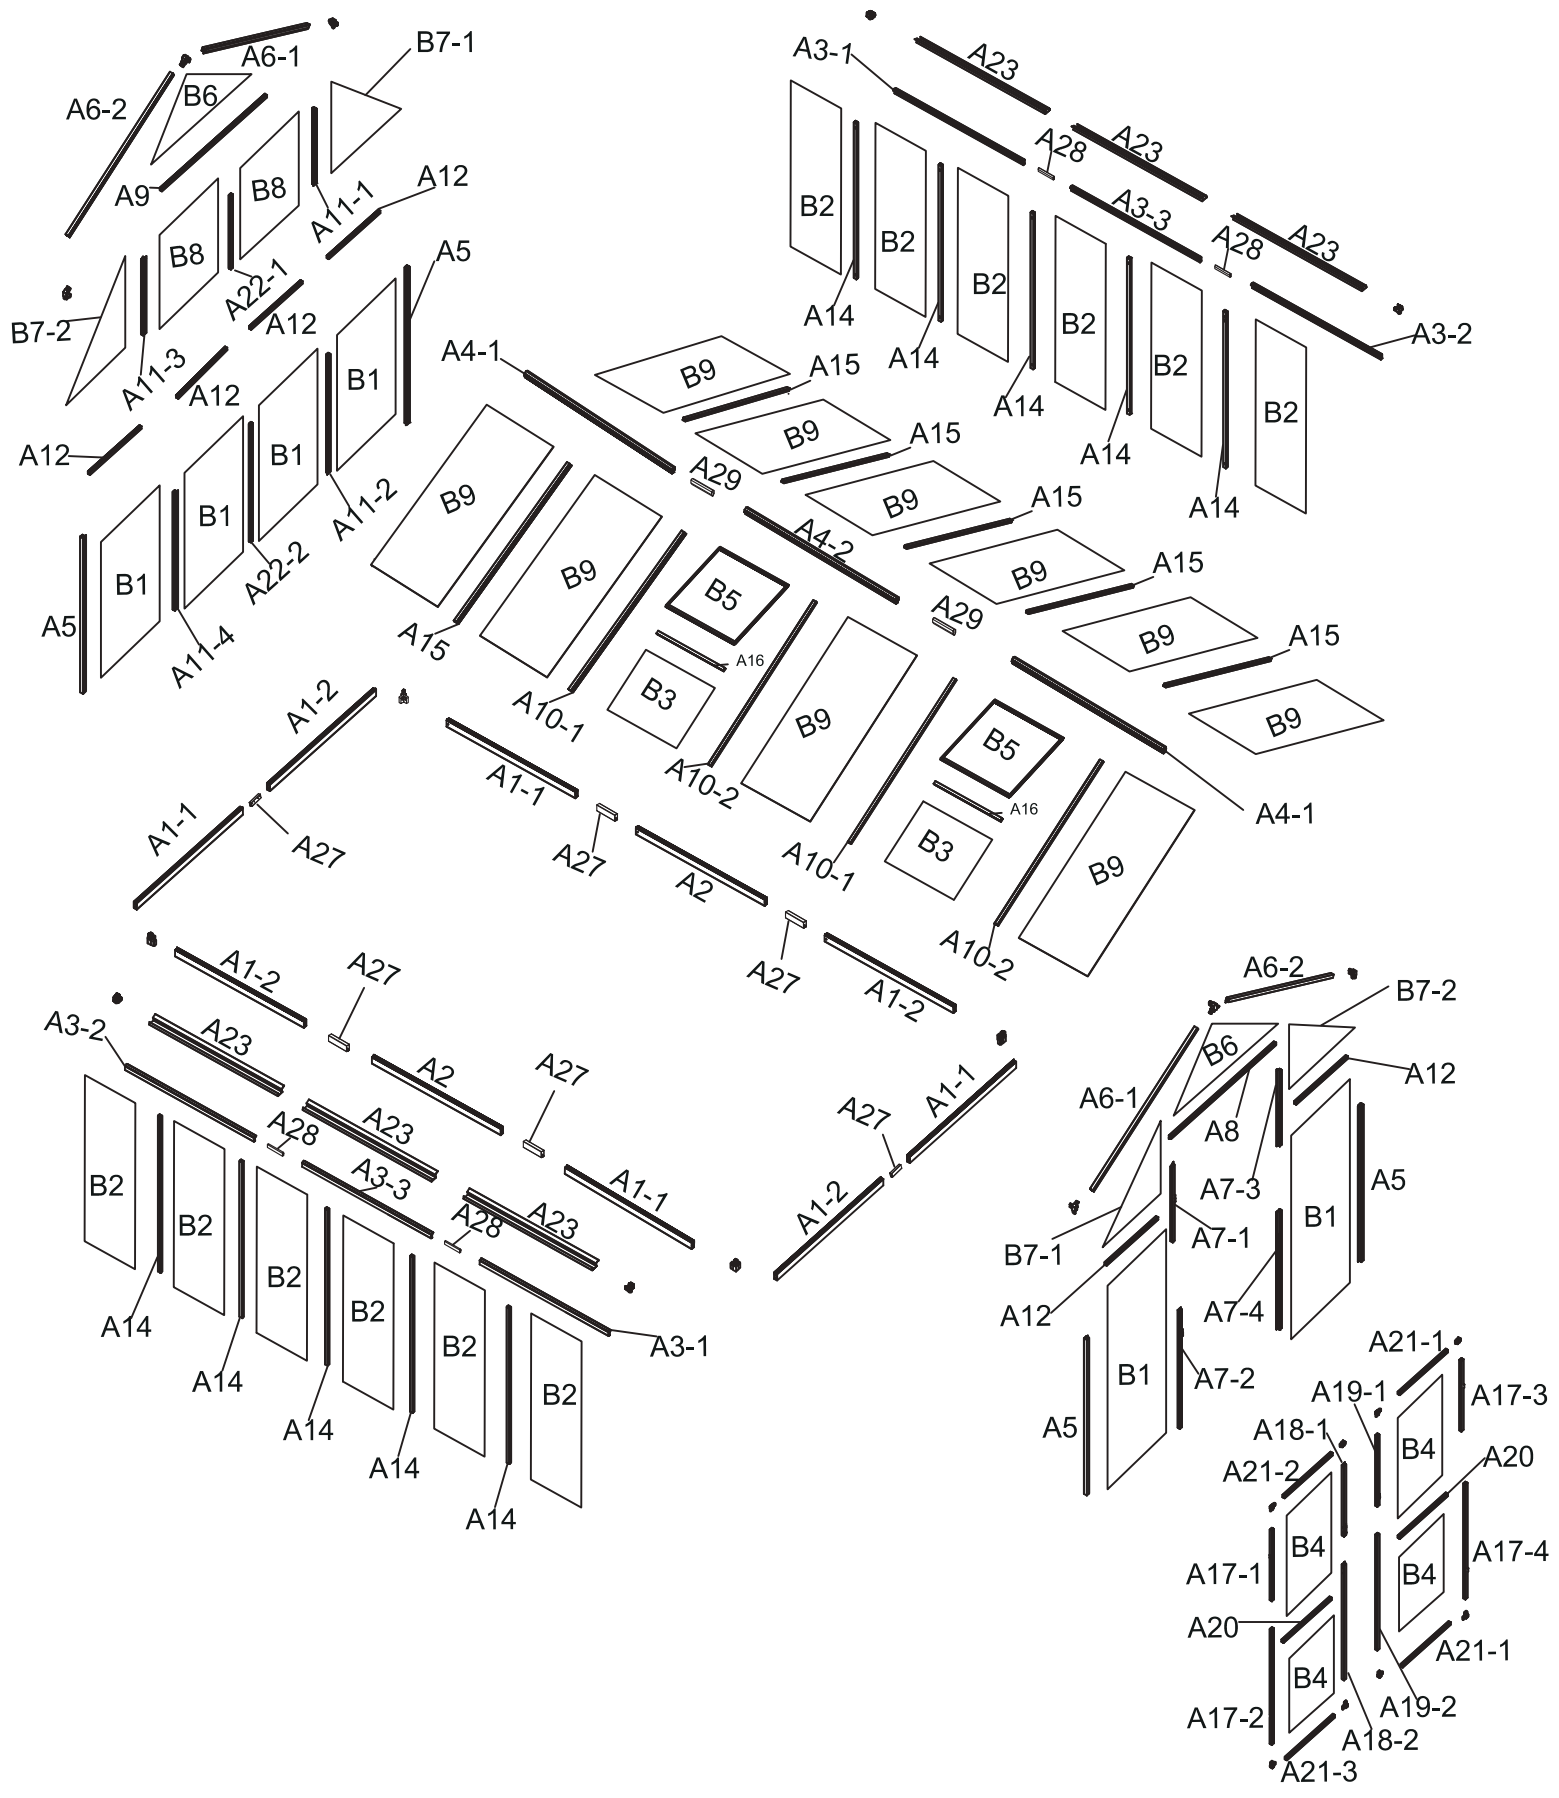

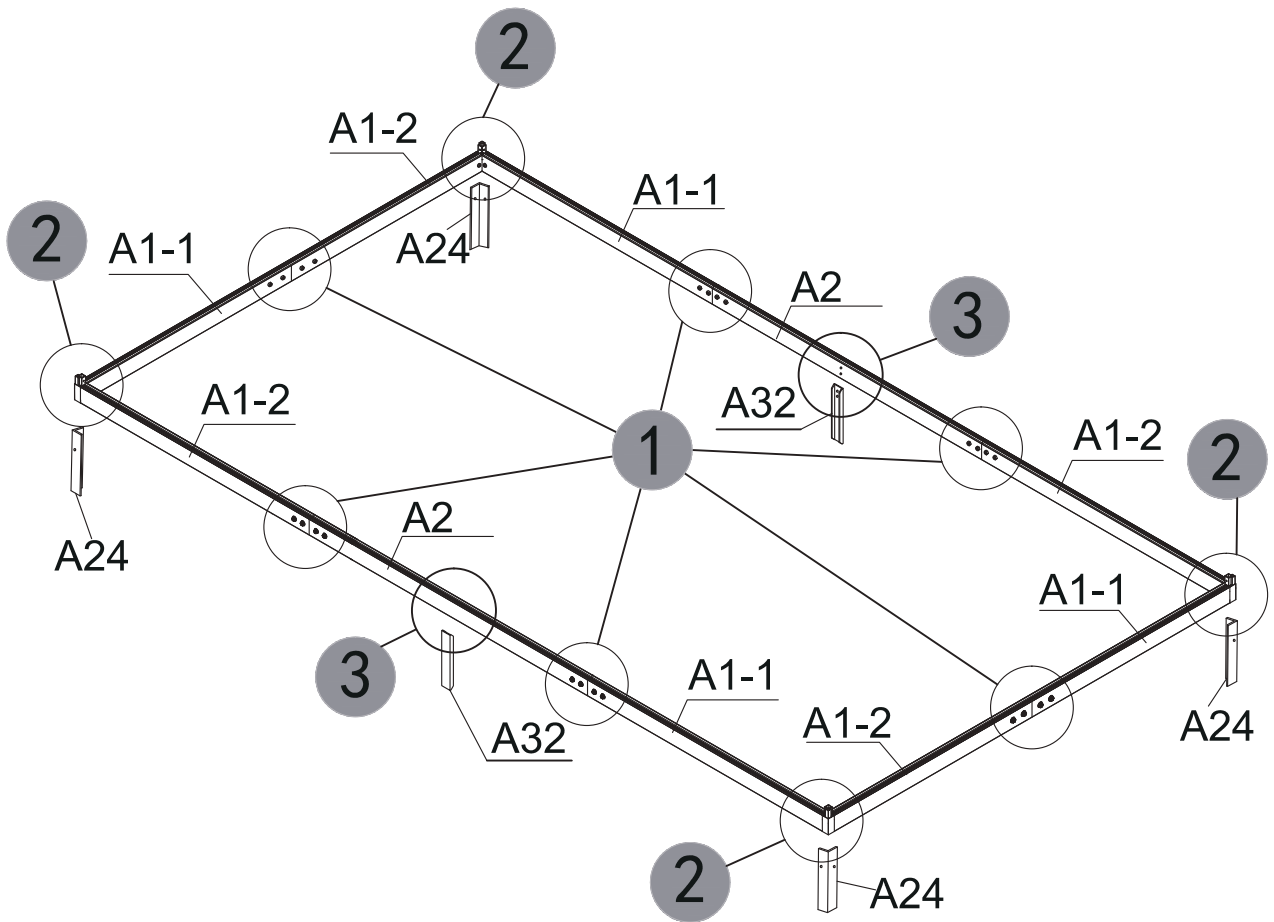


H6  M6x30 X24	H9  M6 X24
--	---

H1  X4
--

H8  M6x12 X8

H8  M6x12 X4

1 X6

Diagram showing the assembly of the central support structure (1) to the frame rails. It involves using nuts (H9) and bolts (H6) to secure the structure to the rails.


2 X4

Diagram showing the assembly of the corner joints (2) to the frame rails. It involves using corner connectors (H1) and bolts (H8) to secure the joints to the rails.

3 X2

Diagram showing the assembly of the side joints (3) to the frame rails. It involves using bolts (H8) and pins (A32) to secure the joints to the rails.

H8

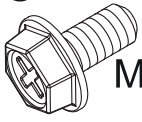

M6x12
X4

A7-3
(A11-3)




4

A7-1
(A11-1)







A7-4
(A11-4)

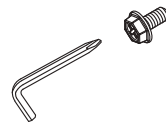


A7-2
(A11-2)

H8

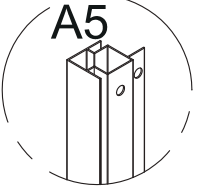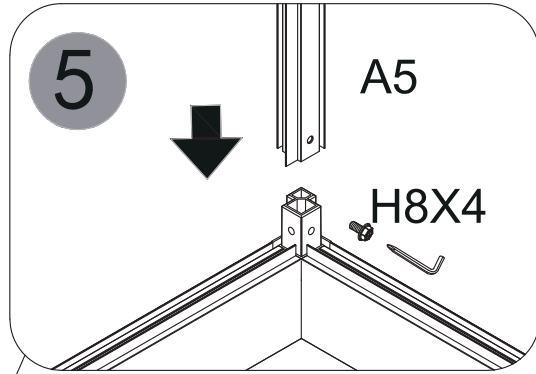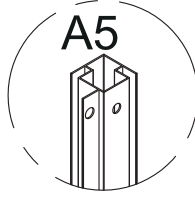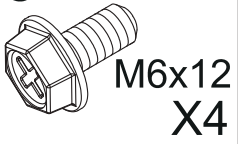

A5

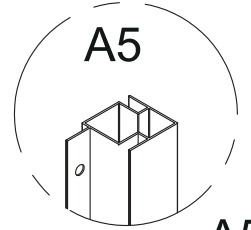


A5

A5

A7-3

B1

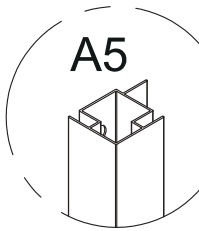

A5

A5

A7-1


A7-4

B1

A7-2

7



6

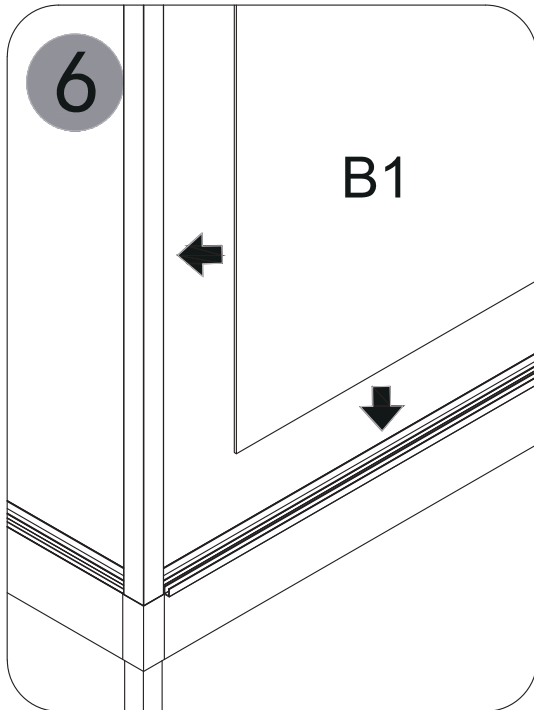

6

B1

6

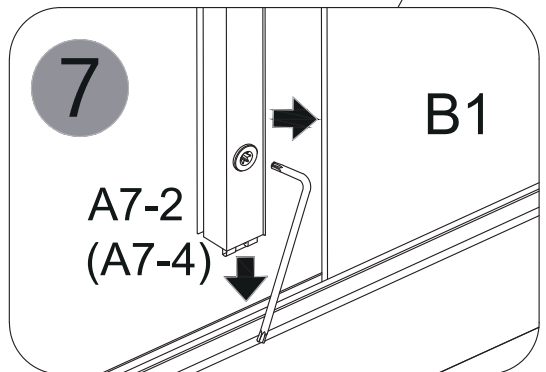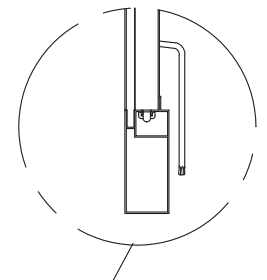


7

B1


A7-2
(A7-4)

H2

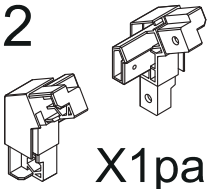

X1pair

H3







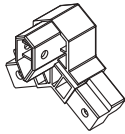


X1

H8



M6x12
X8

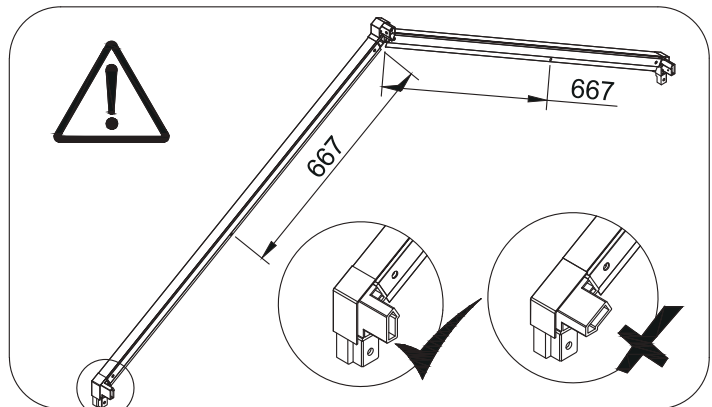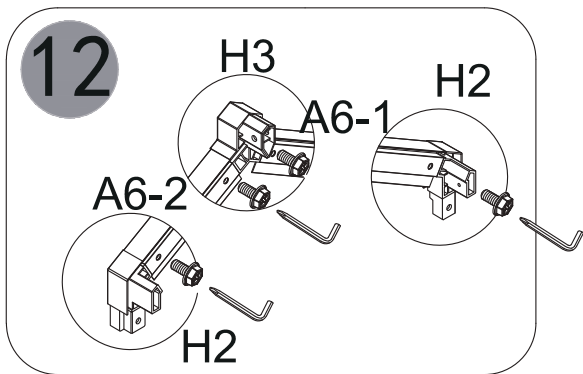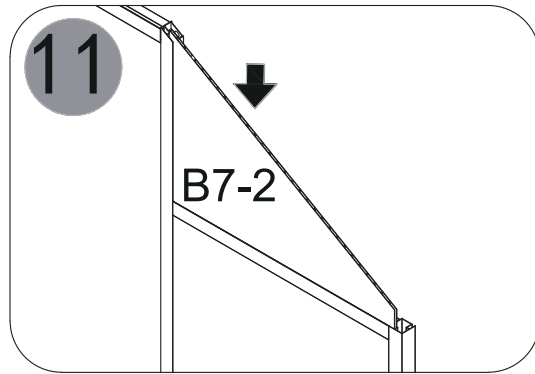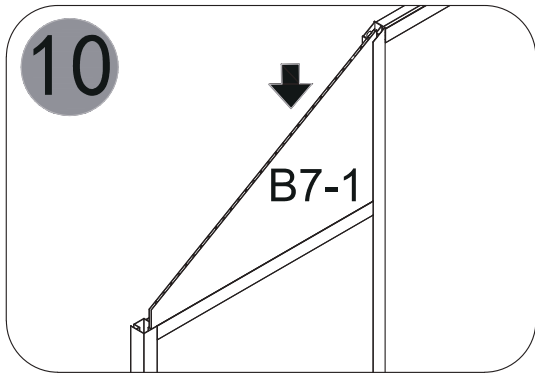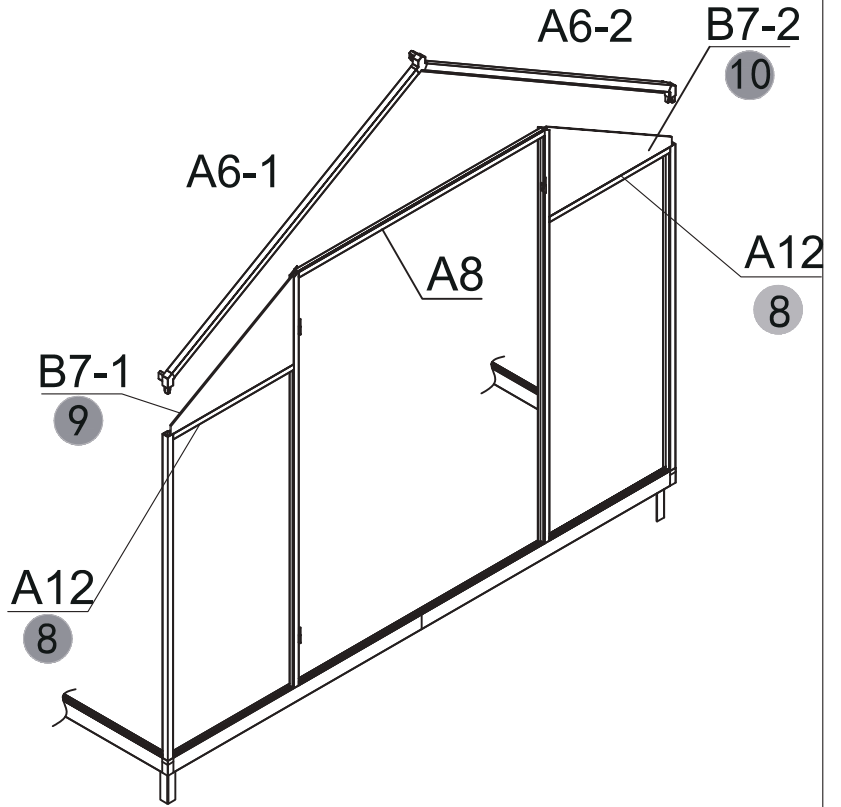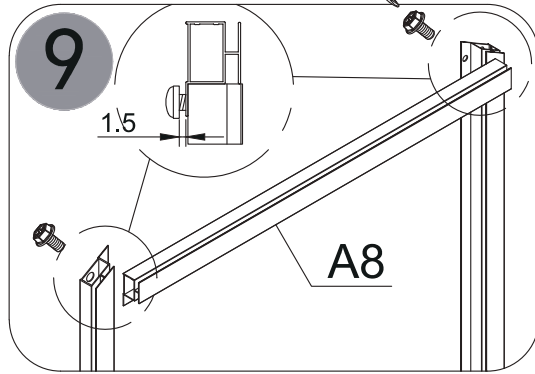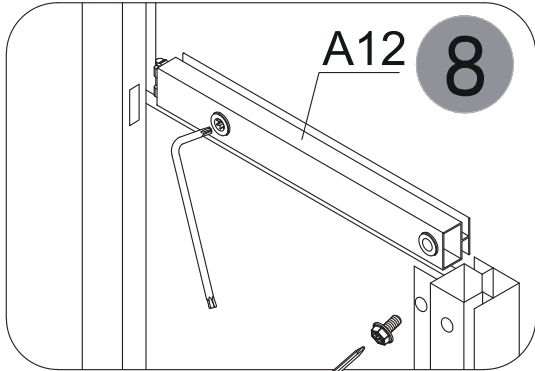


H8




M6x12
X4



13

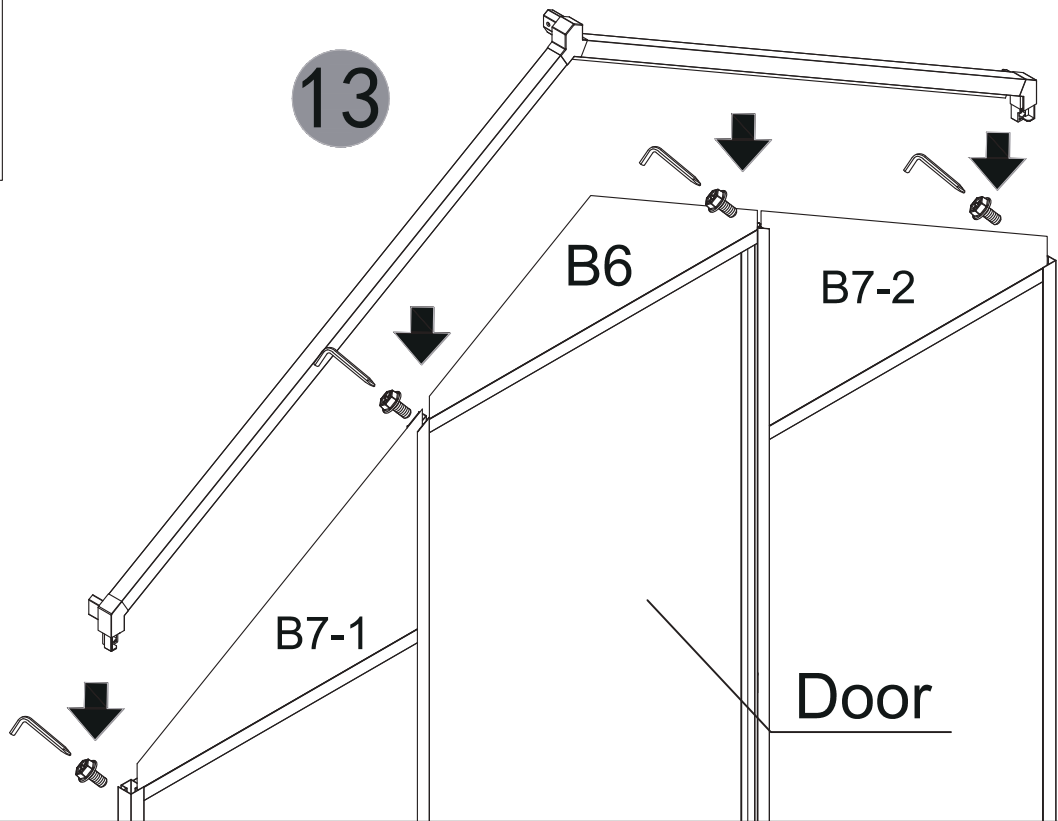


14

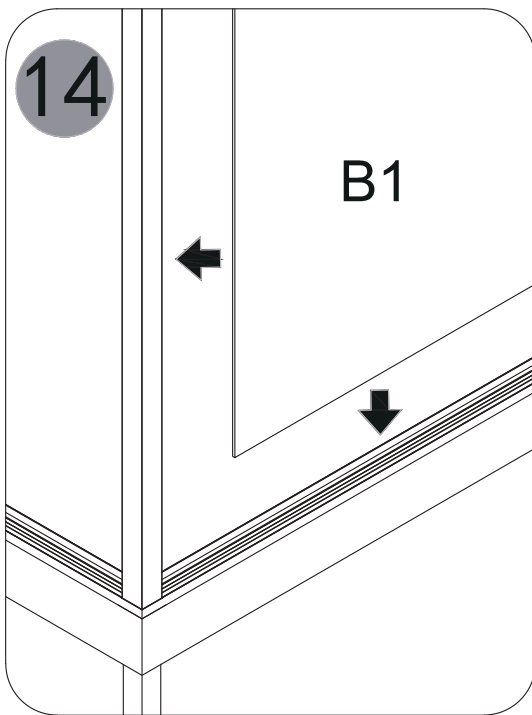







15

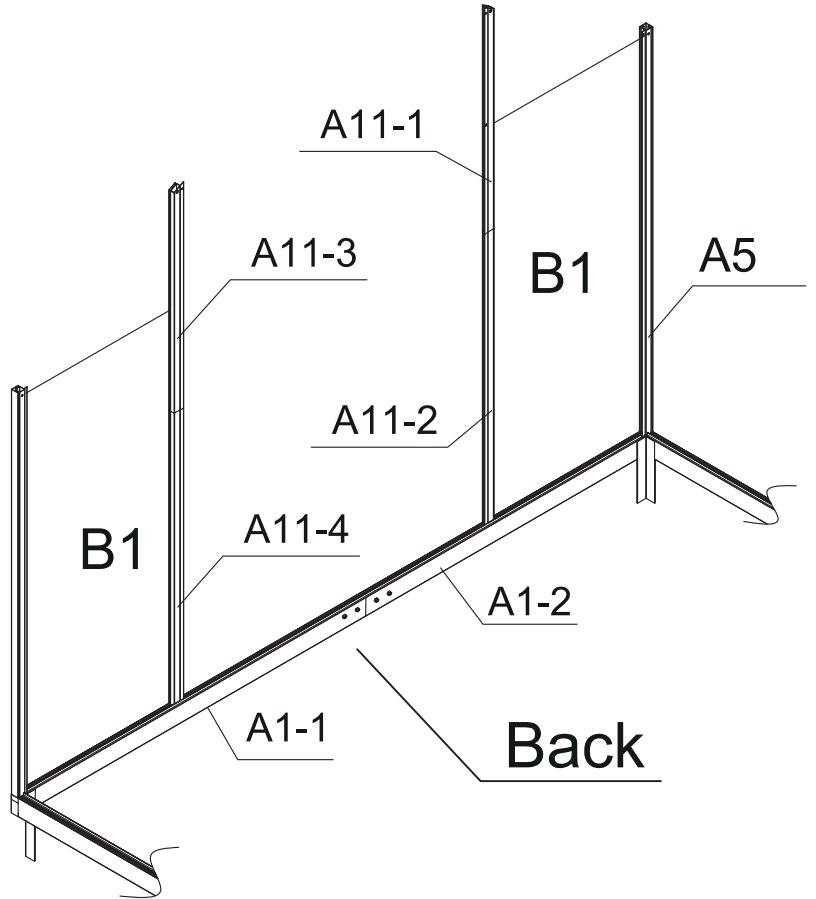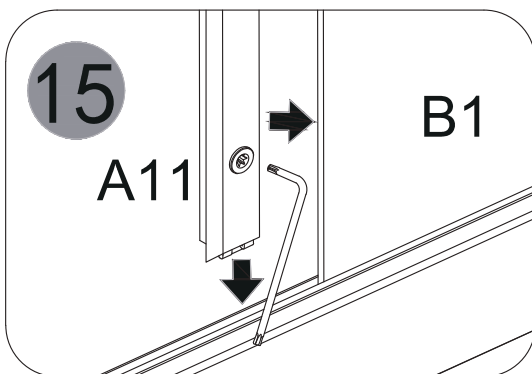


H8

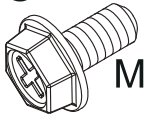

M6x12
X5

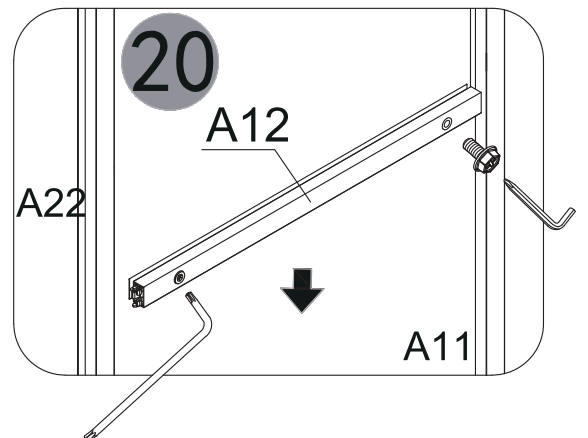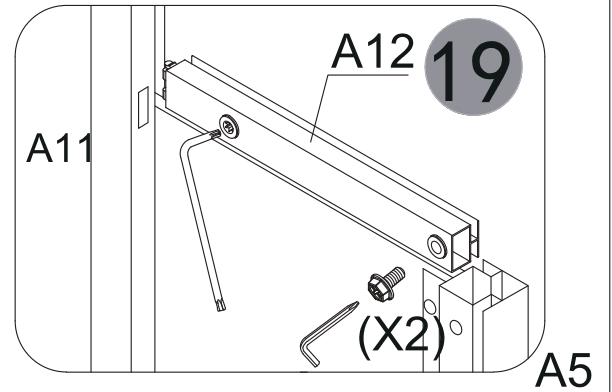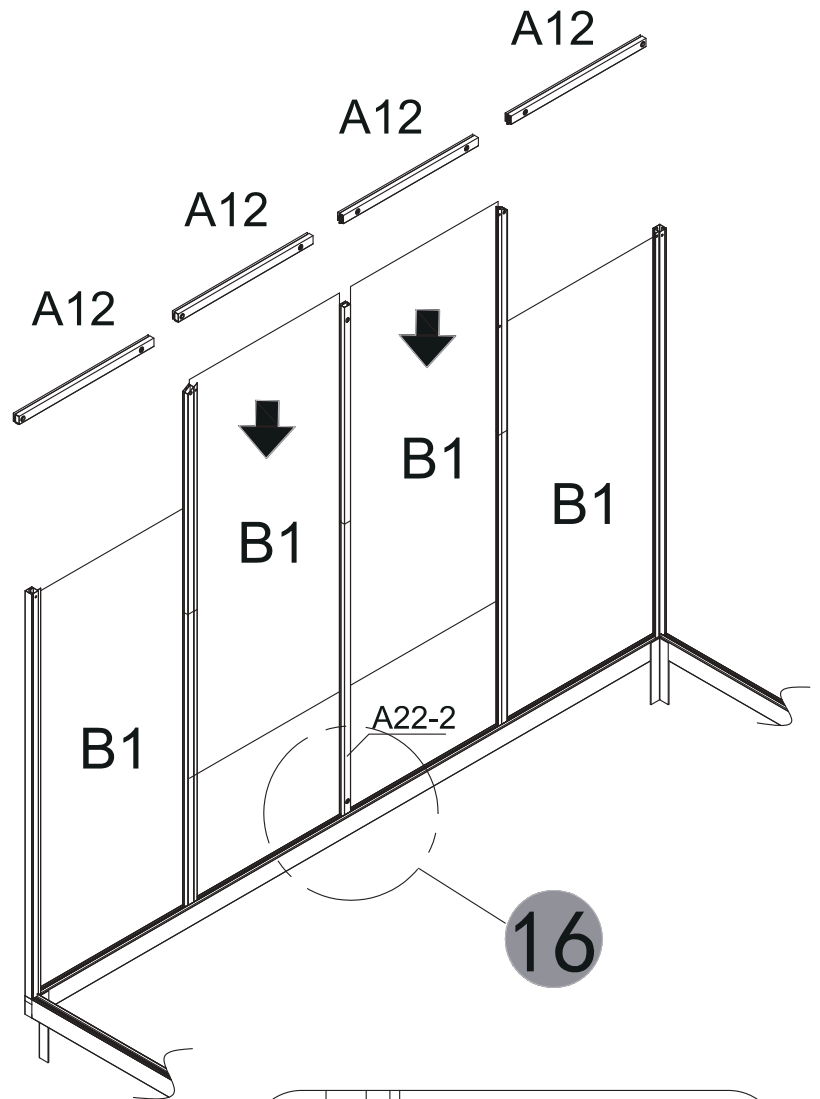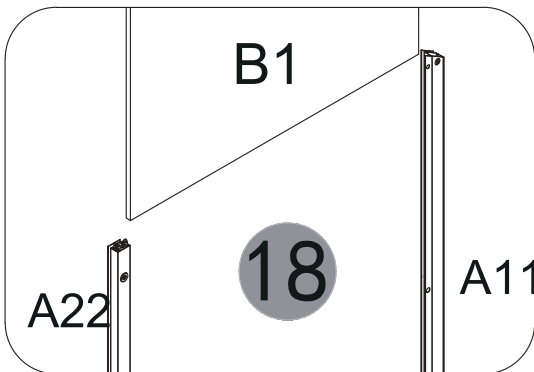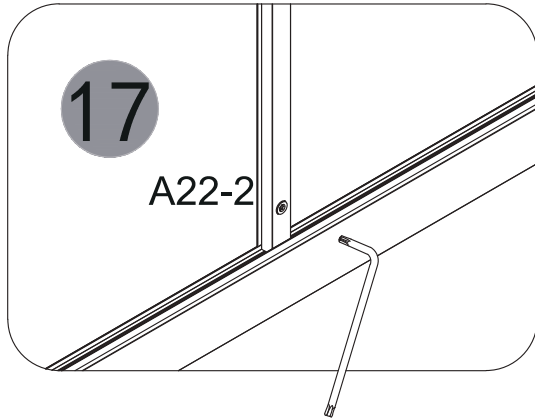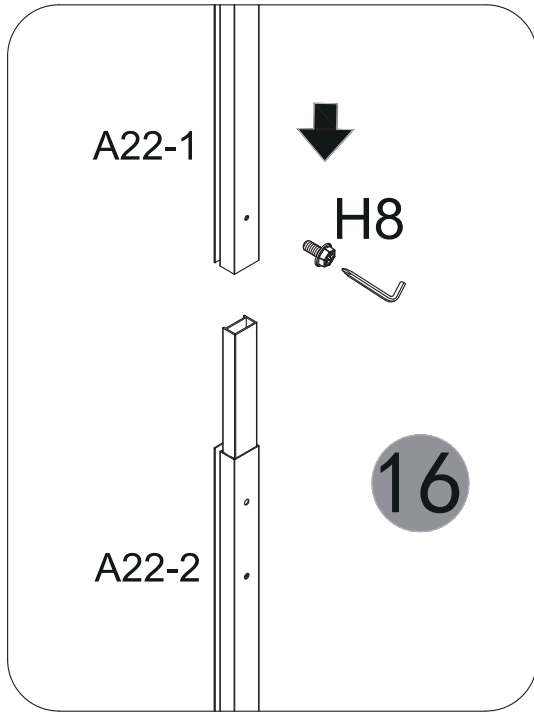


H2

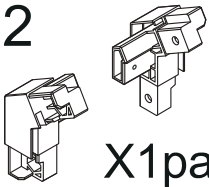


X1pair

H3




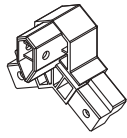


X1

H8



M6x12
X10

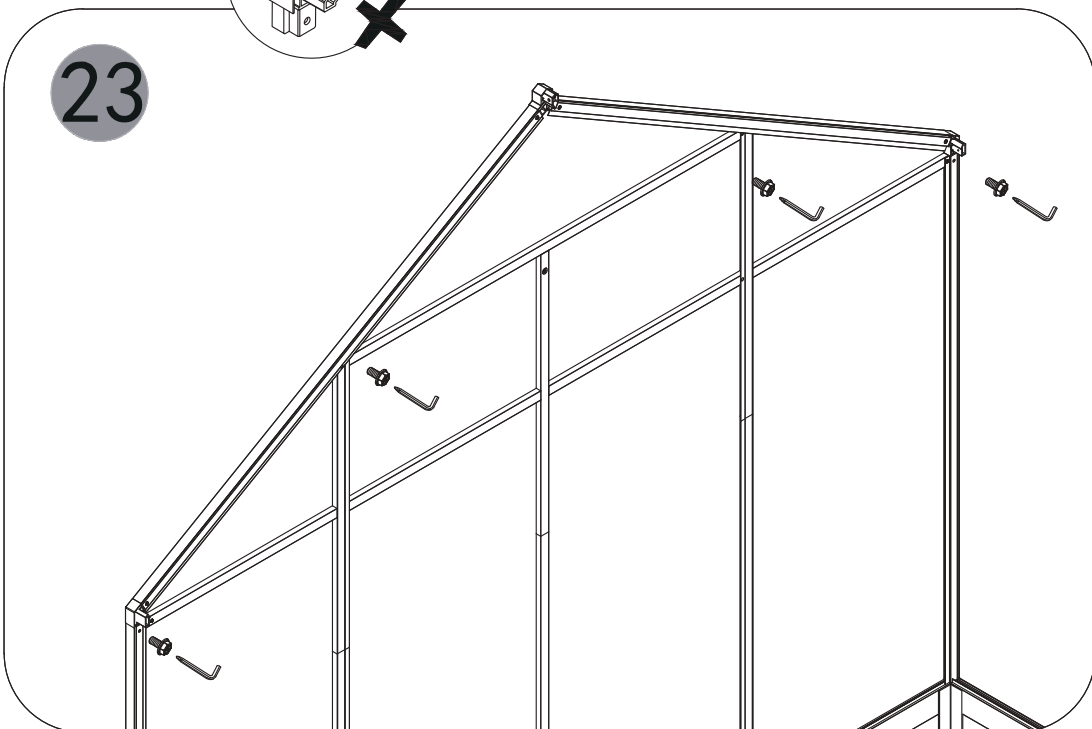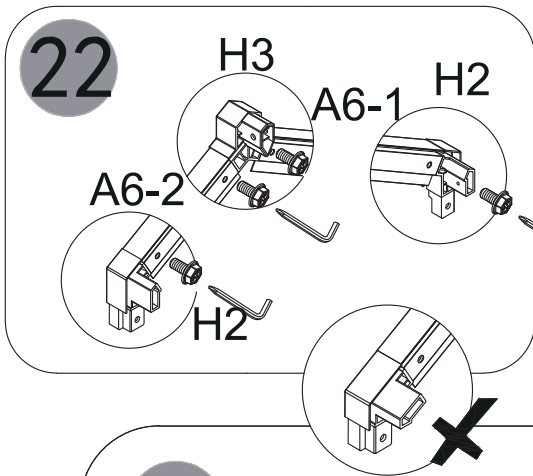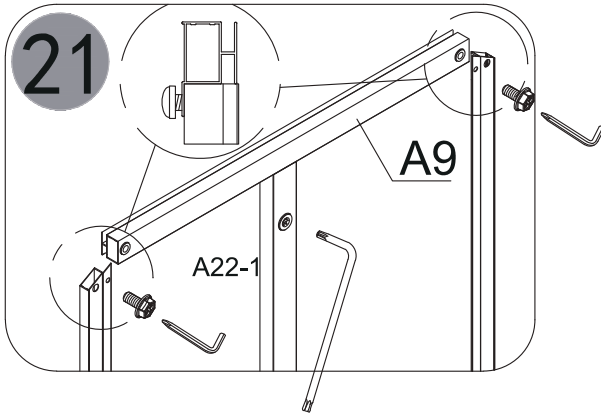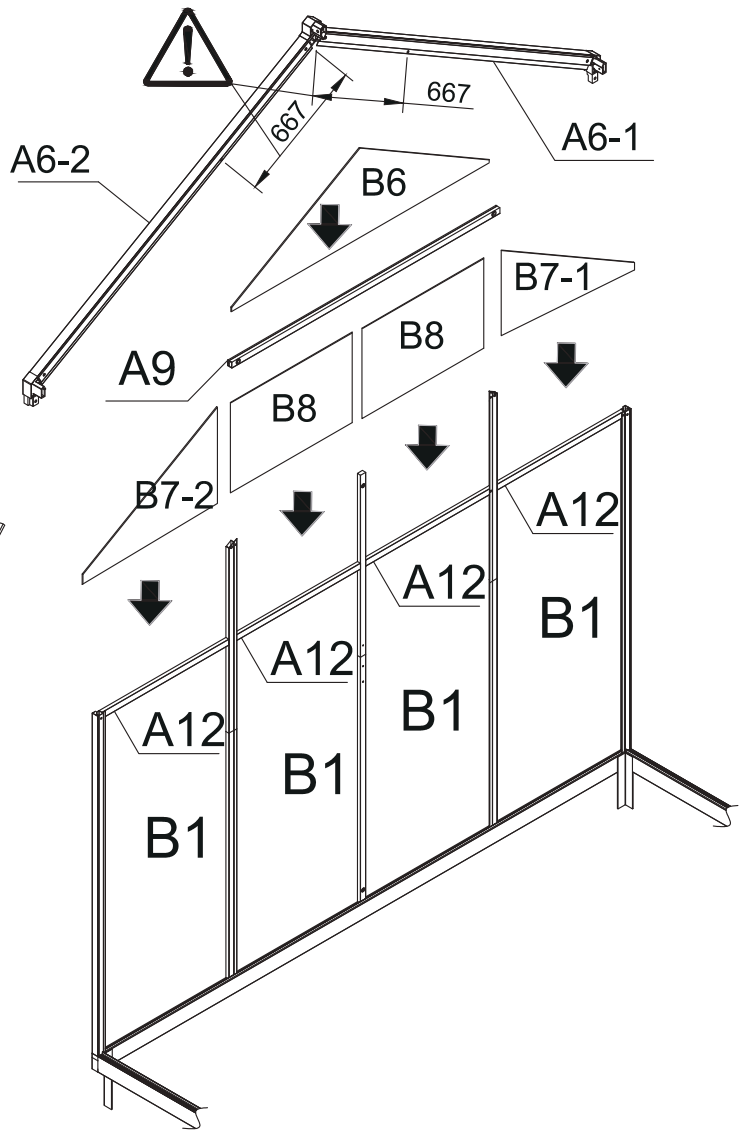


H6



M6x30
X8

H18

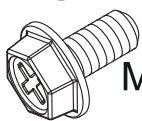


M6x20
X16

H9



M6
X24

H17



X4

24

A4-1

A29



A4-2

A29



A4-1



A3-1

A28



A3-3

A28



A3-2



25

(X2)




H18

H18

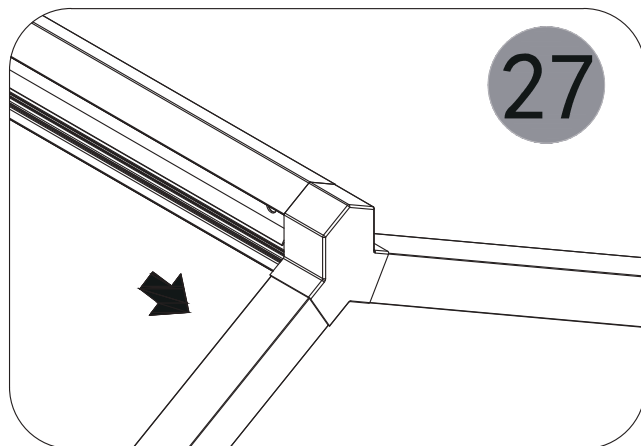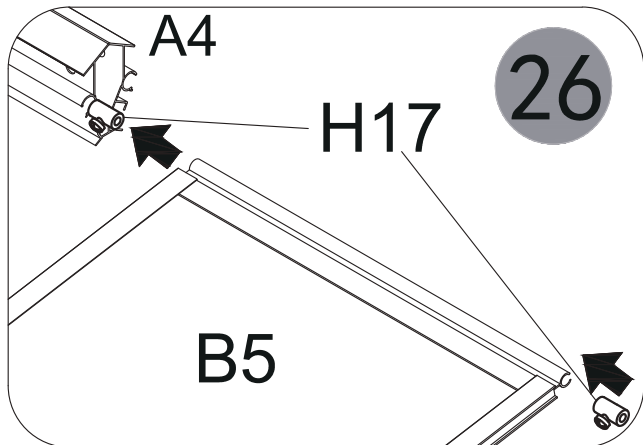


H12



5x10

X4

H6



M6x30



X2

H9




M6




X2

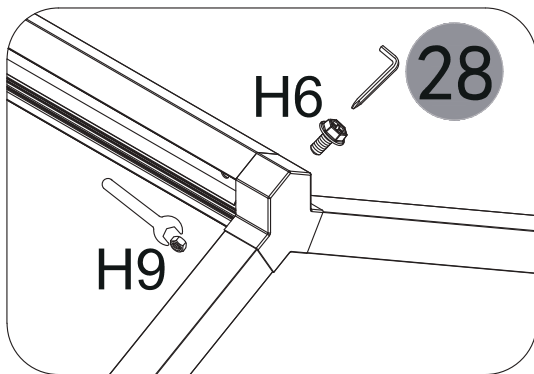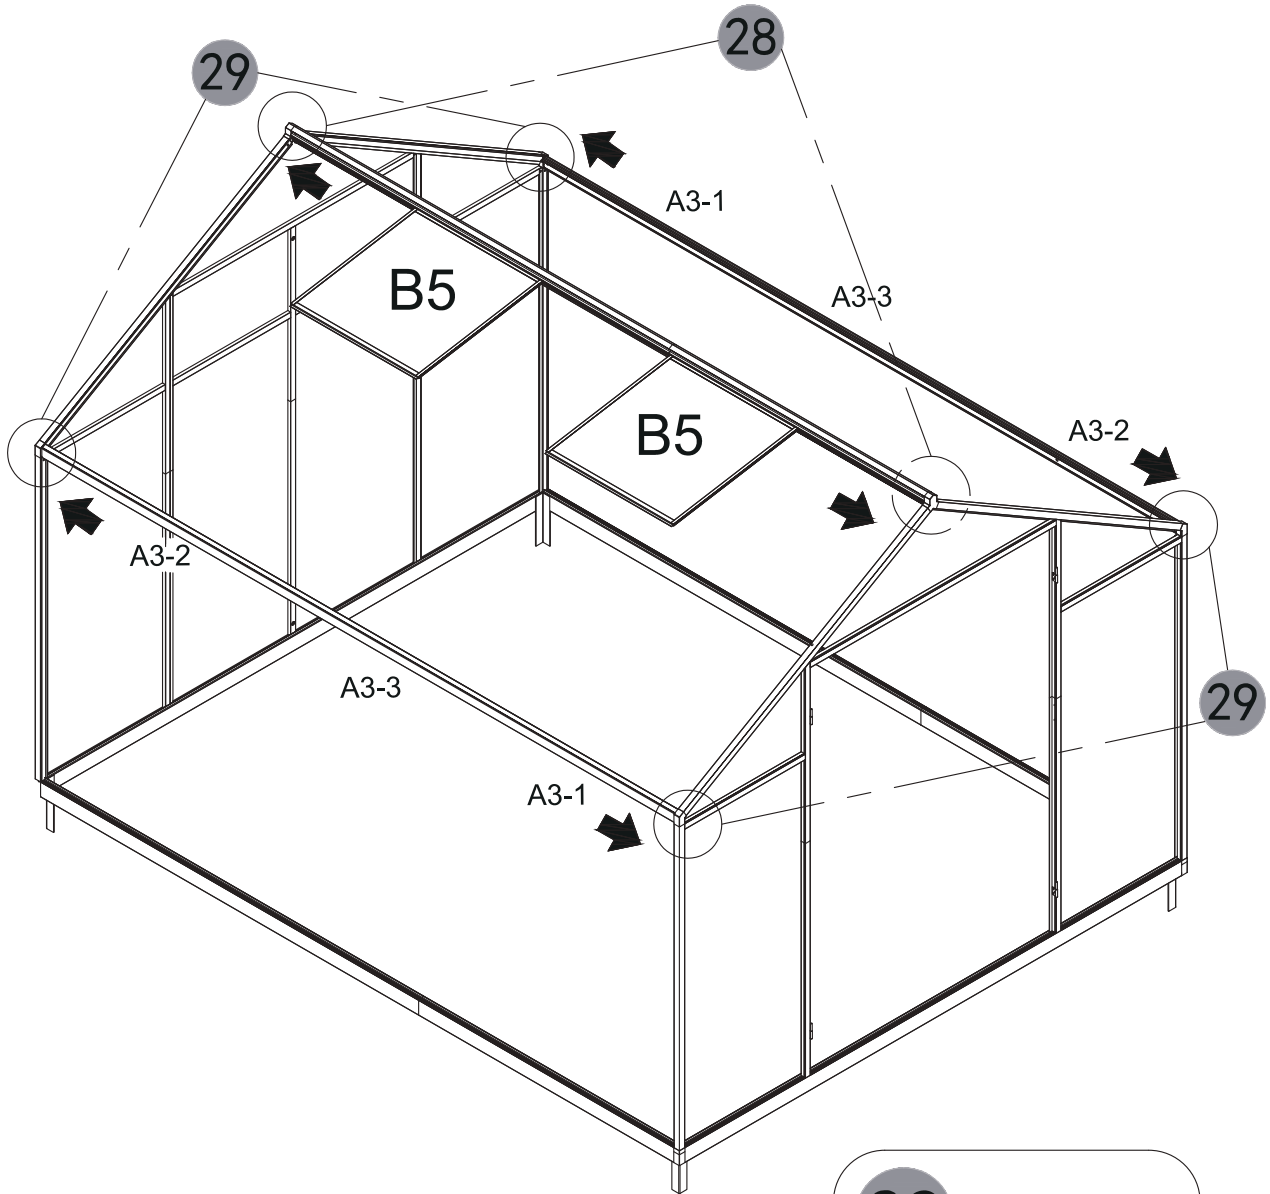


X2

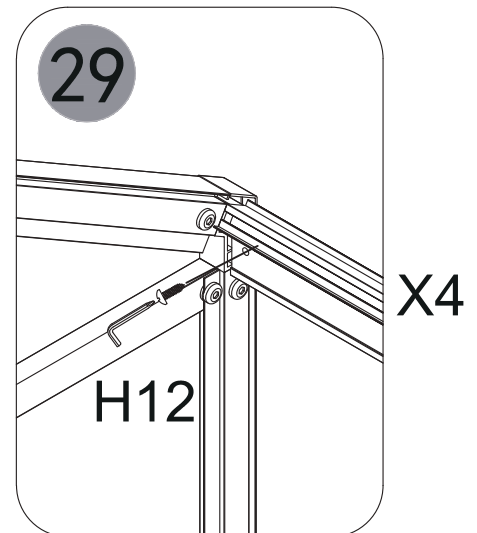





X4

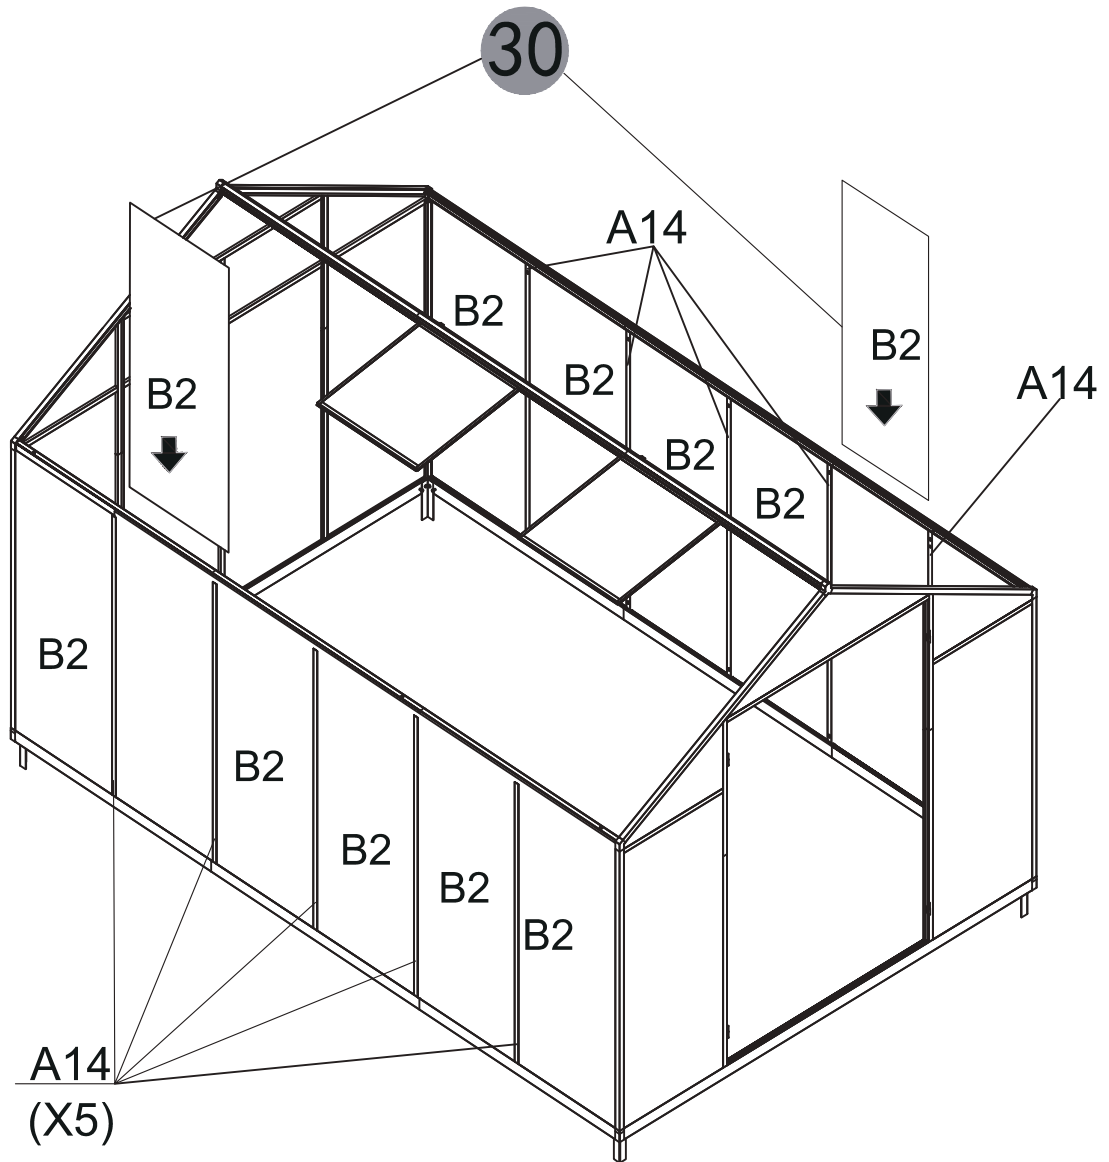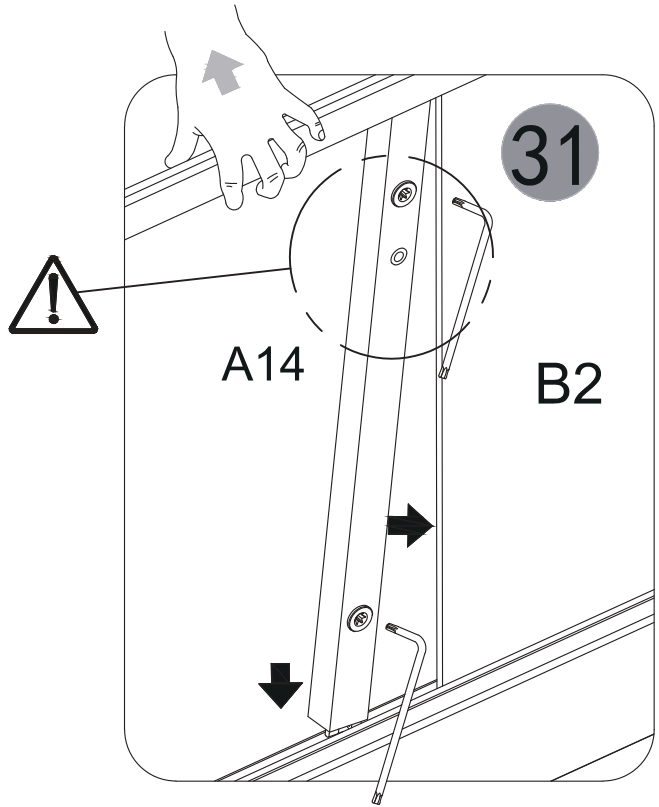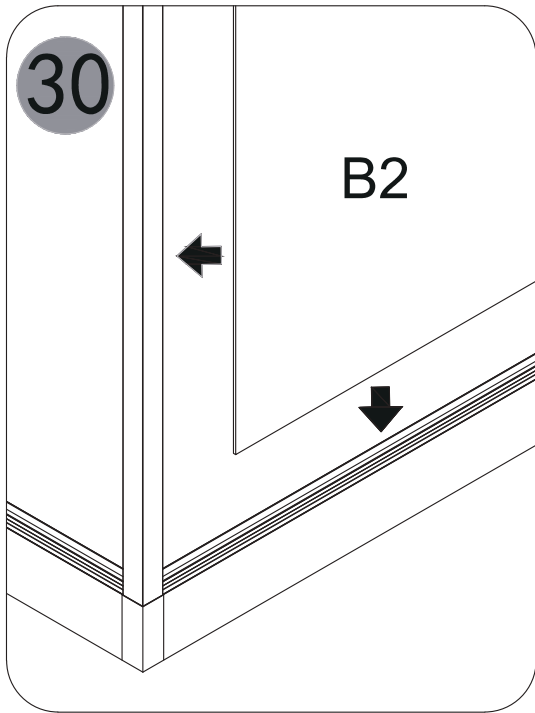


H8


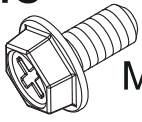


M6x12
X4

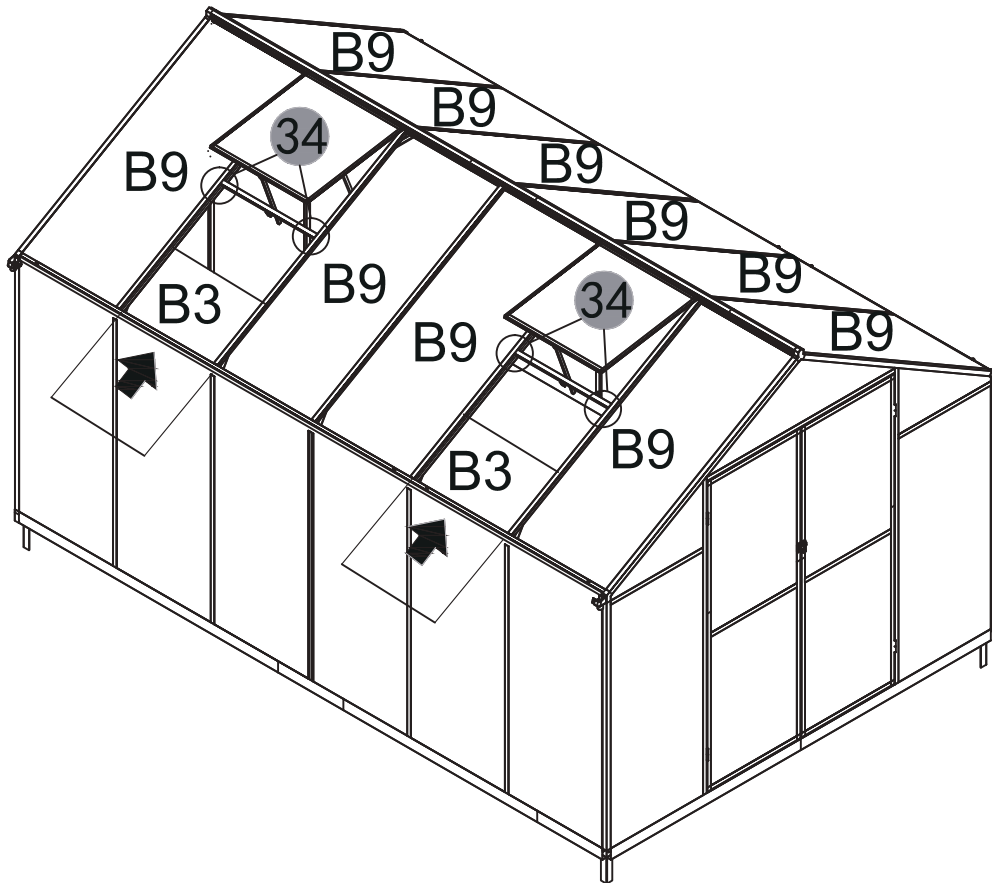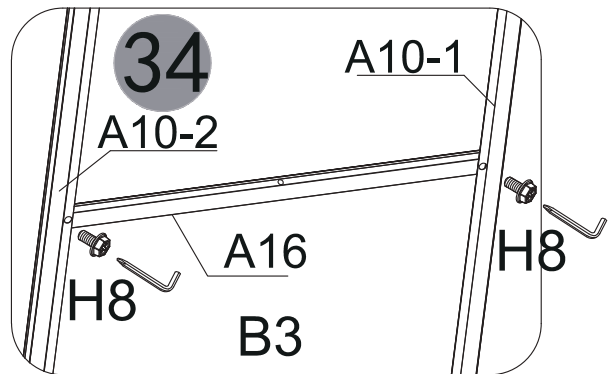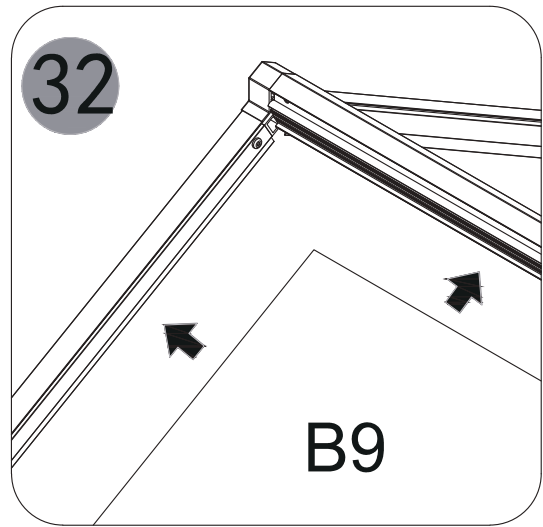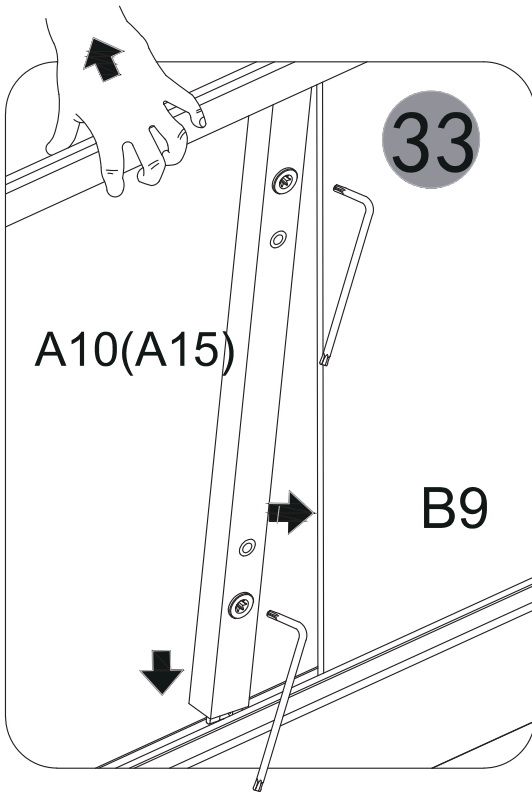

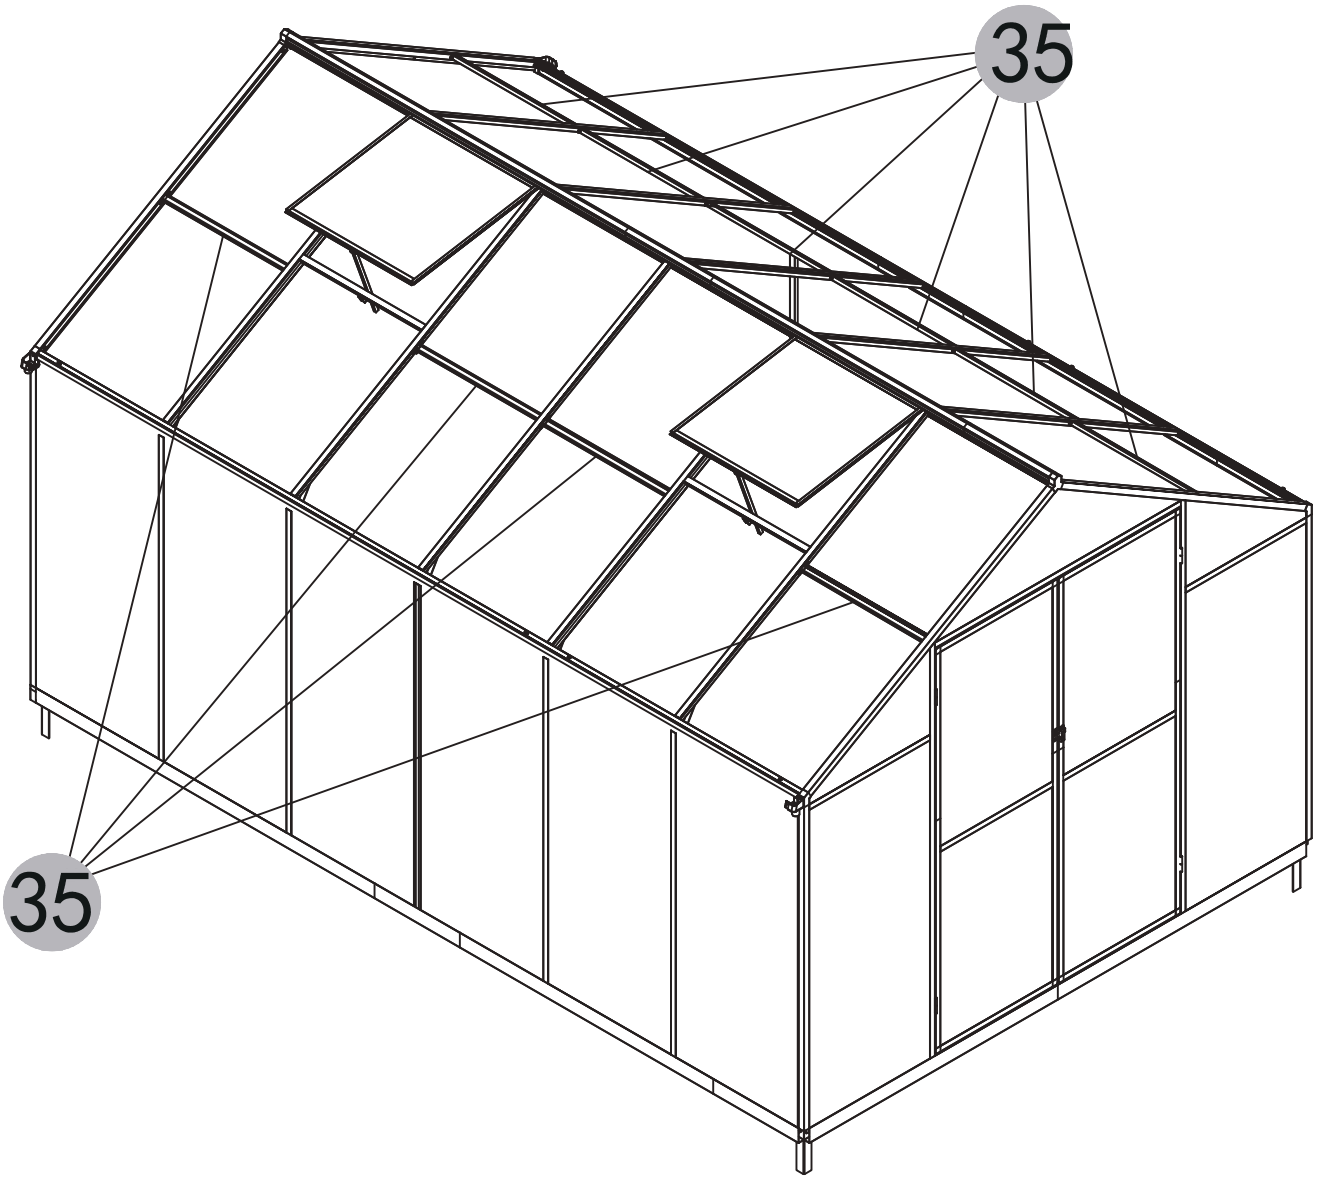

H11

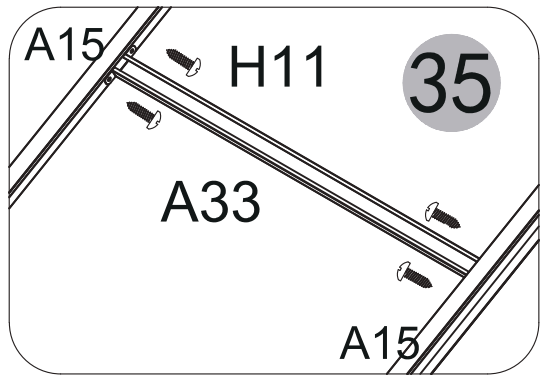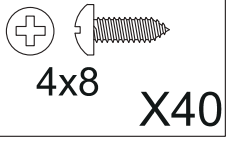


H5




X2pairs

H10



X4

H13













5x16 X18






H12




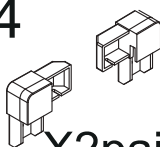
5x10 X4

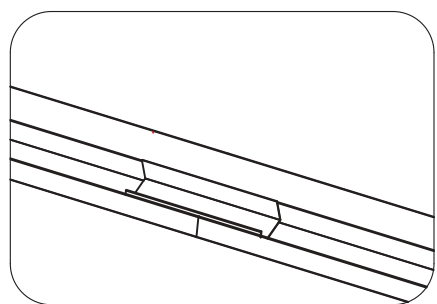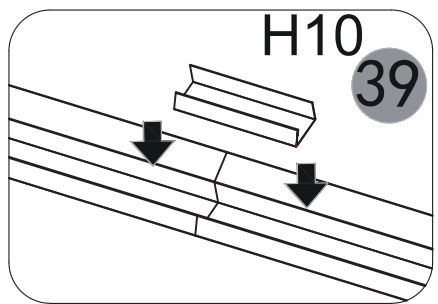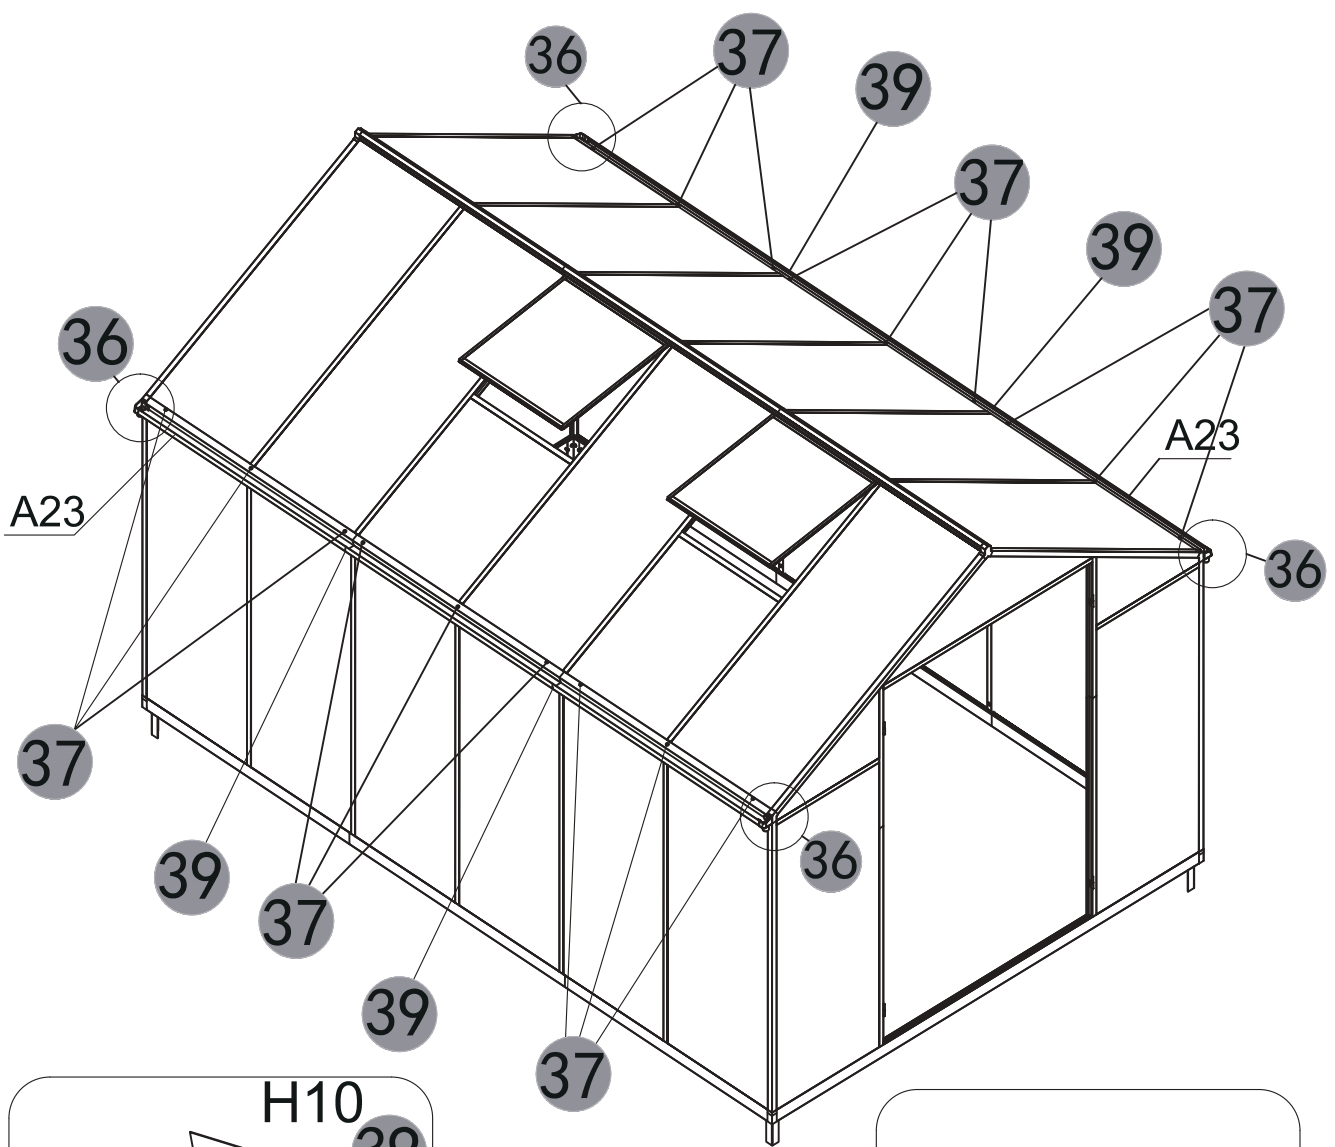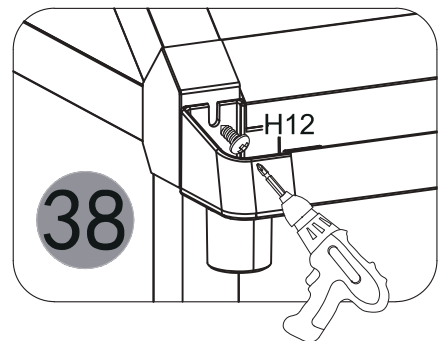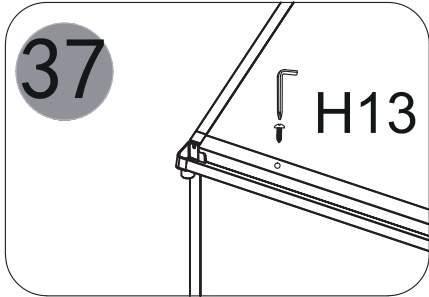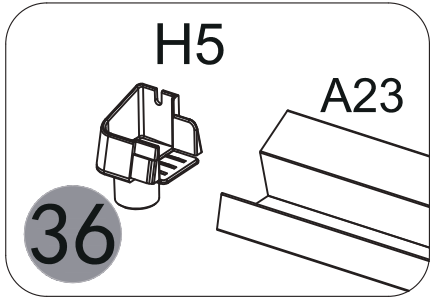

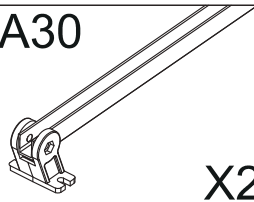
<p>H11</p>  <p>4x8 X4</p>	<p>A30</p>  <p>X2</p>	<p>H16</p>  <p>X2</p>	<p>H20</p> <p>M4X40</p>  <p>X2</p>
---	---	---	---

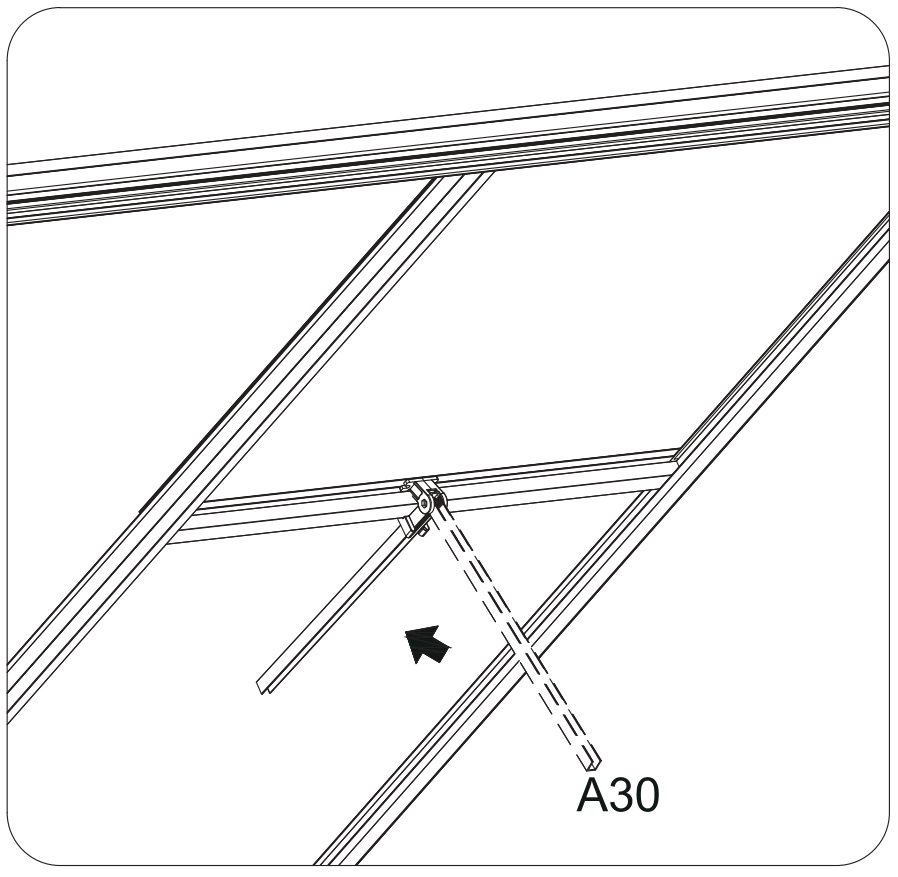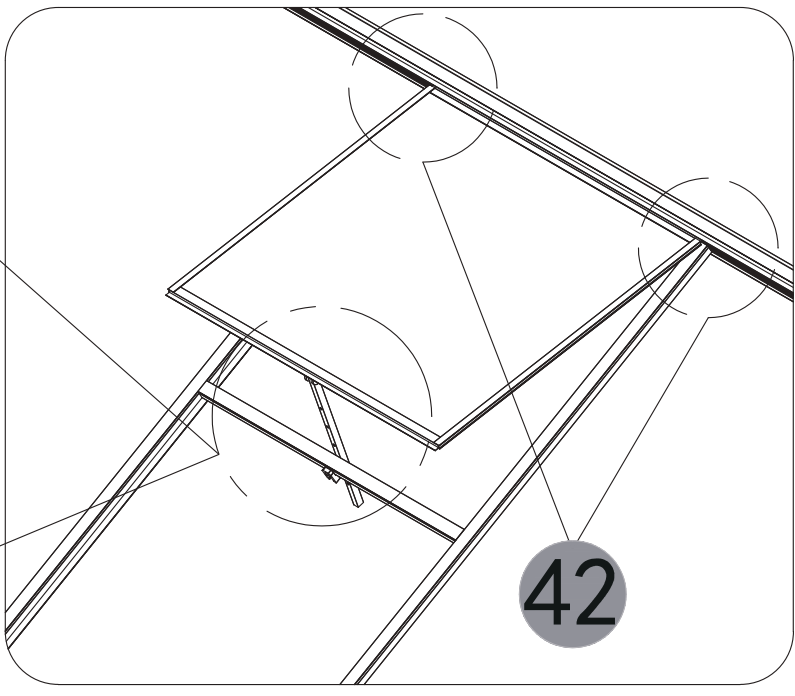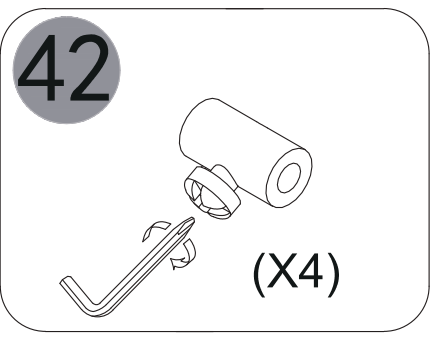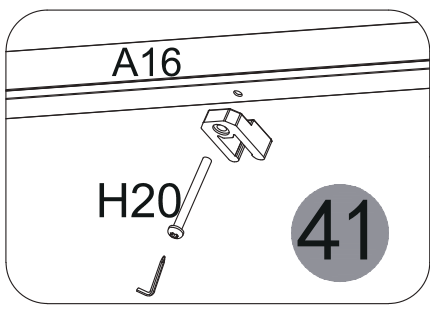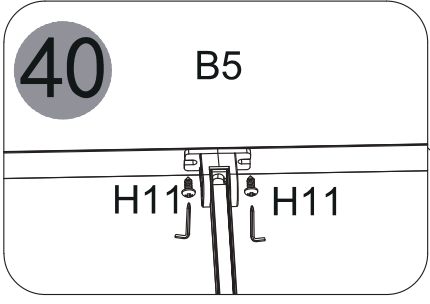

H12
 5x10 X8


H4
 X2pairs

H11
 4x8 X8

A17-1
(A17-3)
(A19-1)

H12
(X6)


A17-2
(A17-4)
(A19-2)

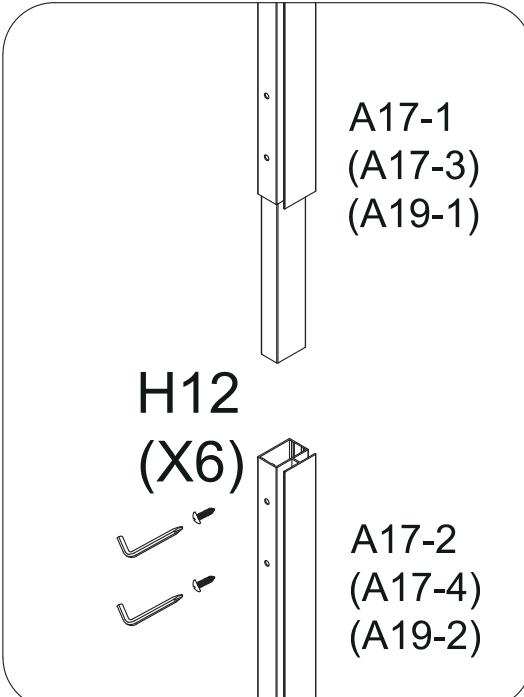

A18-1

H12
(X2)

A18-2

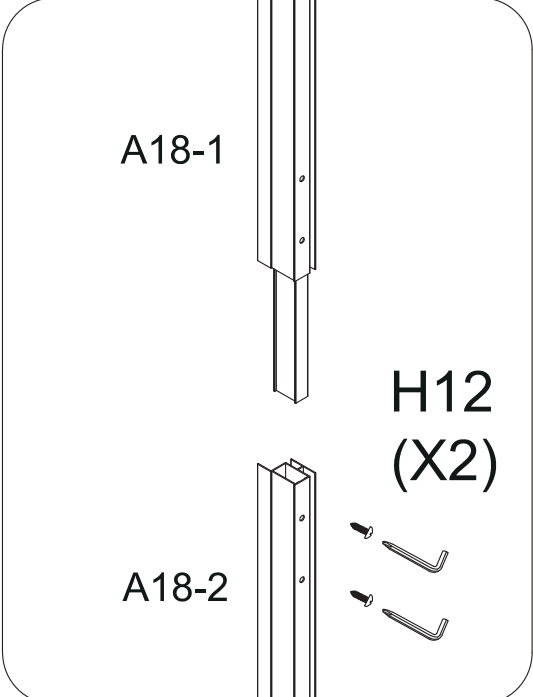

A21-1

A19-1

44

B4

A17-3


A20

A17-4

A19-2


B4

A21-1

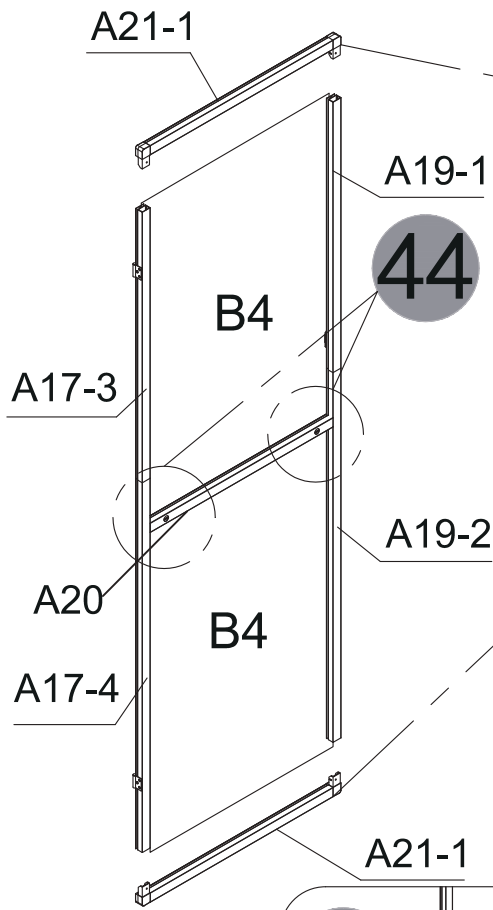


43 H11(X4)

A21-1

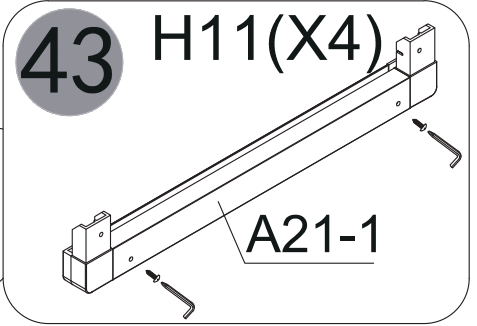

44

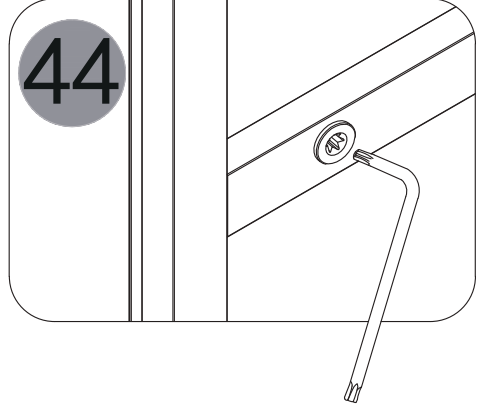


45

B4

↓

↑


B4

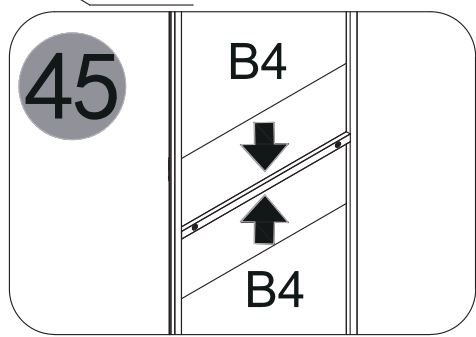


46

H4

H11
(X4)

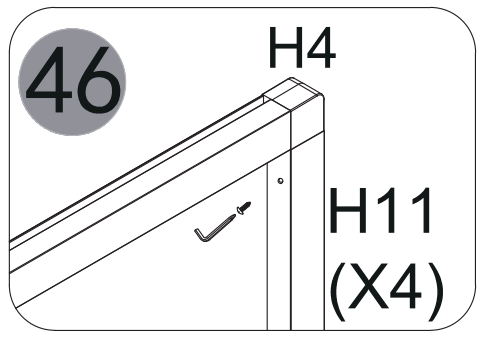


H4

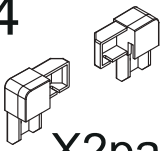

X2pairs

H11




4x8

X8


47

H11

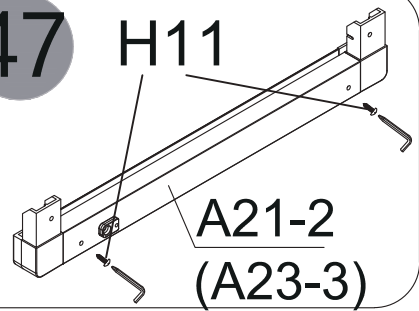

A21-2

48

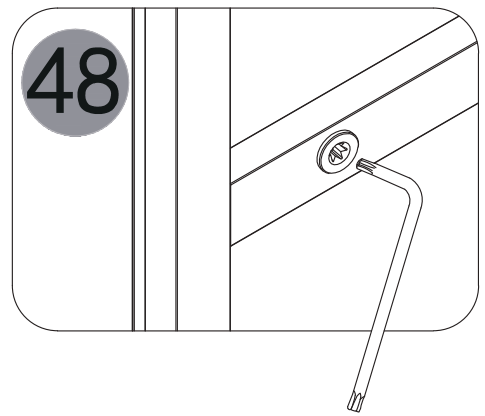

A18-1

A17-1

B4

48

A20

B4


A17-2

49

B4



B4

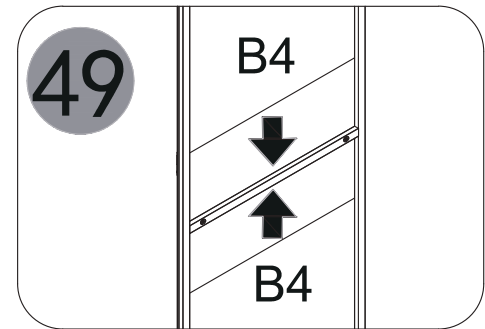


A18-2


A21-3

50


H4

H11
(X4)

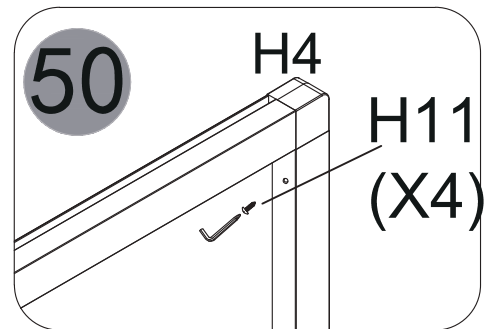

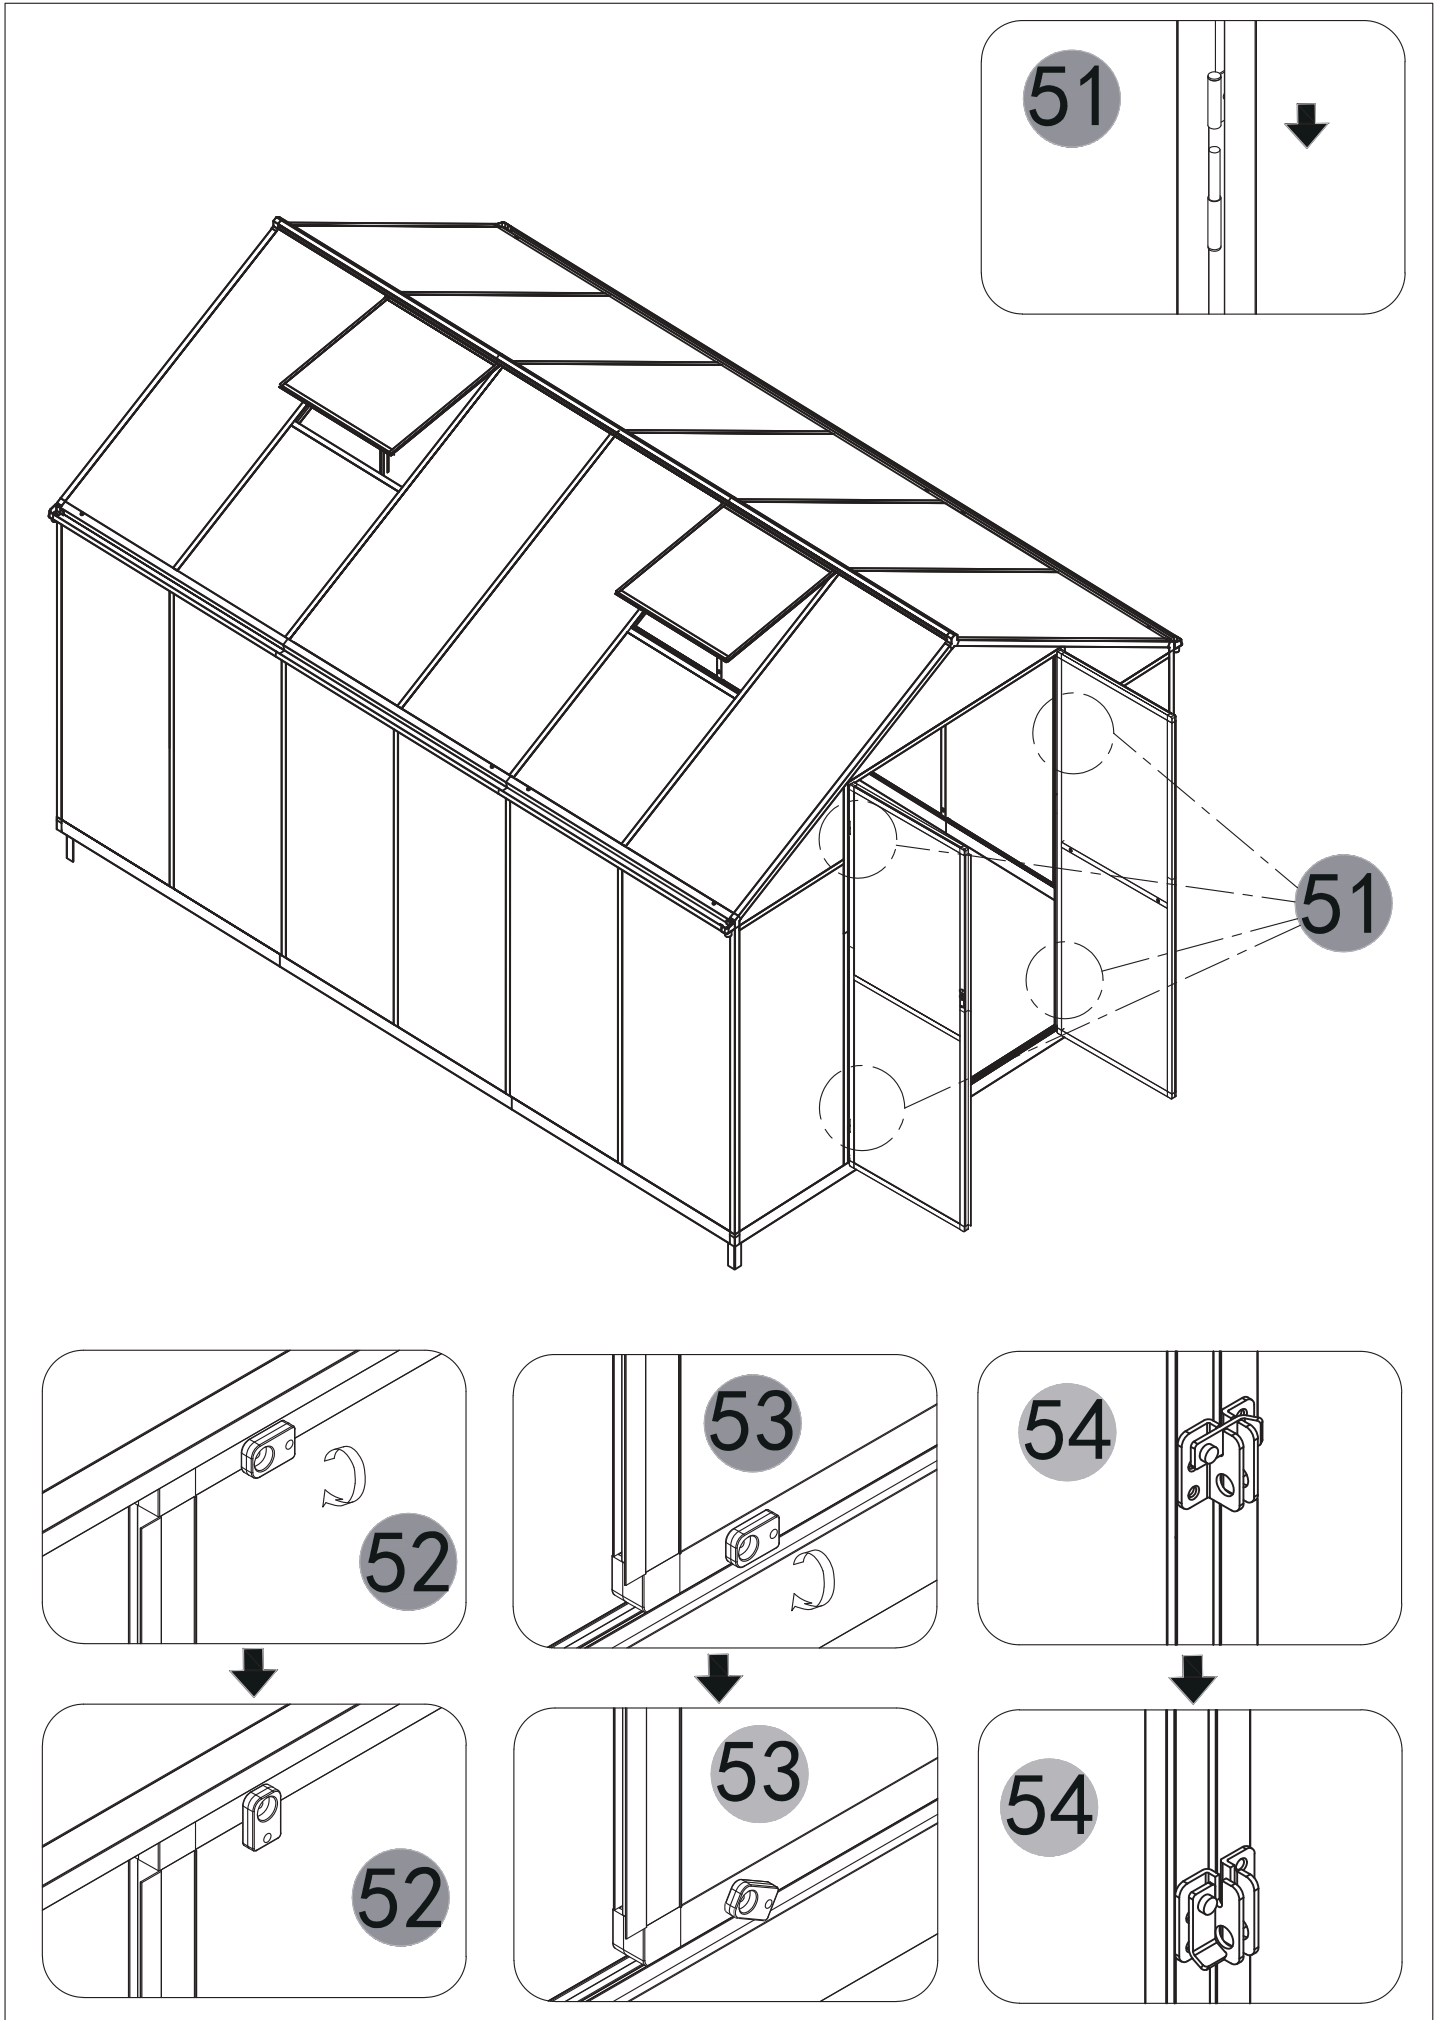

H18

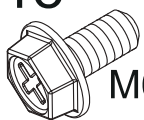

M6x20
X16


A31

55

A31

A31

55

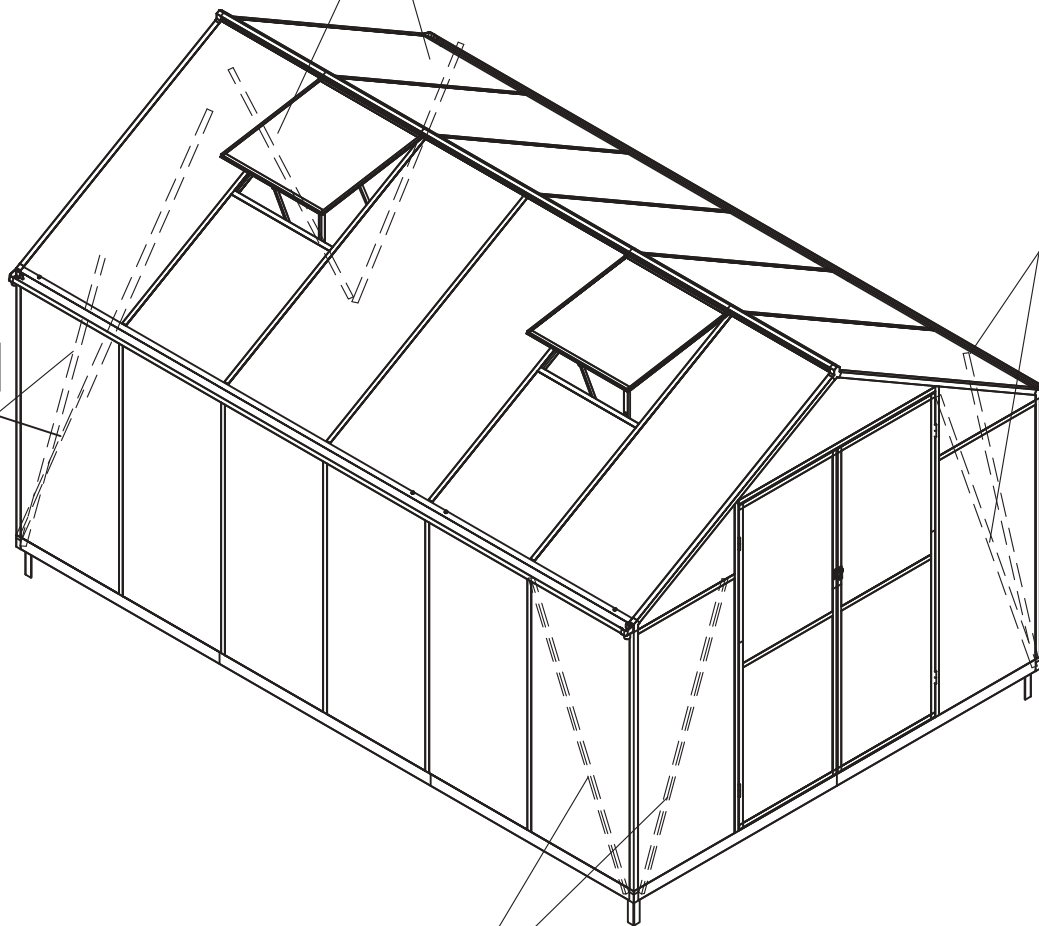

A31

55

A3

A31

A31

A1

A31

A2

A7
(A11)

A31

H8












M6x12
X30

H21



X15

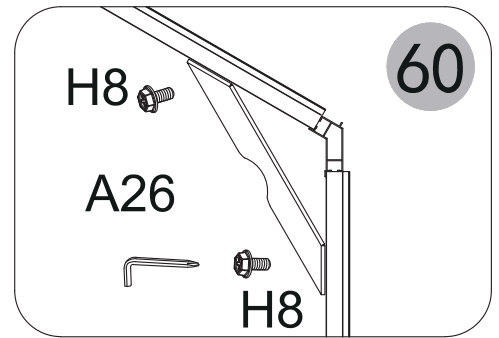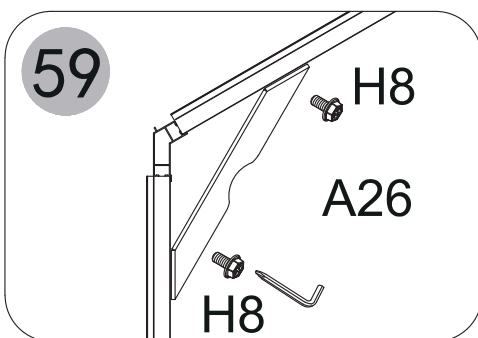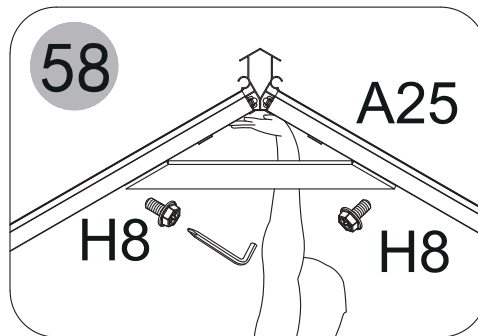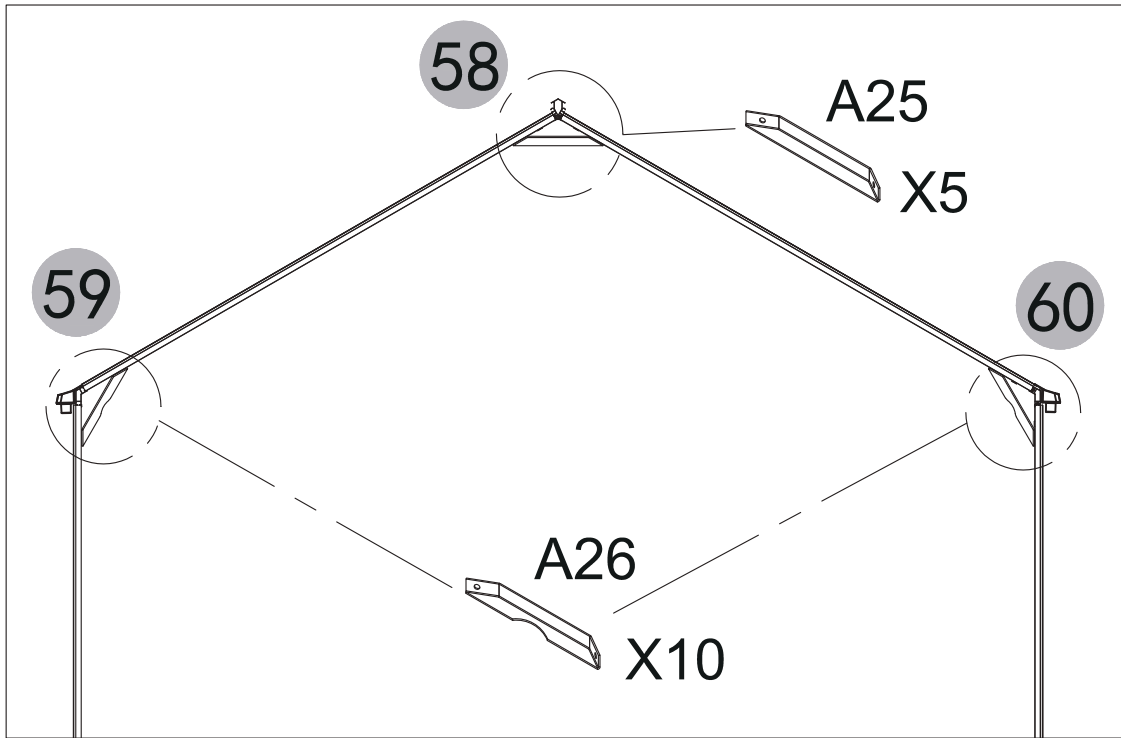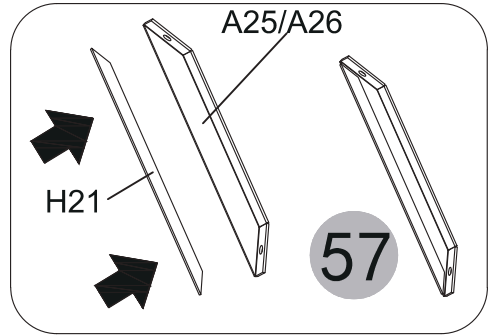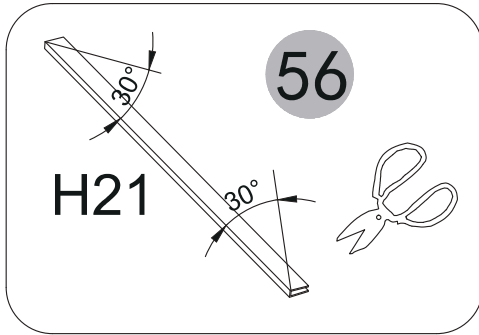

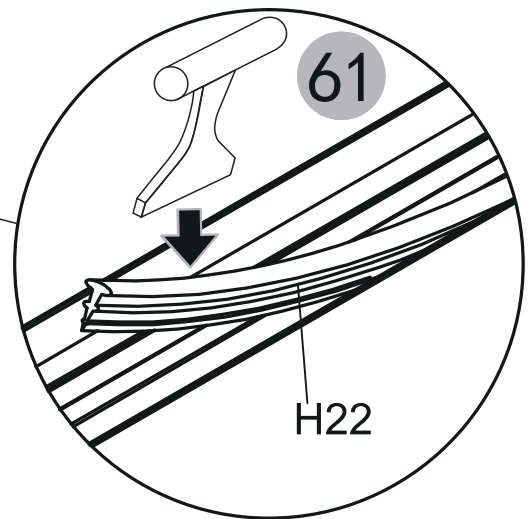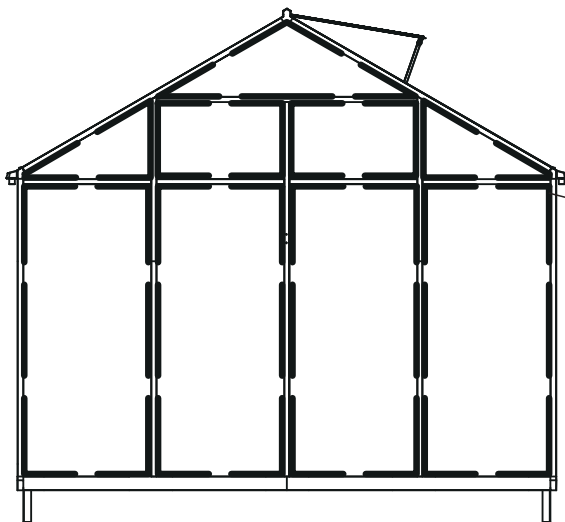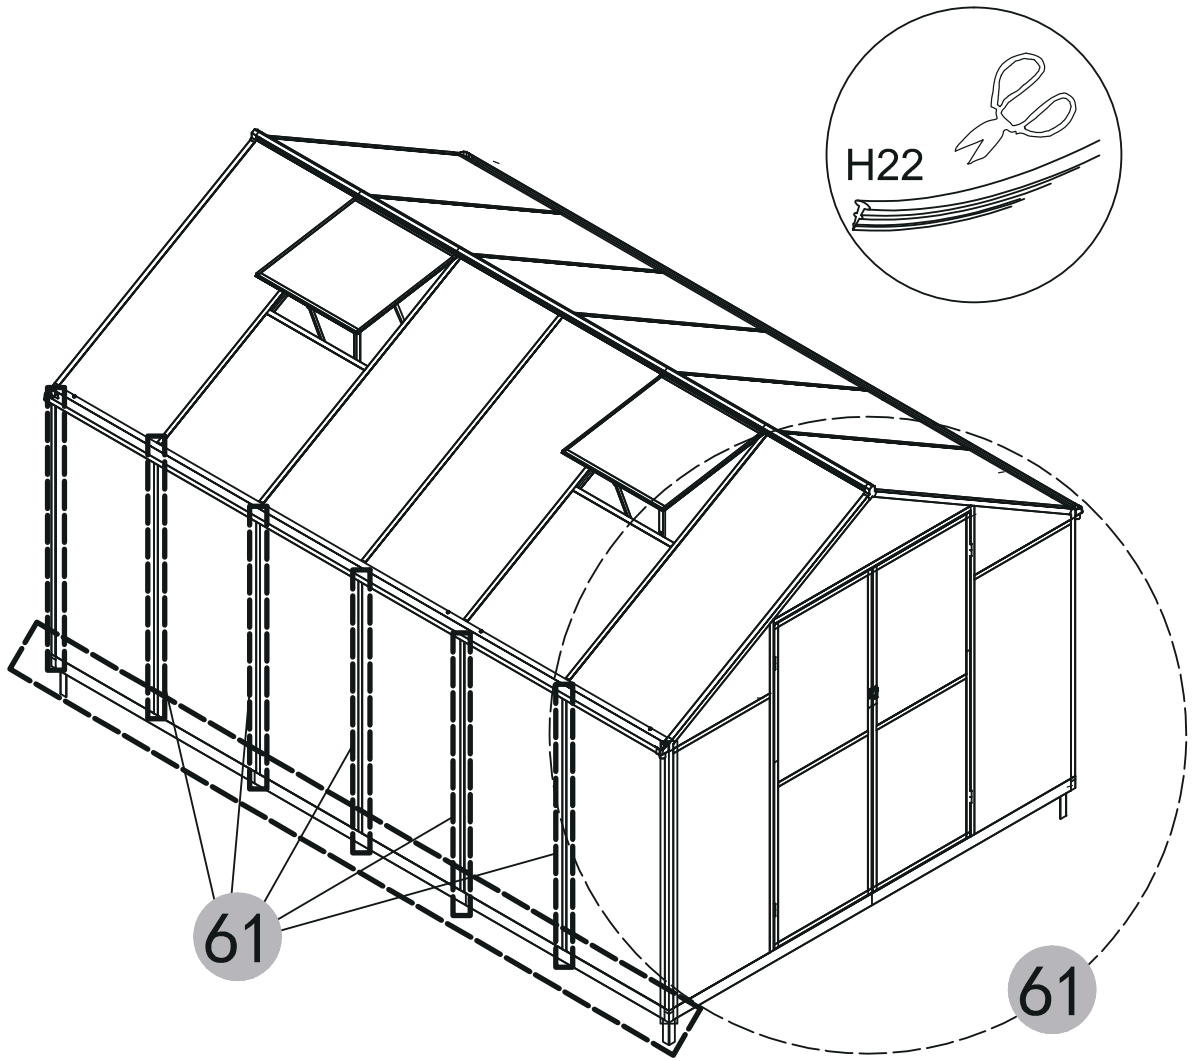

Contact information

Austria



Belgium



Croatia



Denmark



Estonia



Finland



France



Germany



Ireland



Italy



Latvia



Lithuania



Nederland



Norway



Poland



Portugal



Spain



Sweden



Switzerland



UK

