


CosyLifeStyle®


Manual
for
Gazebo Santa Fe
3,65x6m w/PC Sides




3.65 x 6 M

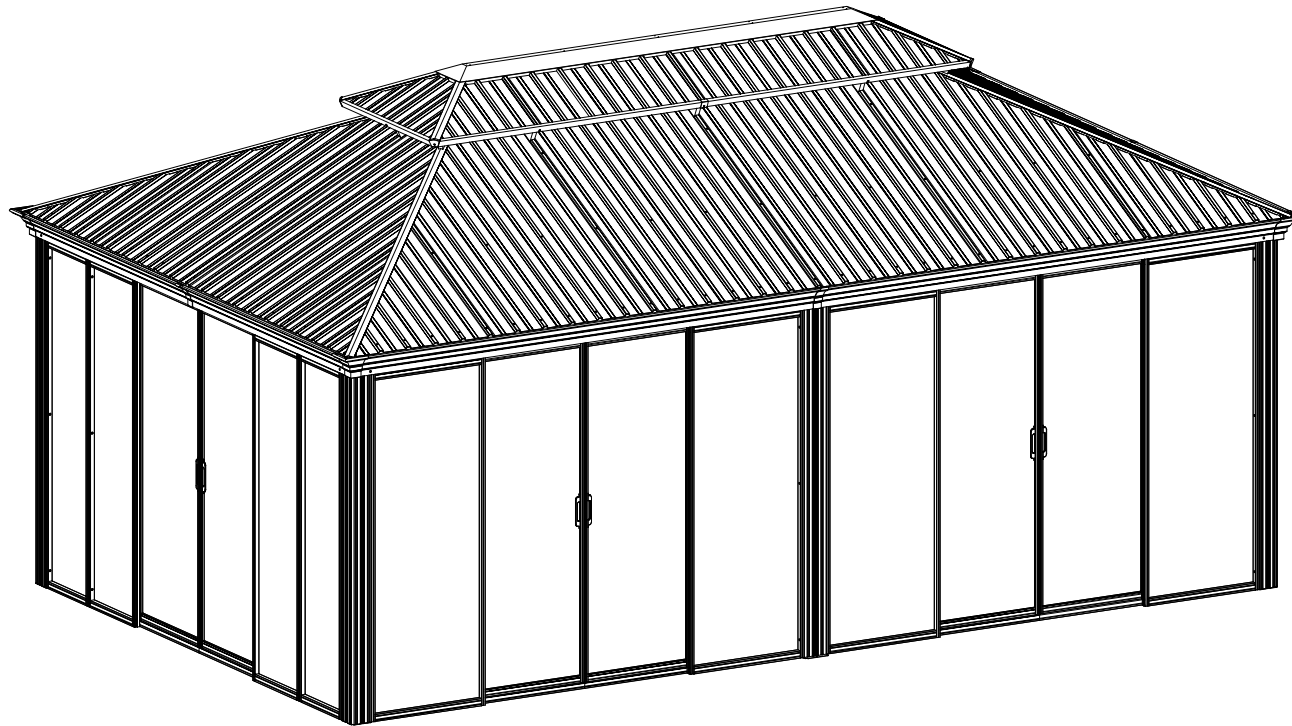


Requires at least 3 people for installation

REQUIRED TOOLS



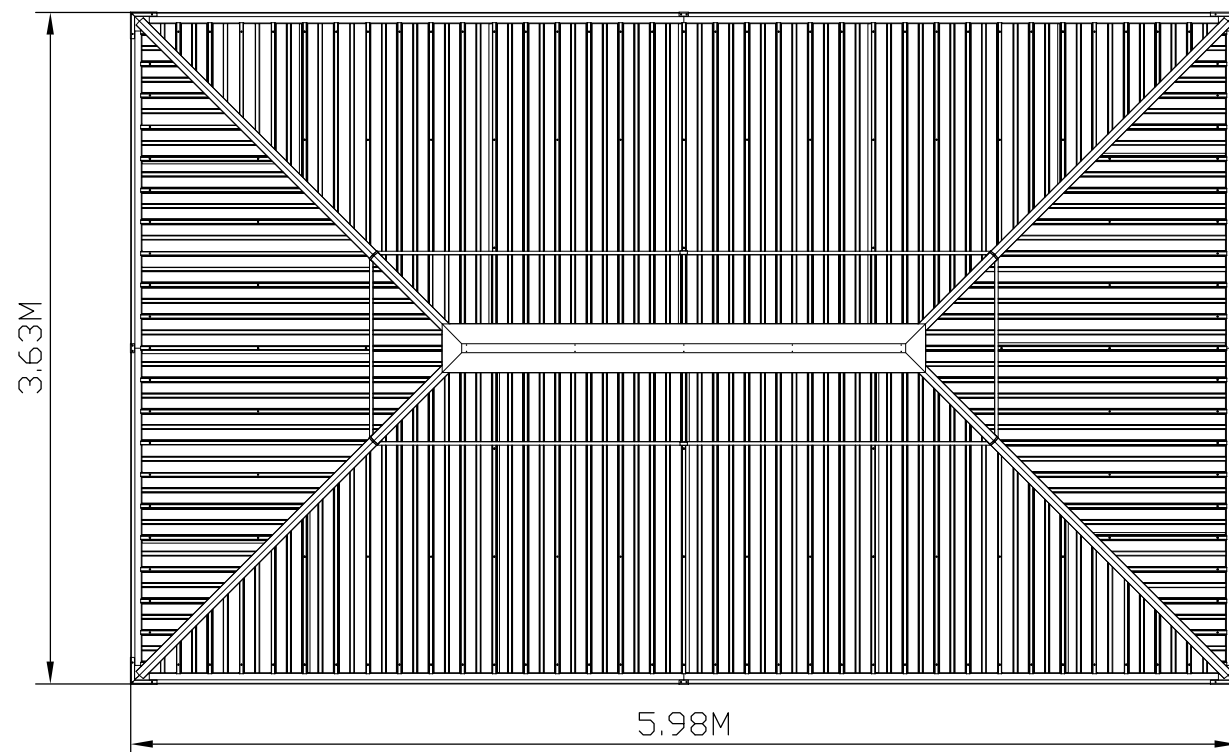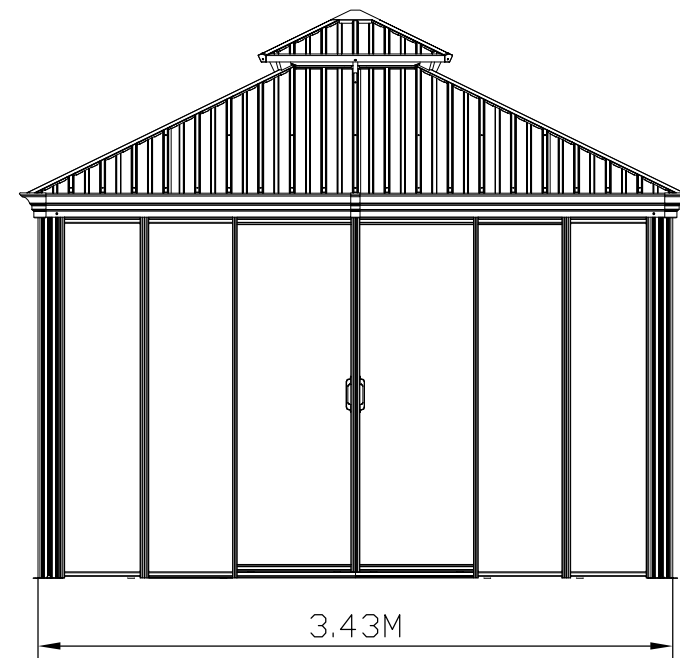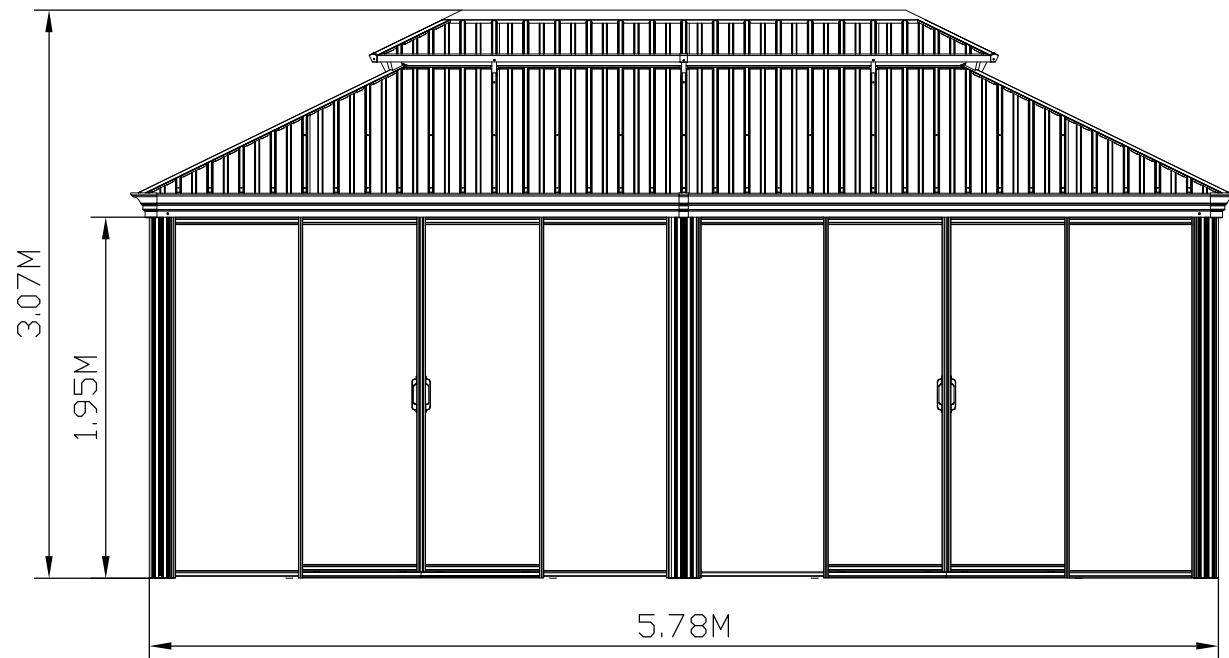


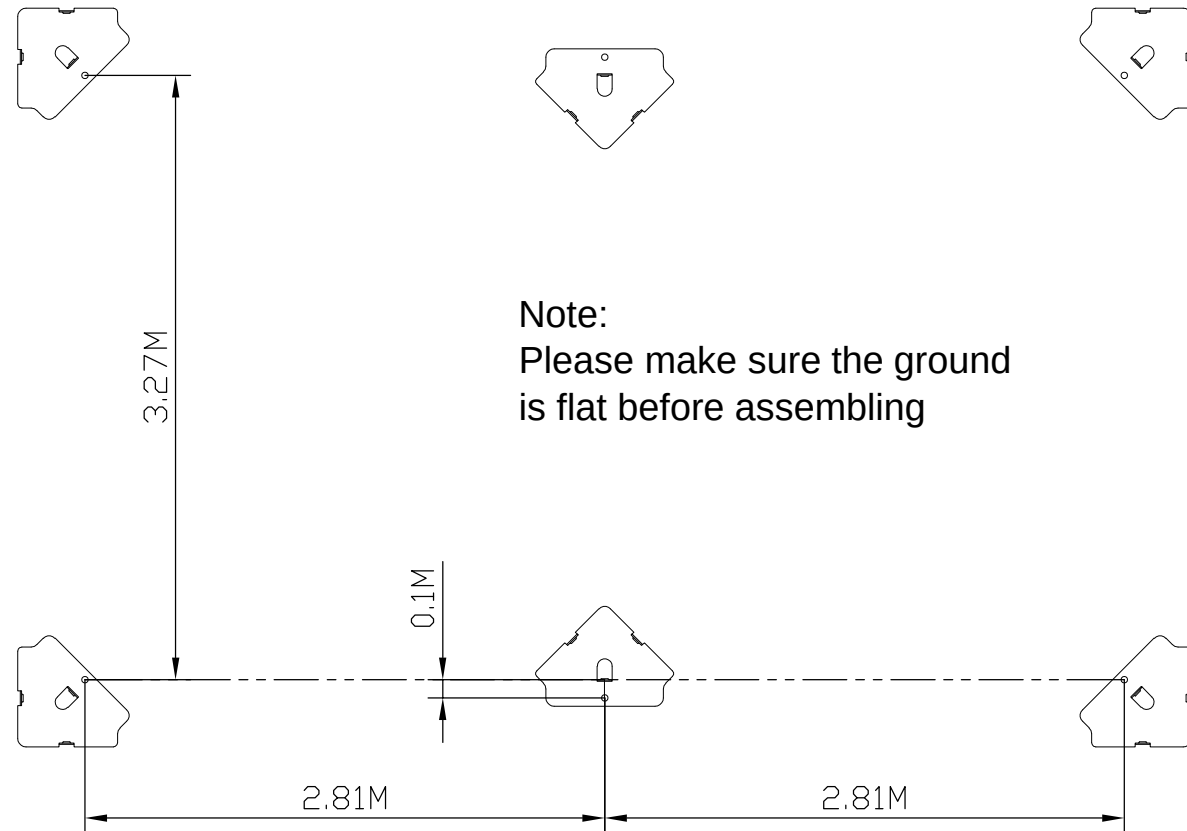

Note:
Please make sure the ground
is flat before assembling




Ⓐ x4



Ⓐ1 x2



Ⓑ x2



Ⓑ1 x2



Ⓑ2 x2



Ⓑ3 x2



Ⓒ x2



Ⓒ1 x2



Ⓒ2 x2




Ⓒ3 x2




Ⓒ4 x2




Ⓒ5 x2

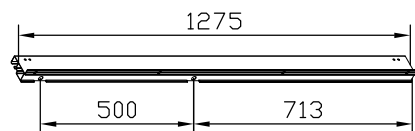









Ⓓ x2















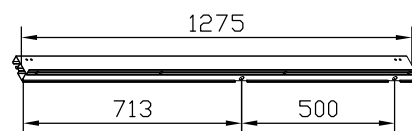



Ⓓ1 x2

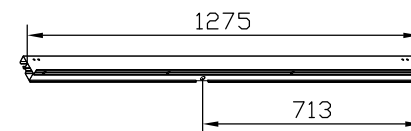


Ⓓ2 x4

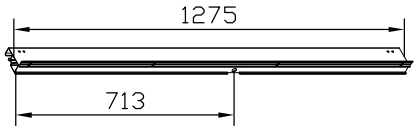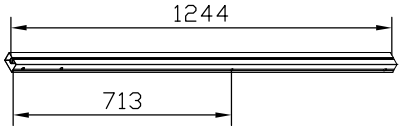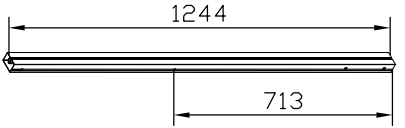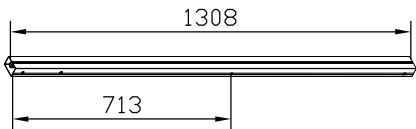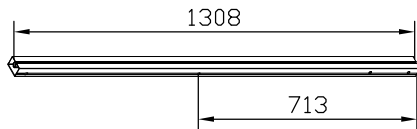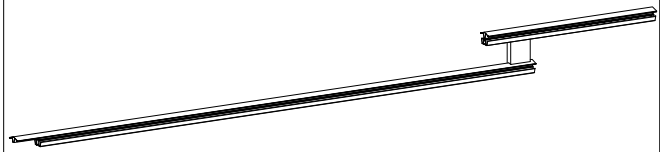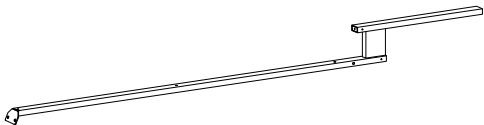 D3 x4	 D4 x2	 D5 x2
 D6 x4	 D7 x4	 E x4
 E1 x8	 F1 x4	 F2 x4
 F x4	 G1 x2	 G2 x2
 G3 x2	 G4 x2	 G5 x2
 G6 x2	 L x1	 M x1

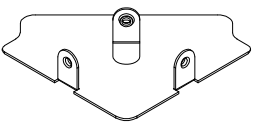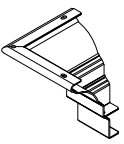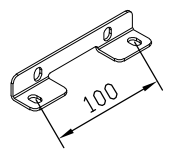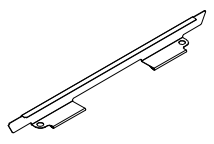
 H x3	 J x6	 K x4	 K1 x4
 N x8	 N2 x8	 N3 x2	 N5 x32
 N6 x4	 P x4	 P1 x6	 U1 x24
 U2 x24	 U3 x24	 W x4	 W1 x8
 Y x152	 Z x76	 Z1 x12	 T1 x1

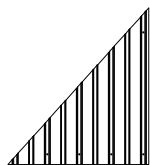


Q1 x2

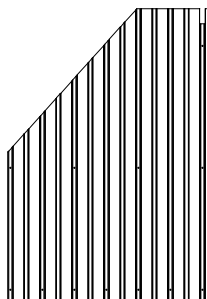


Q2 x2

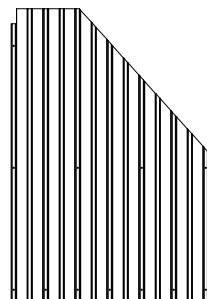


Q3 x2

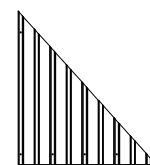


Q4 x2

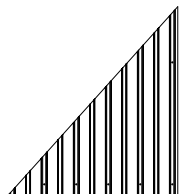


R1 x2

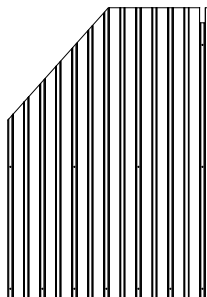


R2 x2

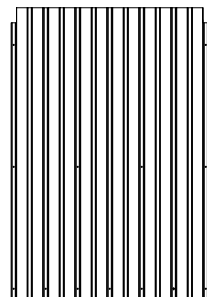


R3 x4

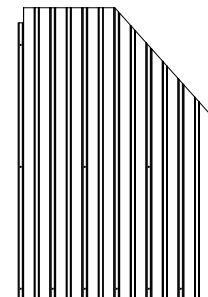


R4 x2

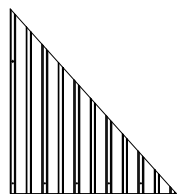


R5 x2




S x2




S1 x2



S2 x2




S3 x4

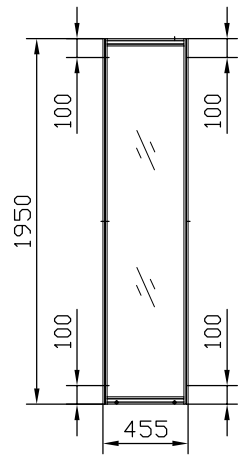


3.65M Left

(V1) x2

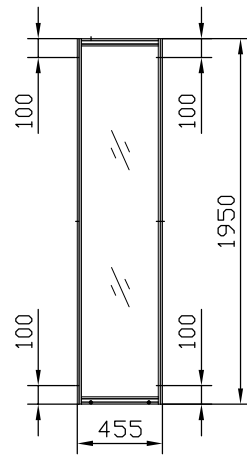


3.65M Right

(V2) x2

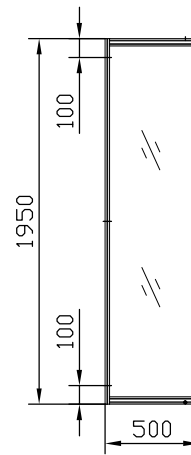


3.65M Middle Left

(V3) x2

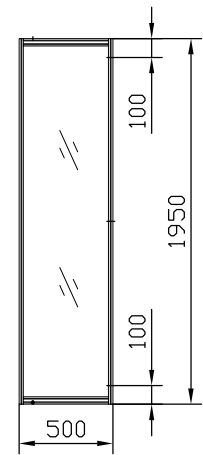


3.65M Middle Right

(V4) x2

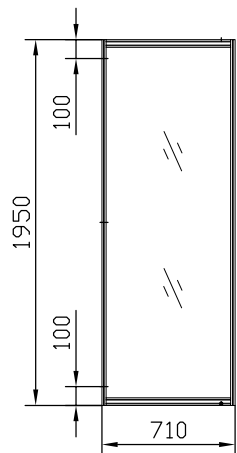


6M Middle Left

(V5) x4

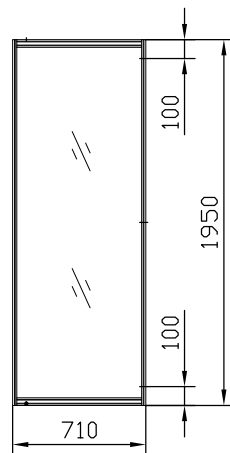


6M Middle Right

(V6) x4

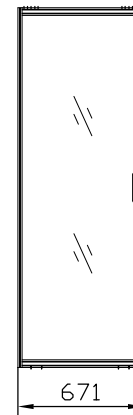



Sliding Left

(V7) x6

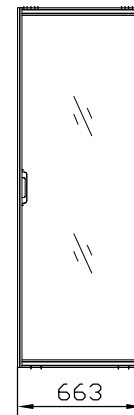


Sliding Right

(V8) x6




 ① x395 M6x15	  ② x16+x96 M6x23	 ③ x4 M5x12	 ④ x24 ST4.8x12
 ⑤ x3	 ⑥ x8 M6x42	 ⑦ x32 M6x47	 ⑧ x56
 ⑨ x48 M6x15	 ⑩ x24 M5x25	 ⑪ x24 M6x60	 ⑫ x6 M6x50
 ⑬ x22	 x1		
	 x1		

STEP 1

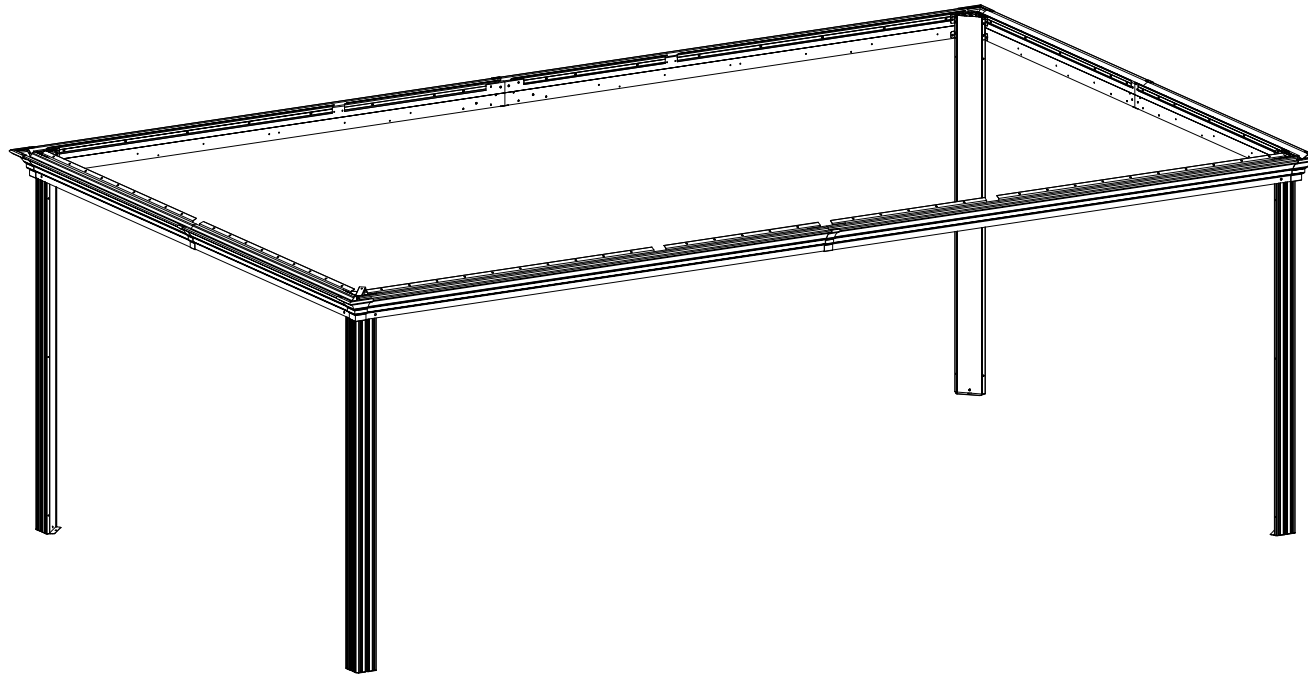

Tips: When installing the screws, don't tighten them all the way first, just roughly hold them in place, and when you're sure that all the parts are installed, then you can tighten the screws to secure the frame.


<1>

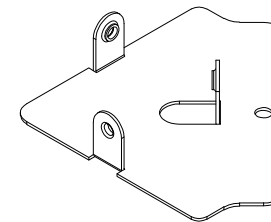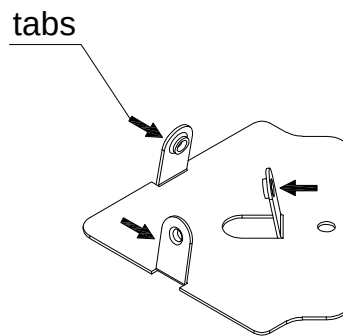


Tips: If the tabs on the base are crooked, you can use pliers to straighten them for easy screw installation



A x4



J x4





N x8




M6x15


1 x28

<2>

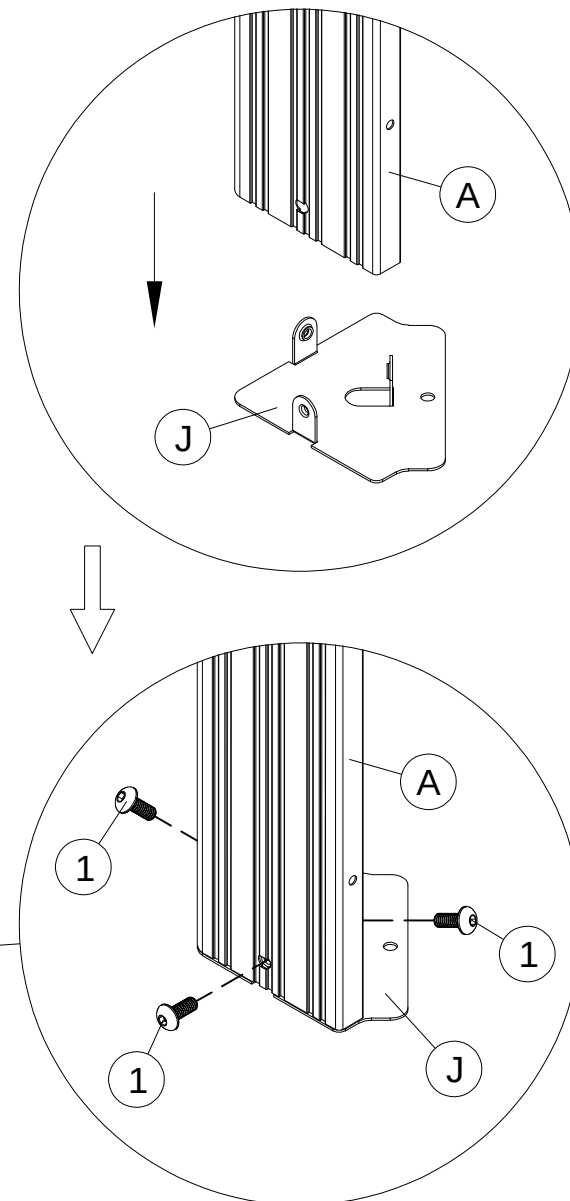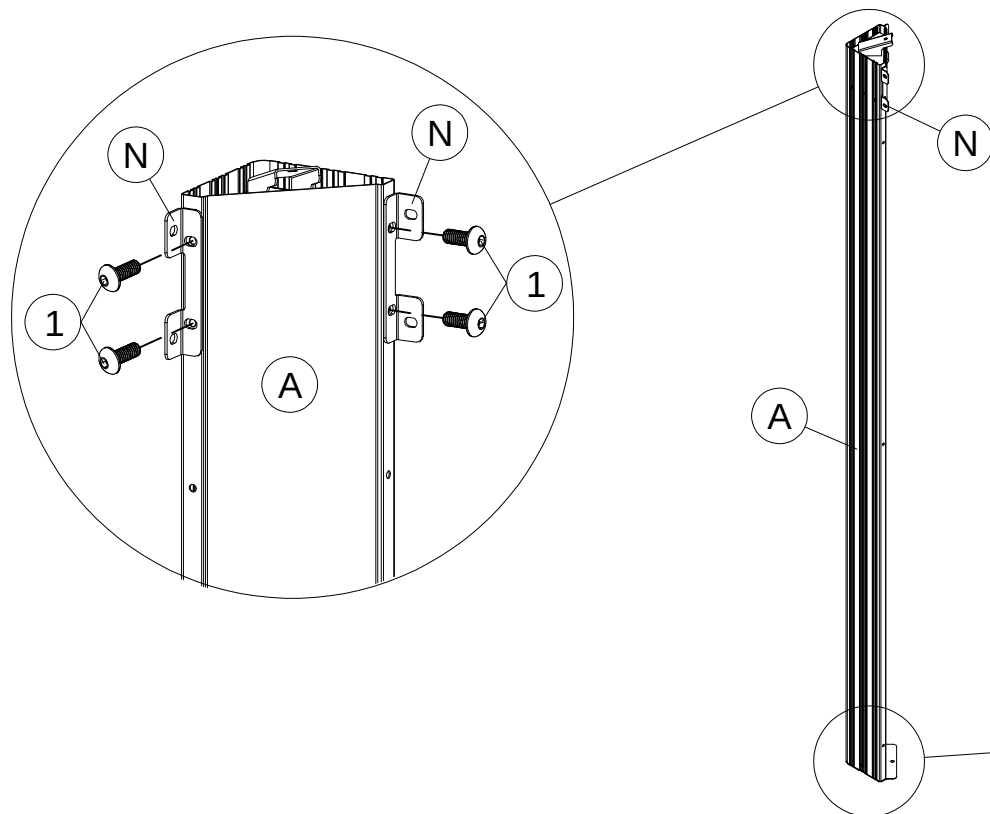




A1 x2



J x2






N6 x4



M6x15


1 x14

<3>

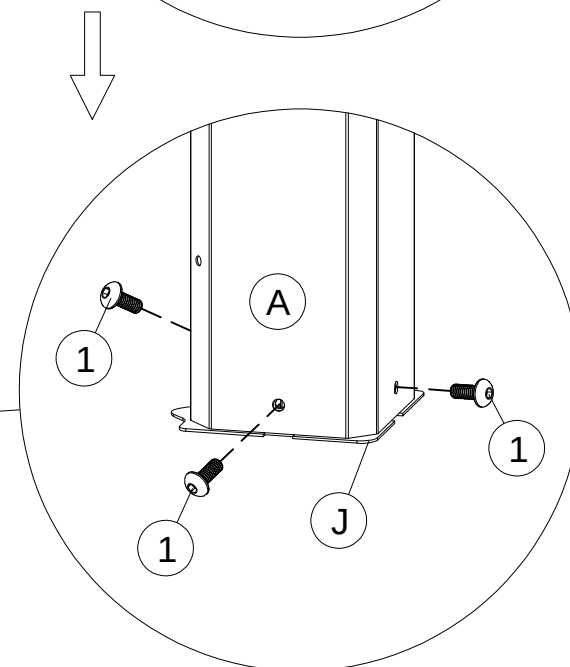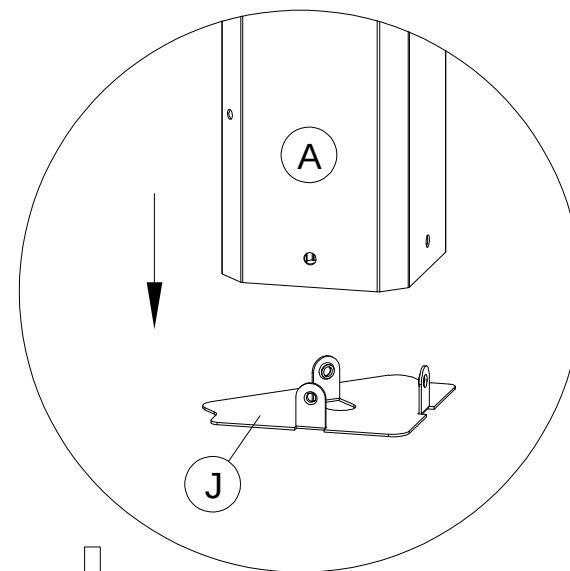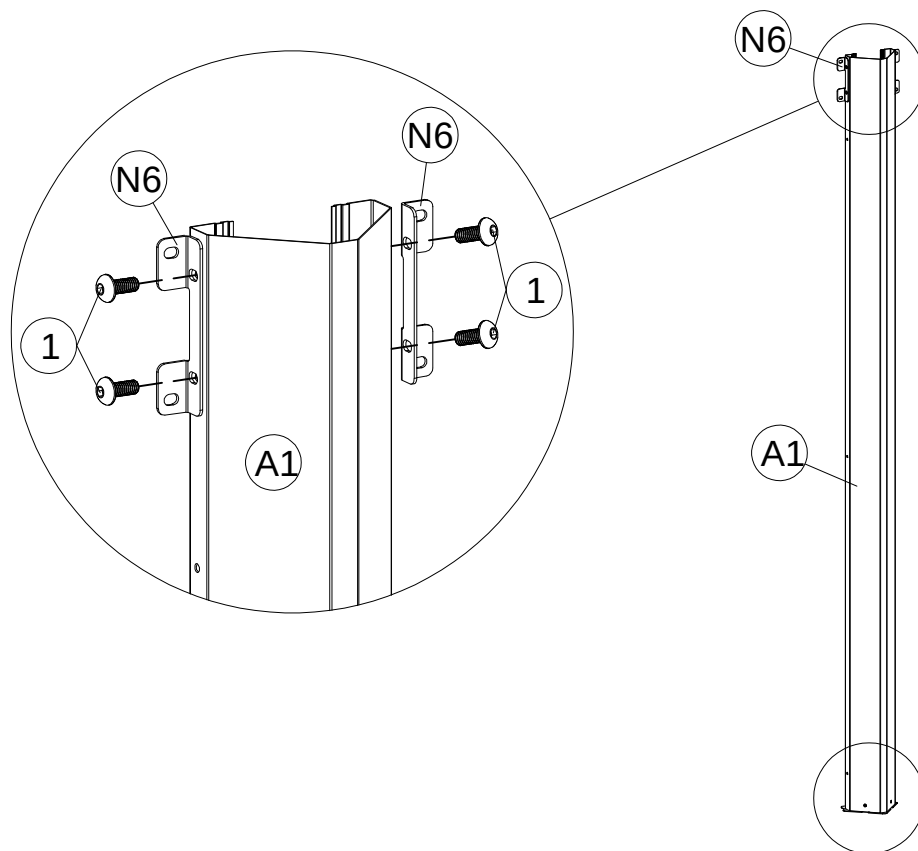




(B) x2



(B1) x2




(P) x2



M6x15

(1) x12



<4>

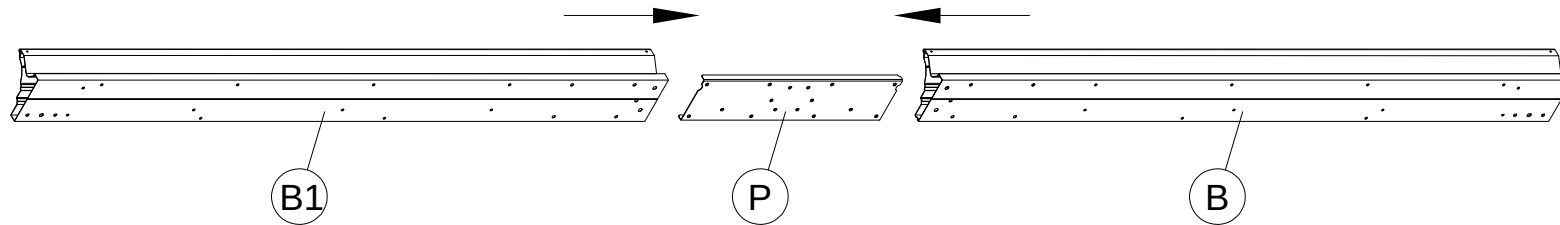


Tip 1: Use #1 screws to line up the holes in beam B1 and connector P, then connect beam B.


Tip 2: When installing the screws, just hold them roughly in place and then tighten all the screws when you have the entire part connection aligned.

<5>

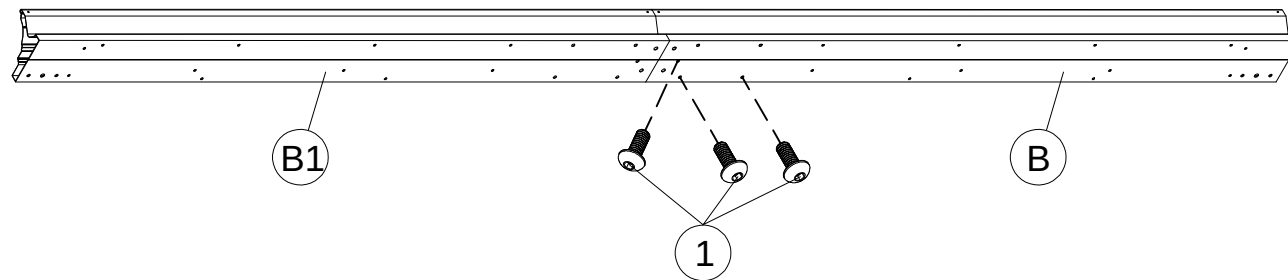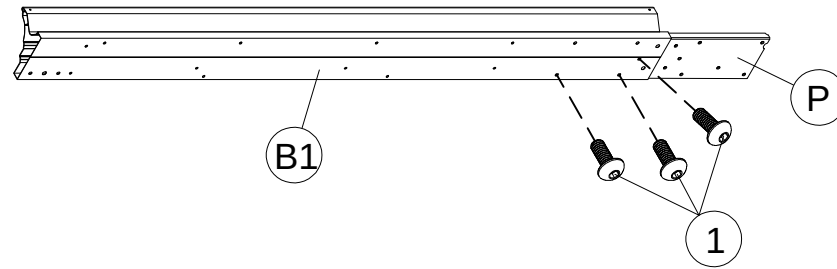




(B2) x2



(B3) x2




(P) x2



M6x15

(1) x8



<6>

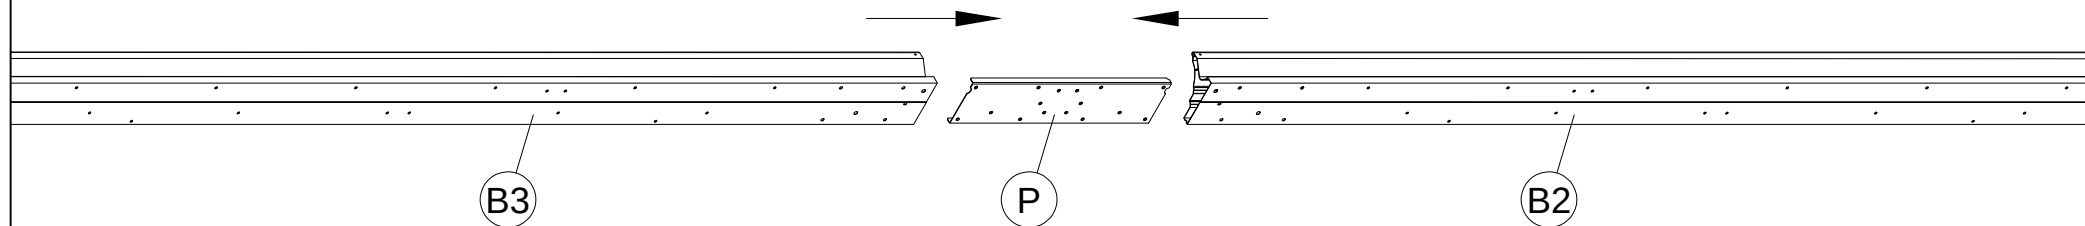


Tip 1: Use #1 screws to line up the holes in beam B3 and connector P, then connect beam B2.

Tip 2: When installing the screws, just hold them roughly in place and then tighten all the screws when you have the entire part connection aligned.

<7>

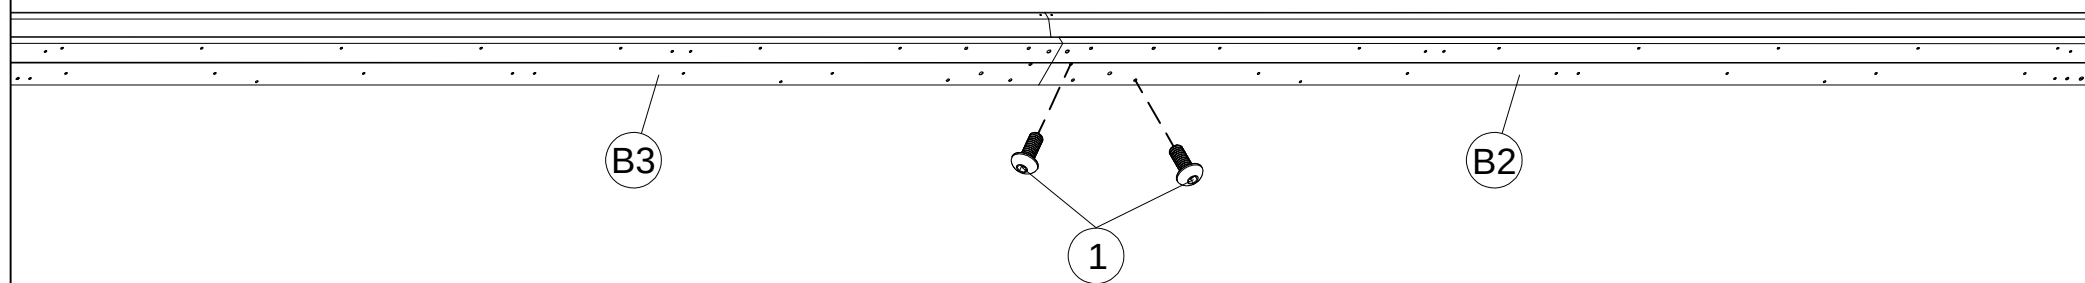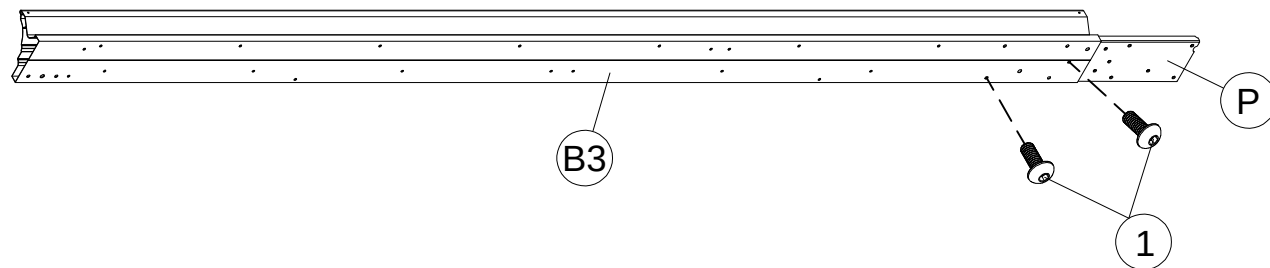



(C) x2




(C1) x2



M6x15


(1) x24

<8>

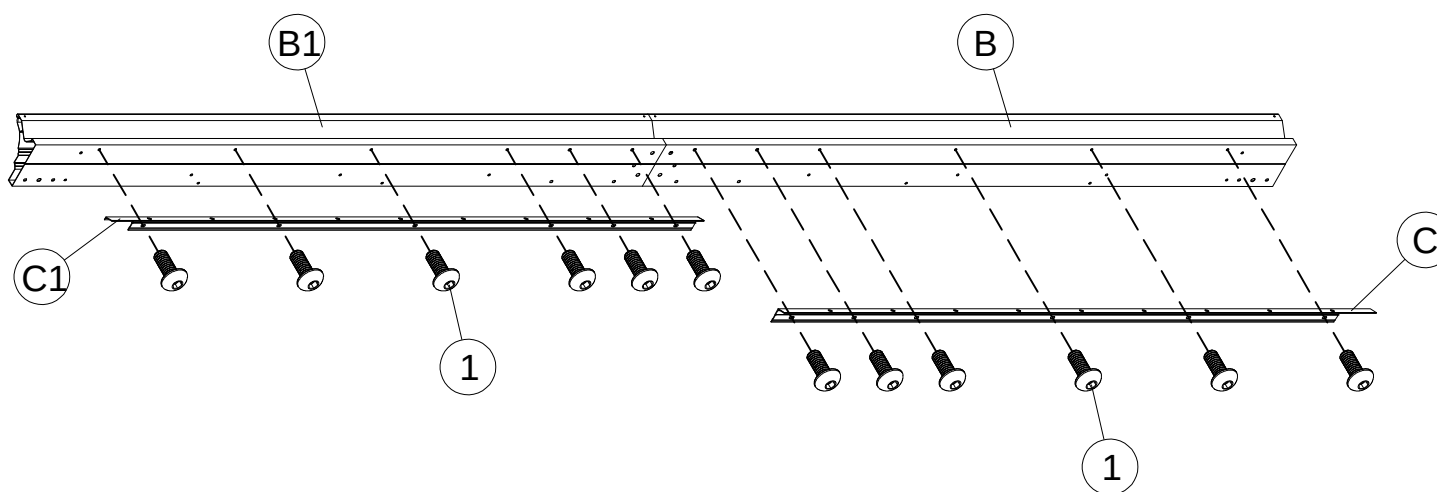




C2 x2



C3 x2



C4 x2




C5 x2

<9>



M6x15

1 x32

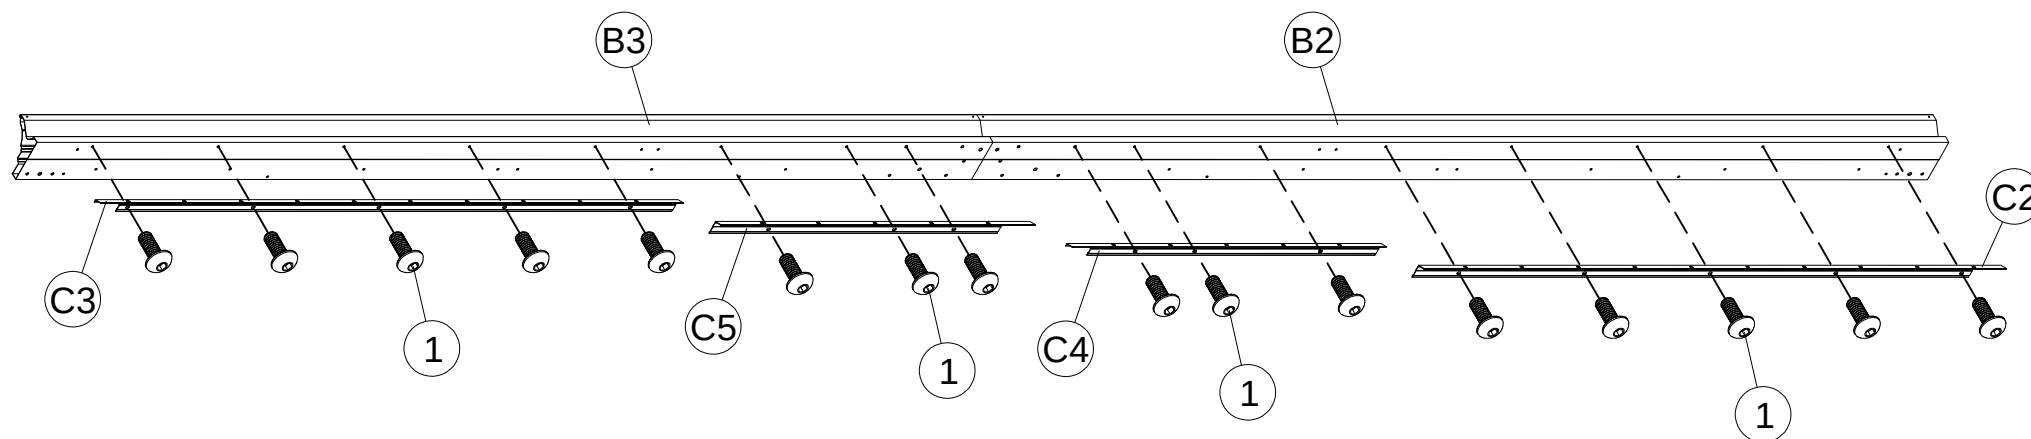




M6x15


1 x24




8 x8

<10>

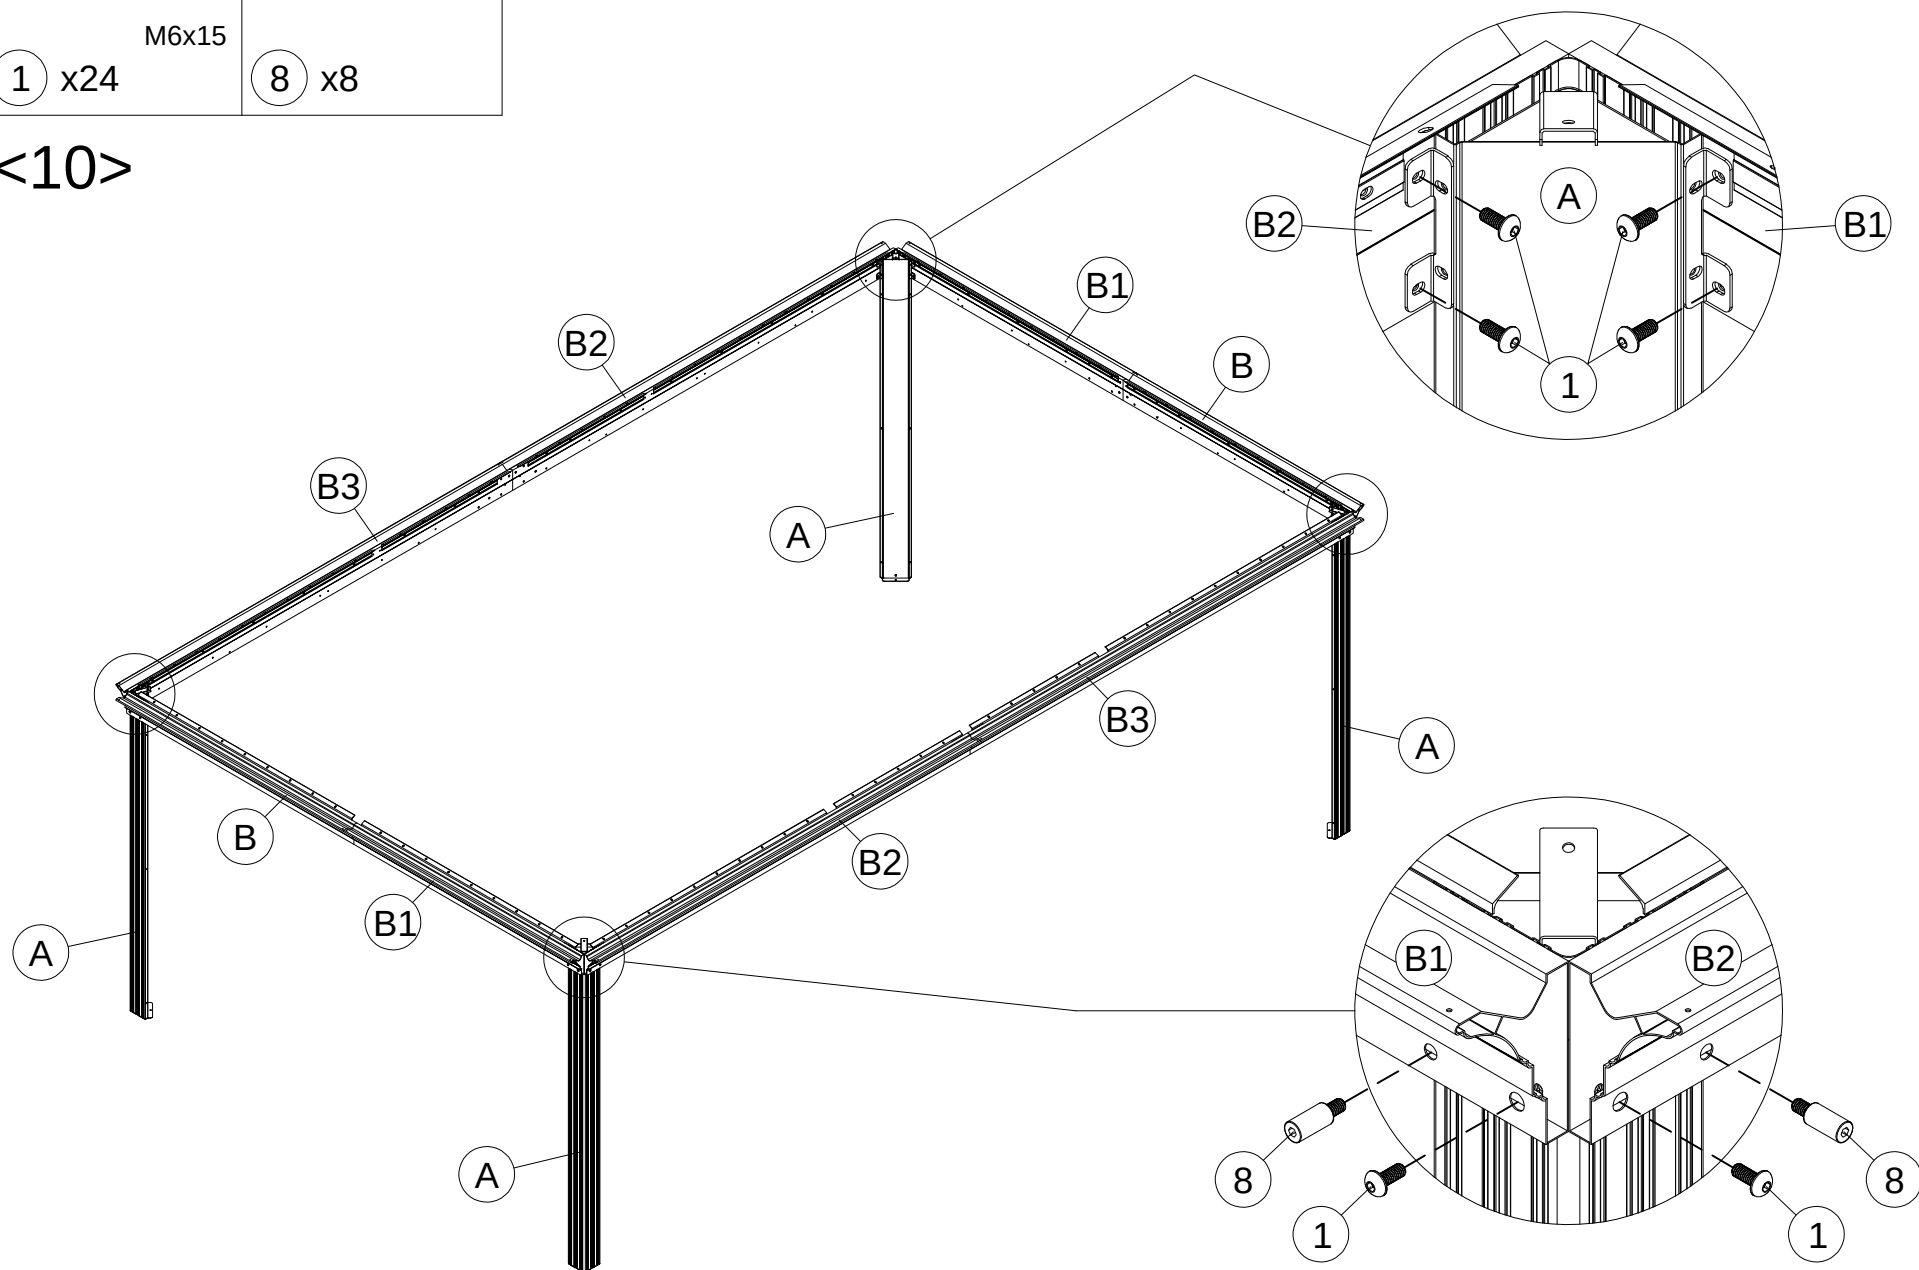

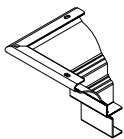

(K) x4



(K1) x4



M5x12


(3) x4




ST4.8x12

(4) x24

<11>

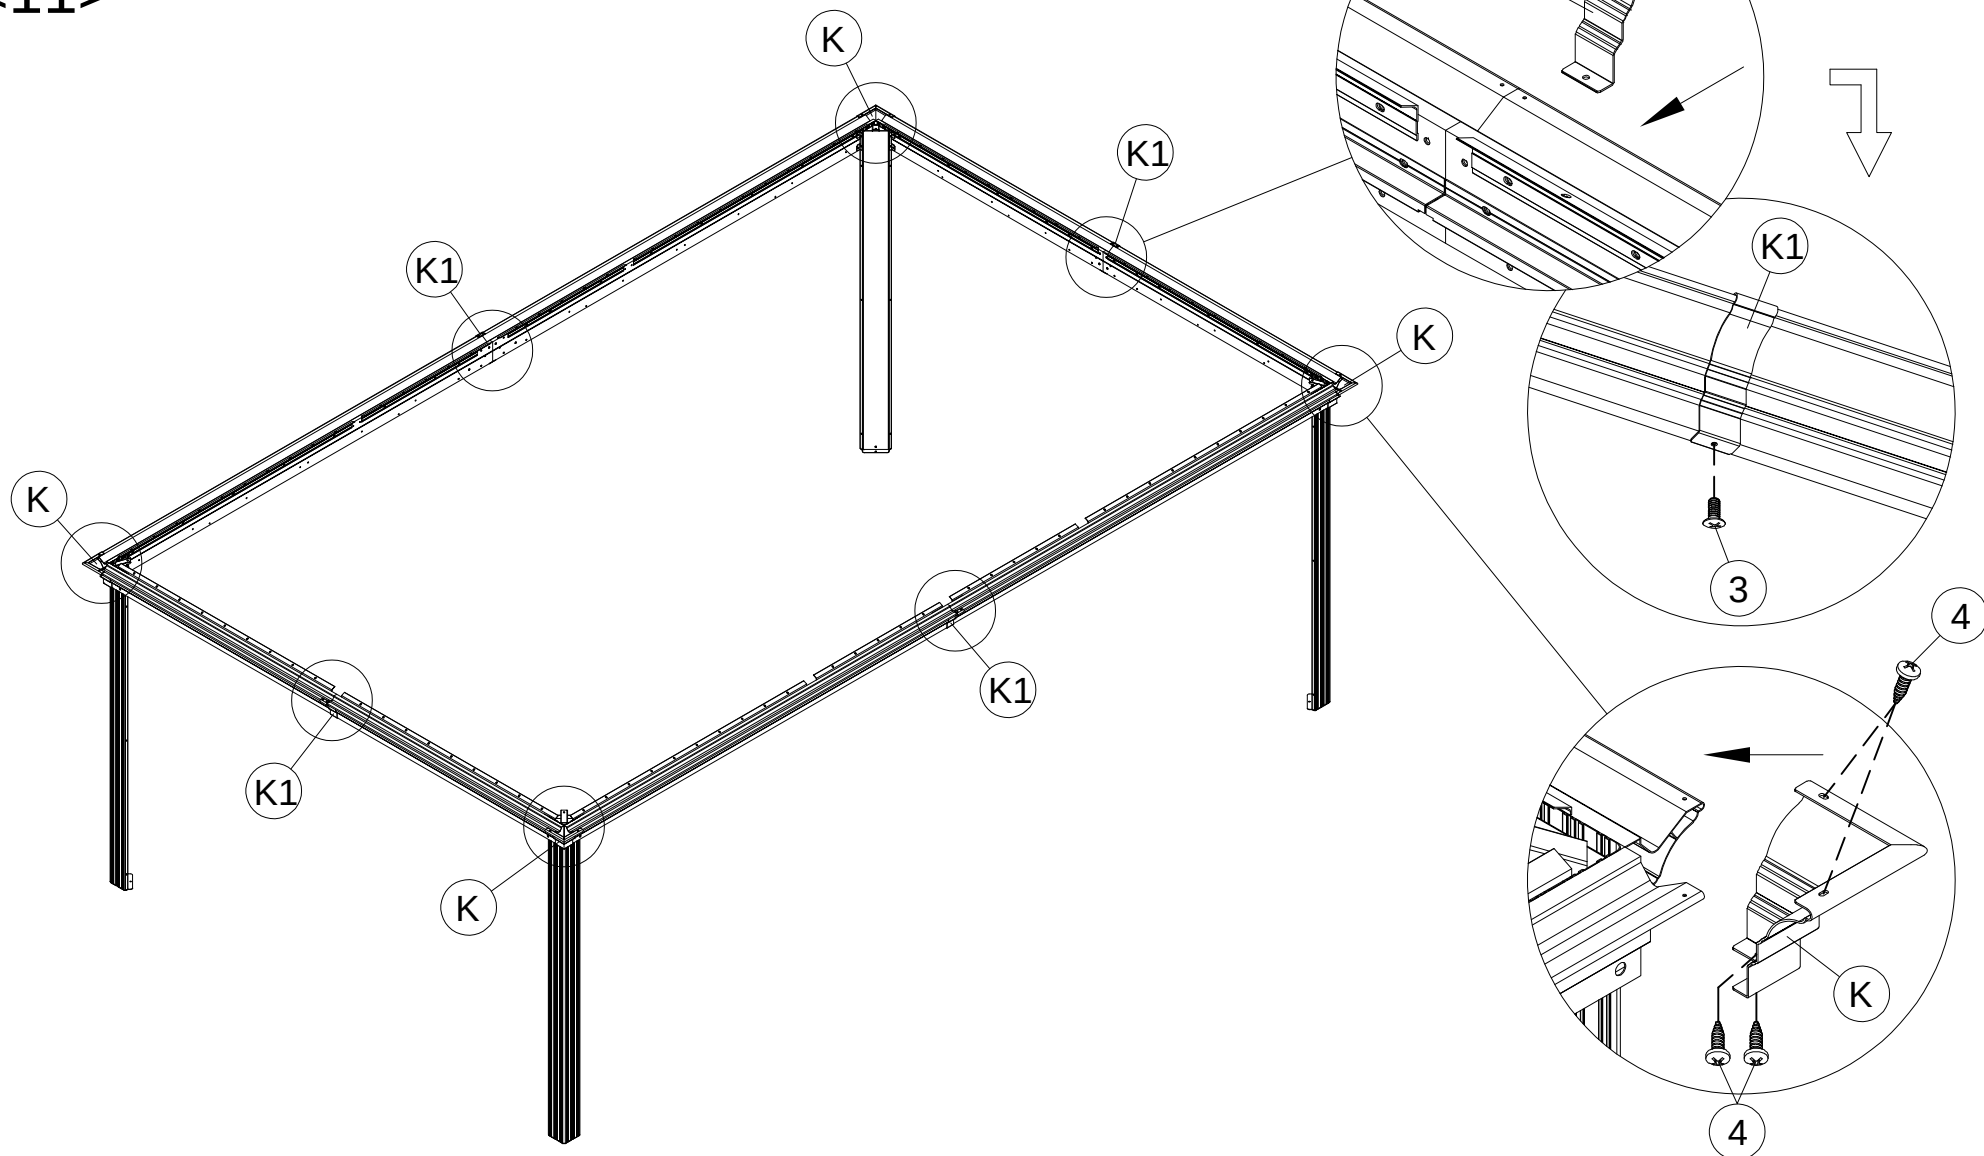


STEP 2

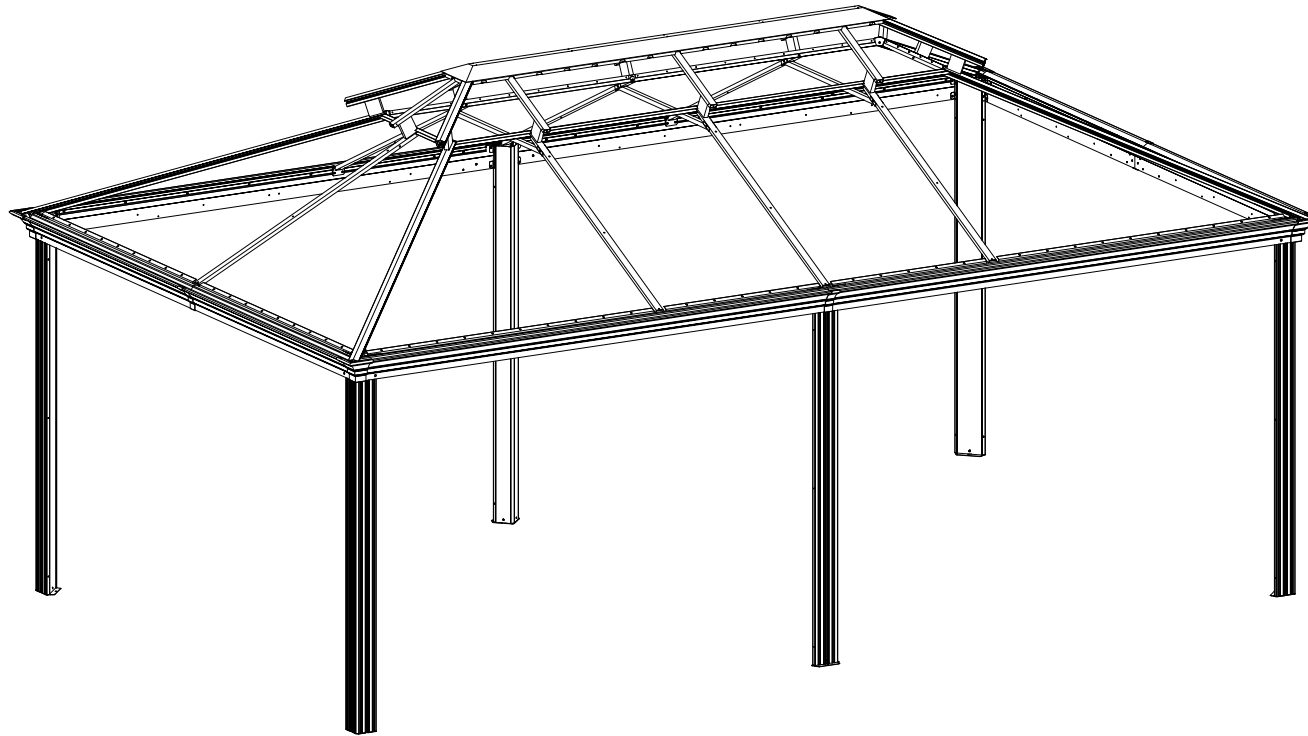

Tips: When installing the screws, don't tighten them all the way first, just roughly hold them in place, and when you're sure that all the parts are installed, then you can tighten the screws to secure the frame.



(E) x4




(L) x1



M6x15

(1) x12



<12>

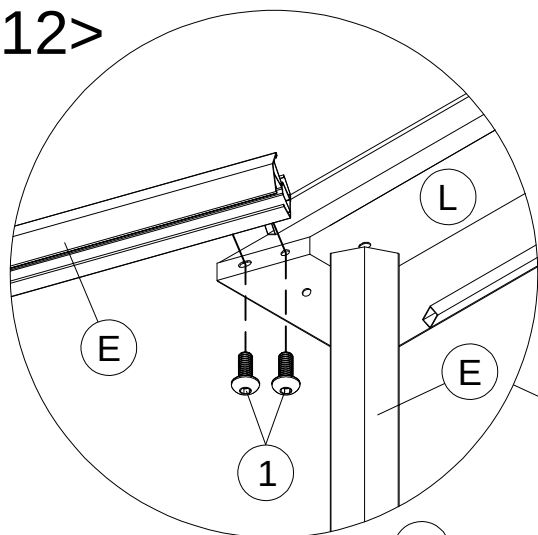

Note:

1. Let one person stand on the ladder to lift " L " and hold, and let others fasten the screws connecting both ends of " E ".

2. Please do not let go of holding " L " until all the " E " screws are installed.

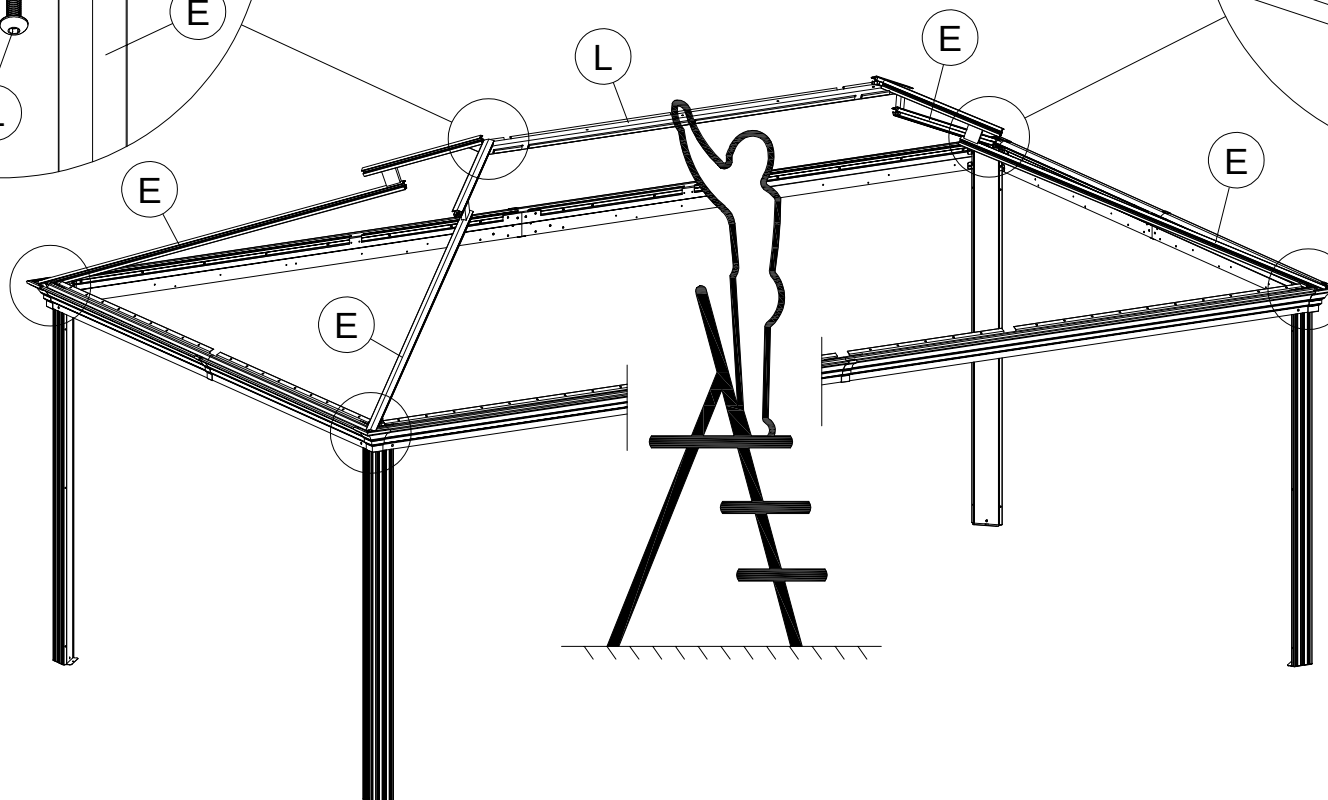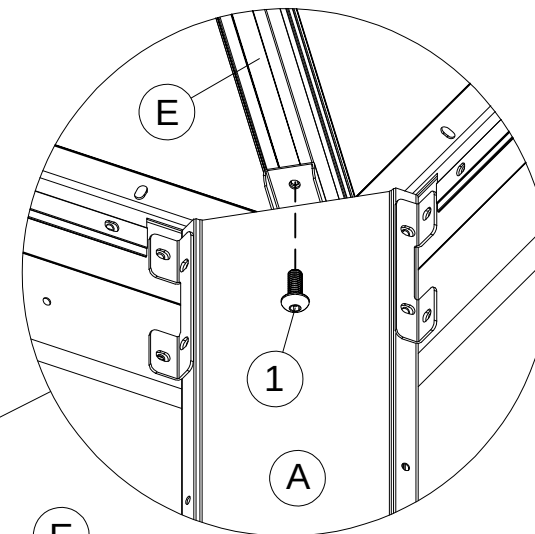






(E1) x8



M6x15

(1) x24

<13>

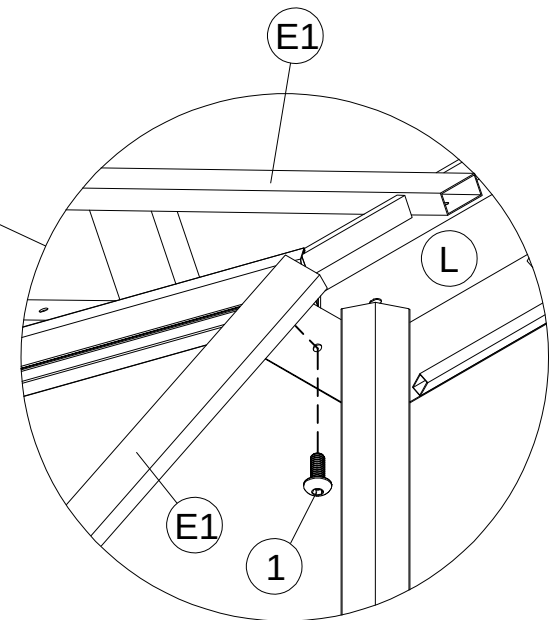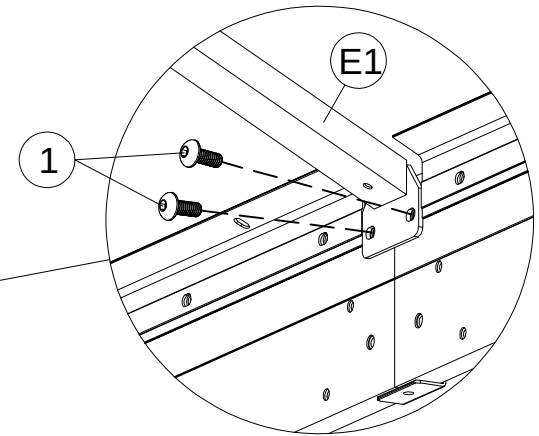
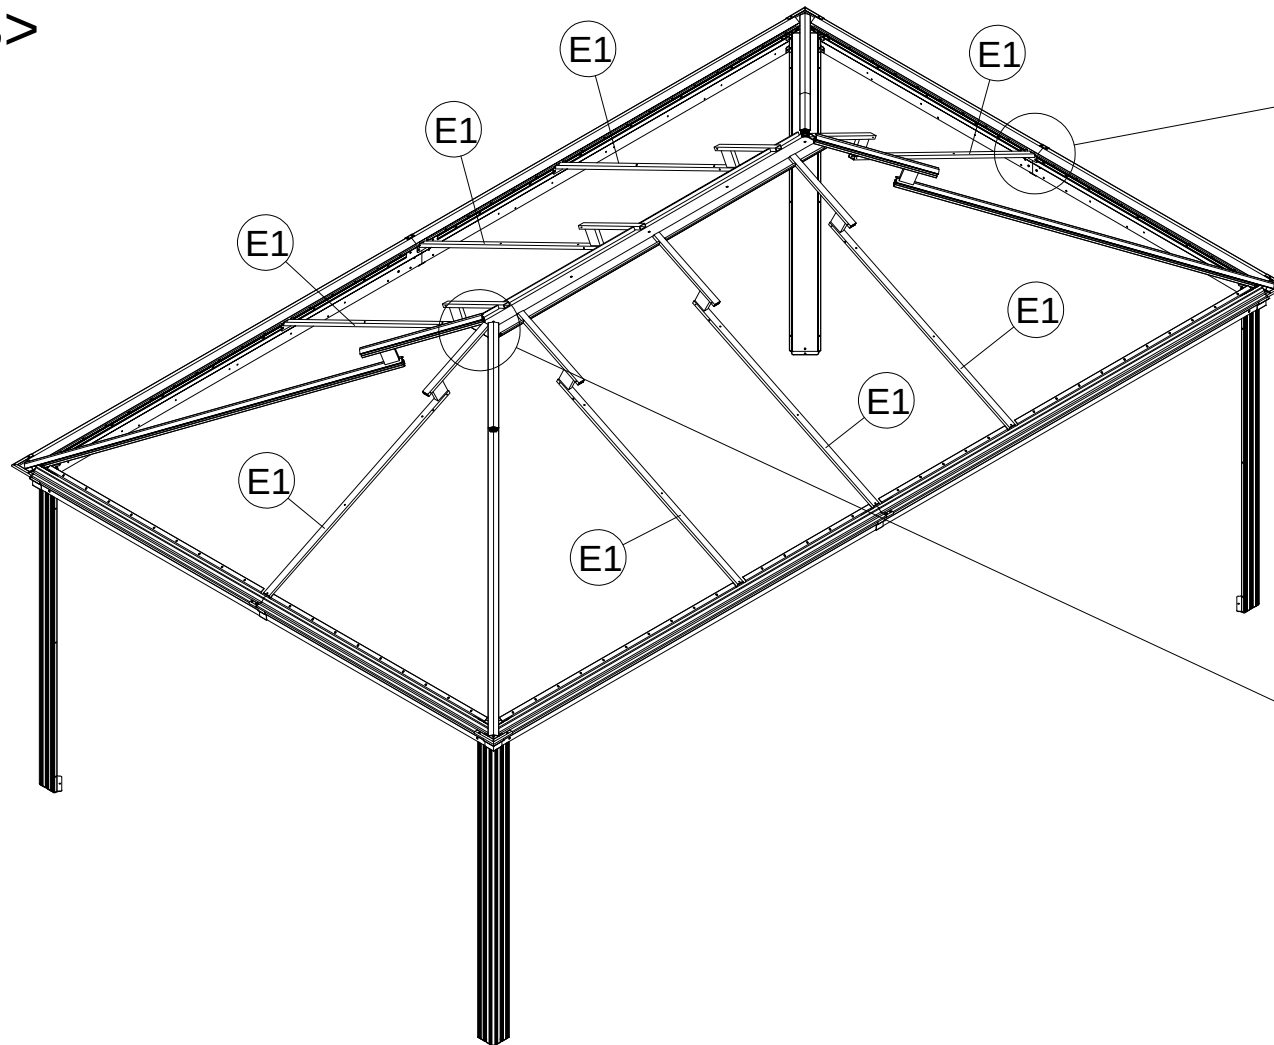





M6x15

1 x8

<14>

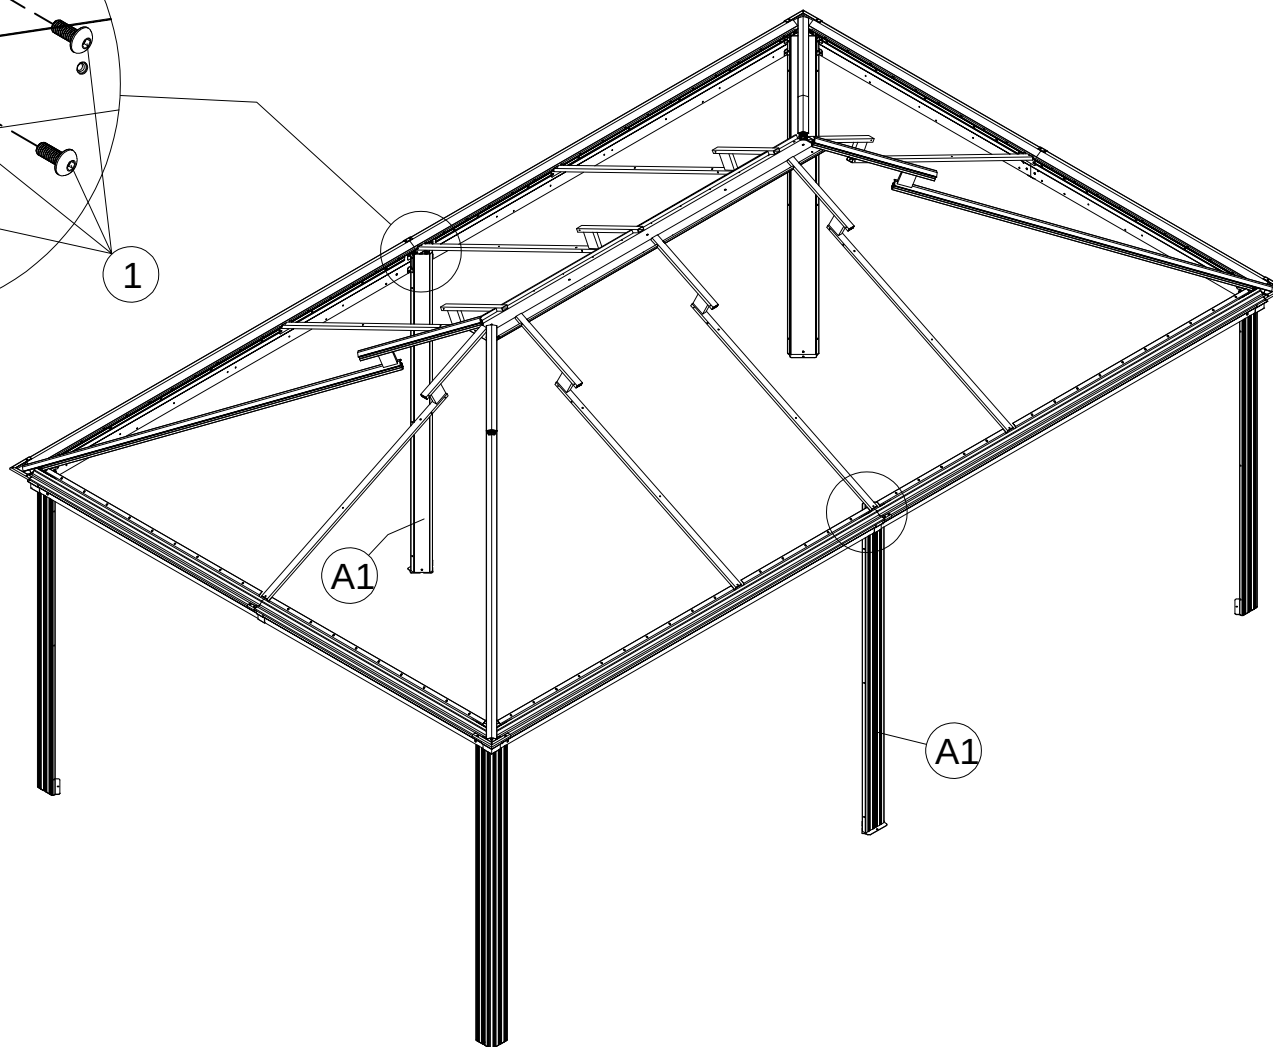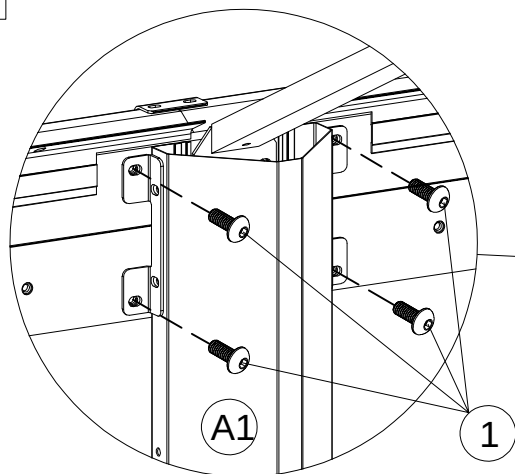





(M) x1



M6x15





(1) x5

<15>

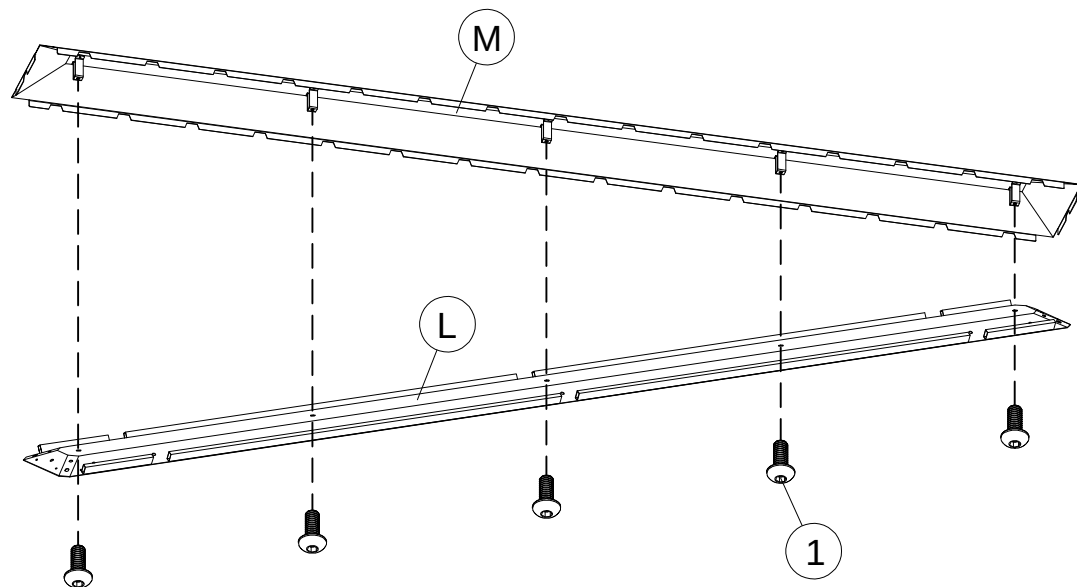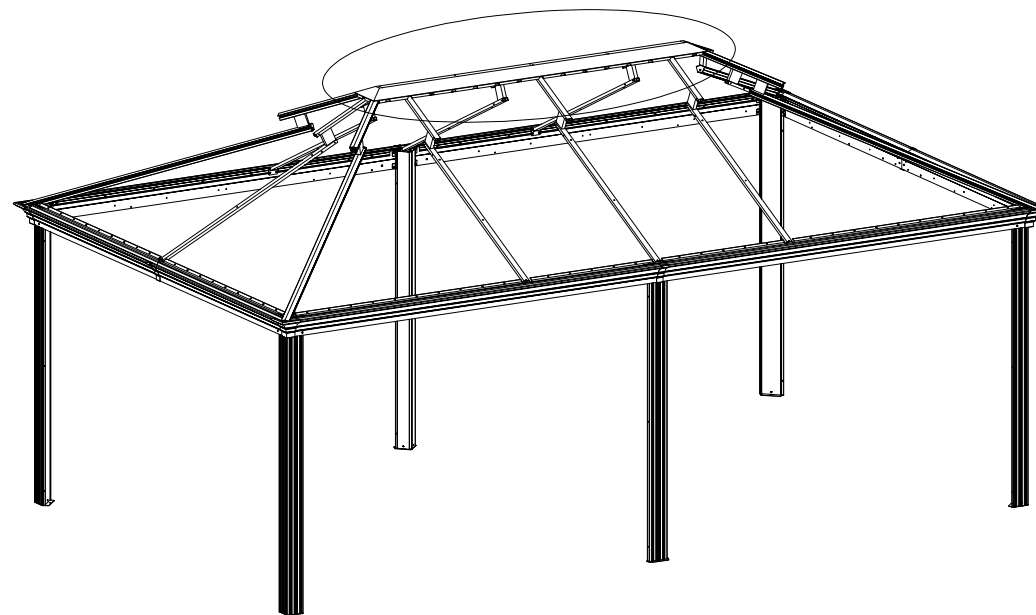

				 M6x15
G4 x2	G5 x2	G6 x2	N2 x4	1 x12

<16>

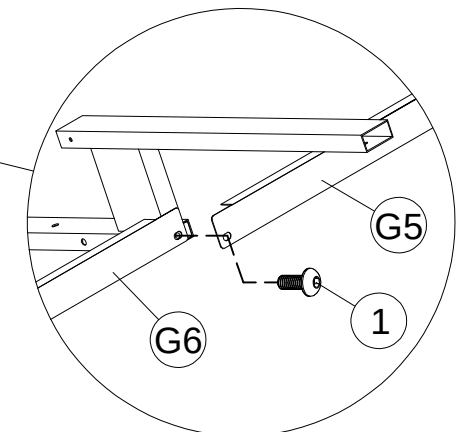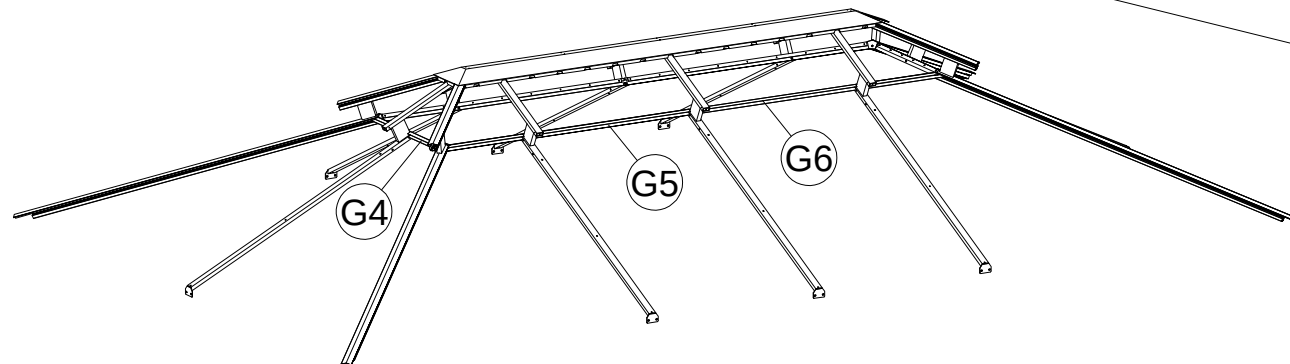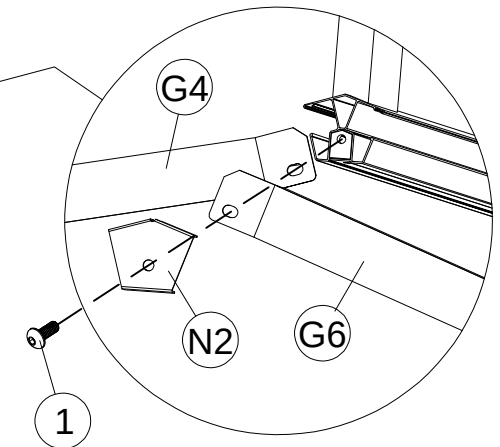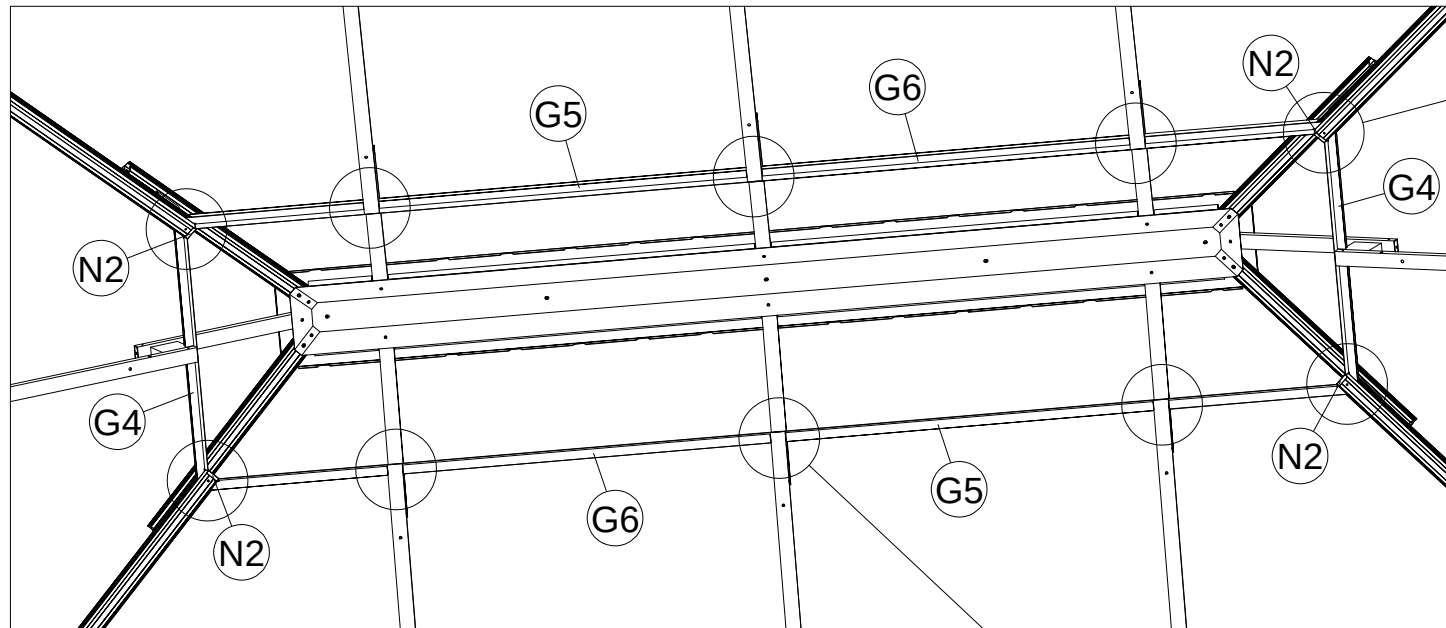



(H) x3





(5) x3




M6x50

(12) x6


<17>

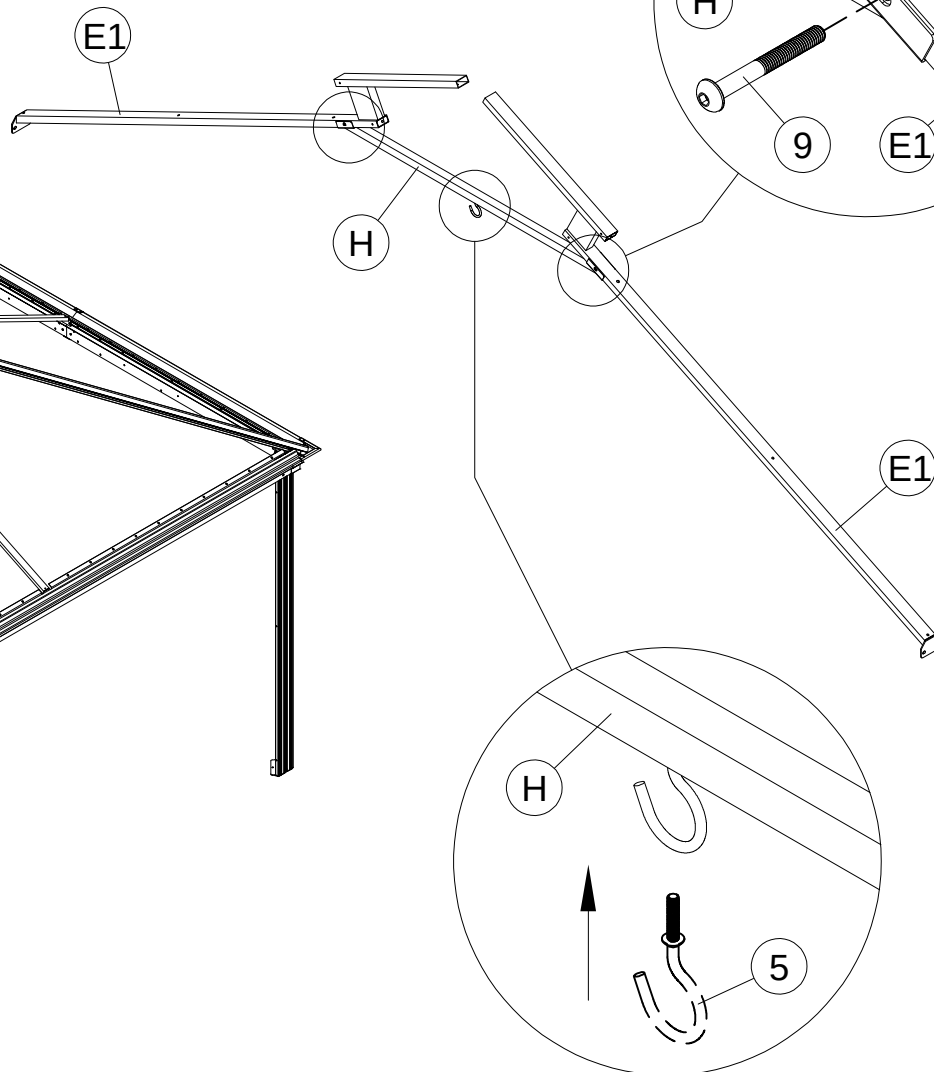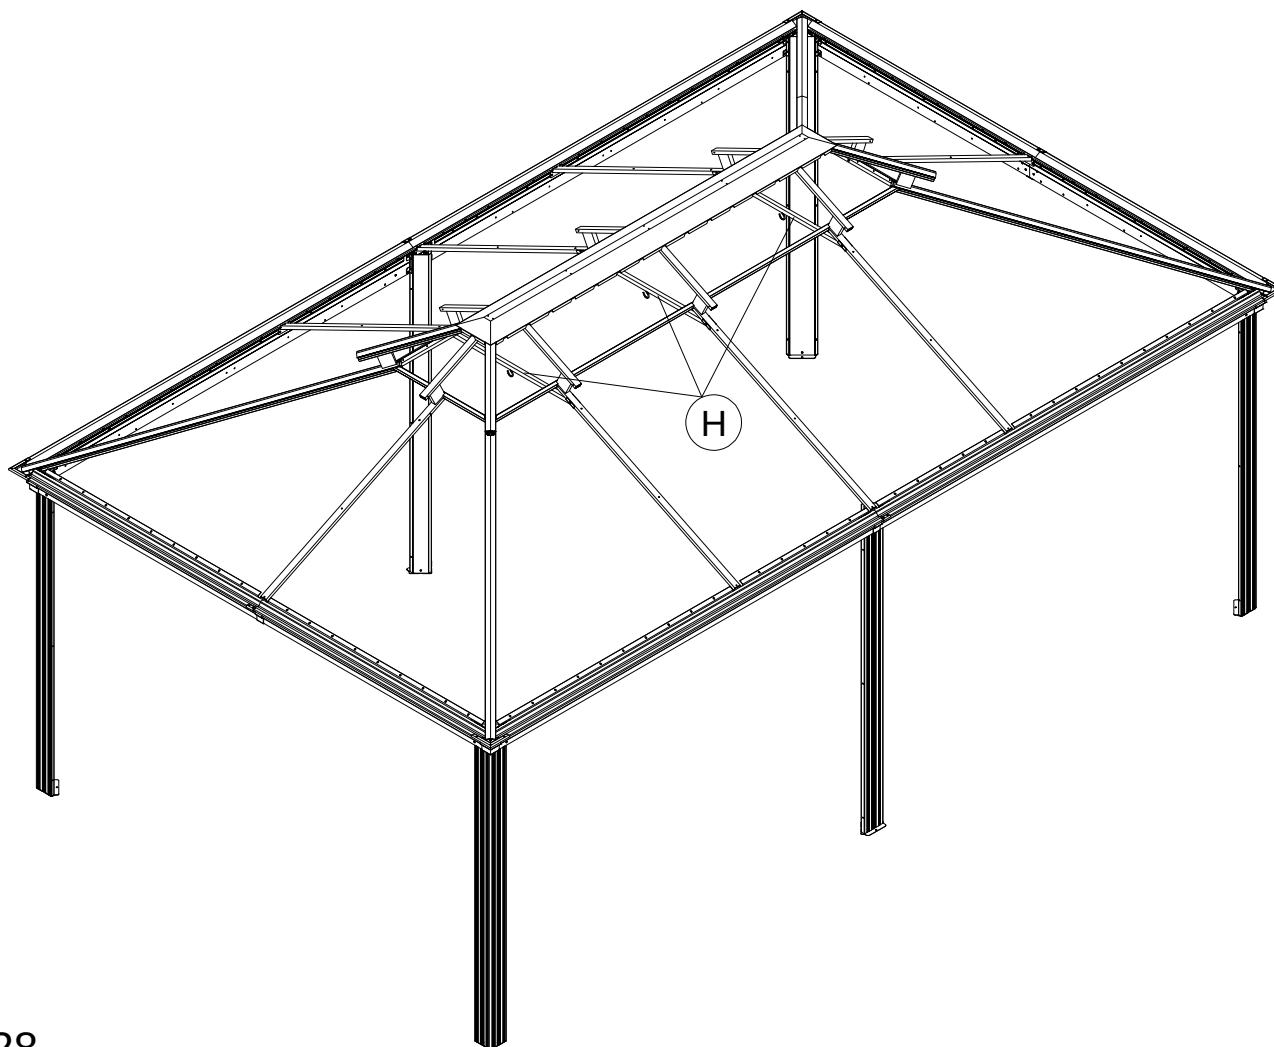


STEP 3

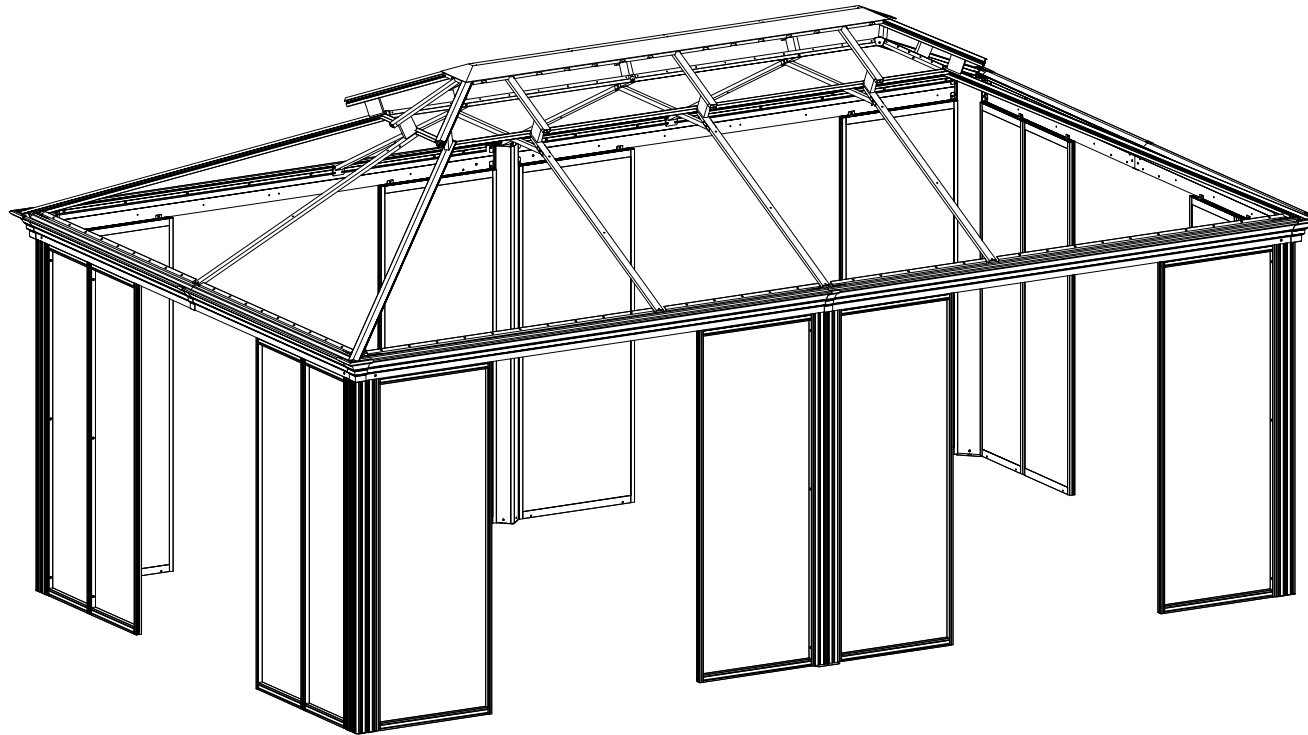

Tips: When installing the screws, don't tighten them all the way first, just roughly hold them in place, and when you're sure that all the parts are installed, then you can tighten the screws to secure the frame.

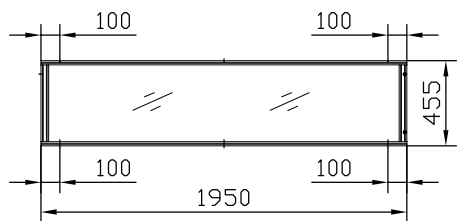

V1 x2

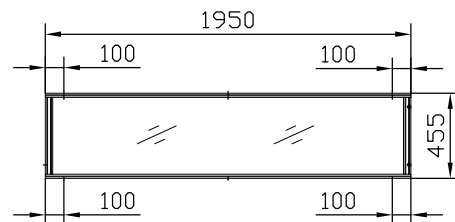

V2 x2



N5 x4




1 x8


M6x15




8 x12

<18>

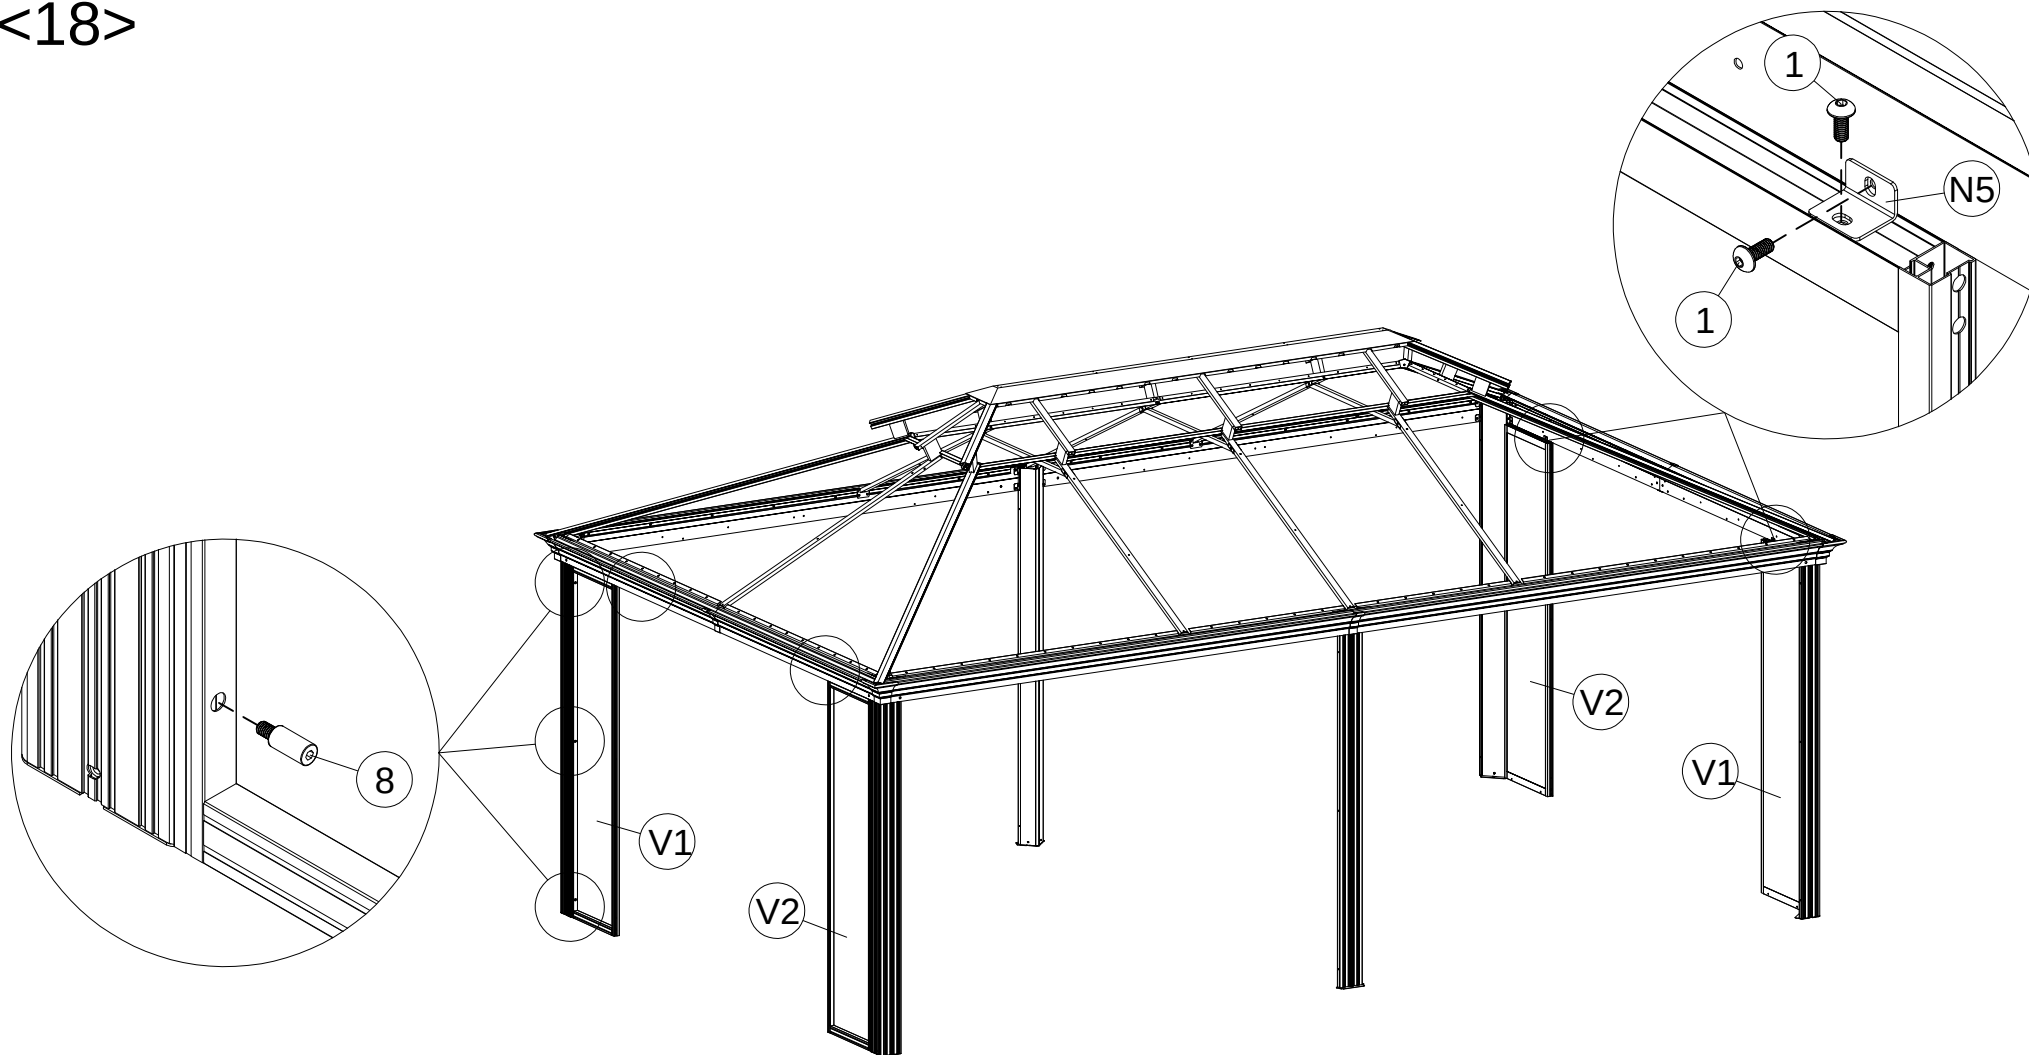

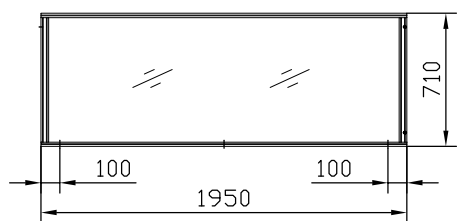

V5 x4

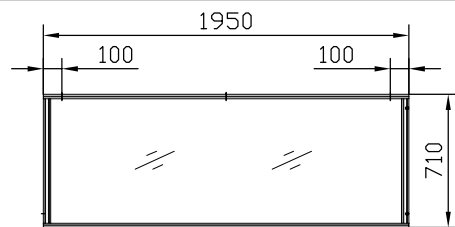

V6 x4



N5 x8






1 x16


M6x15




8 x24

<19>

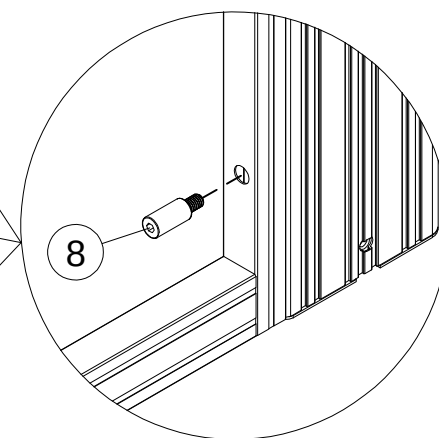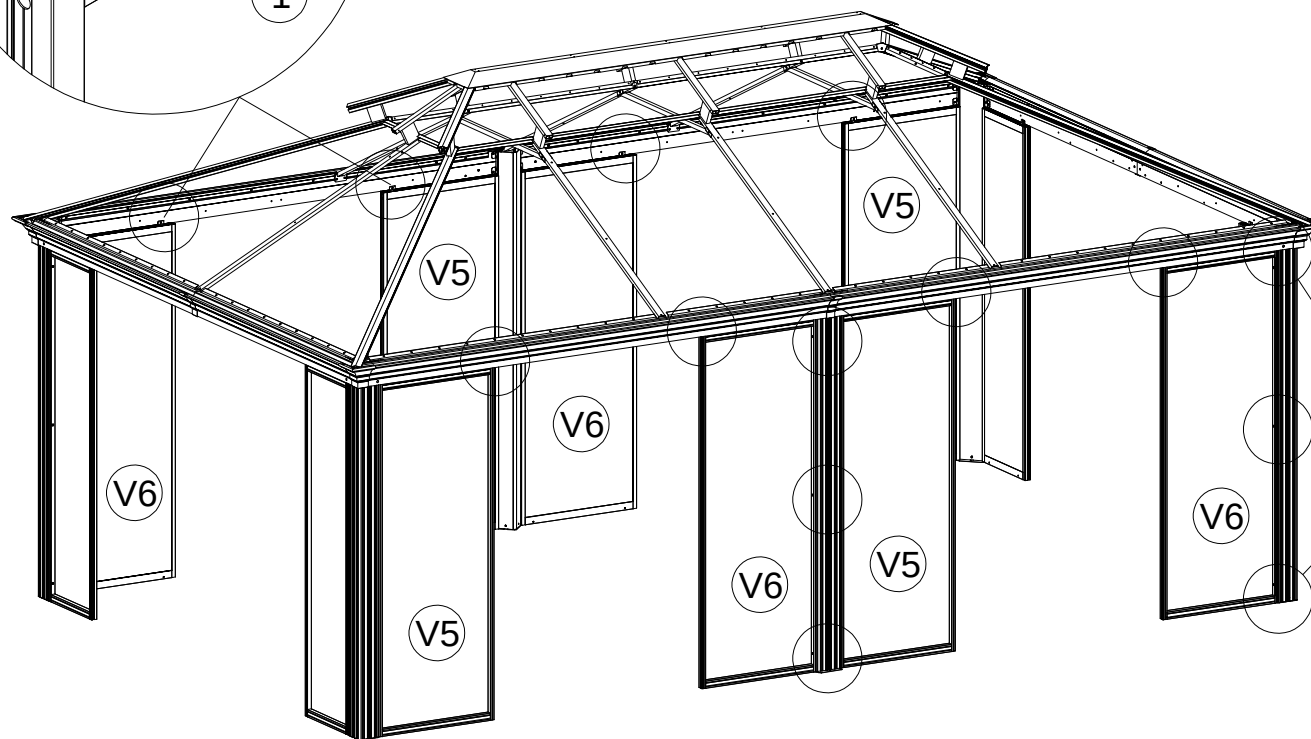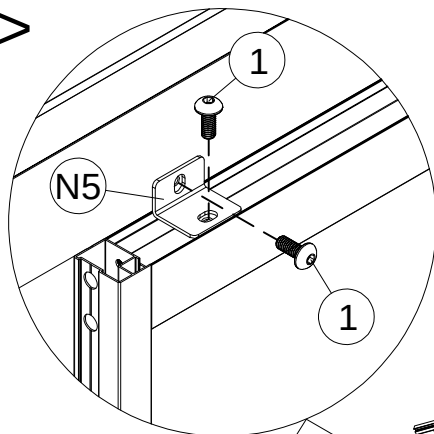

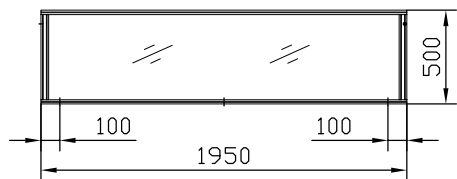

V3 x2

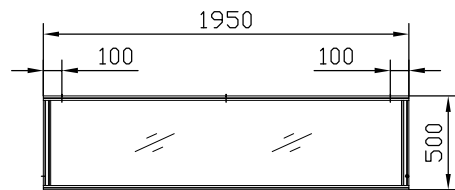

V4 x2



N5 x4






1 x8

M6x15




8 x12



<20>

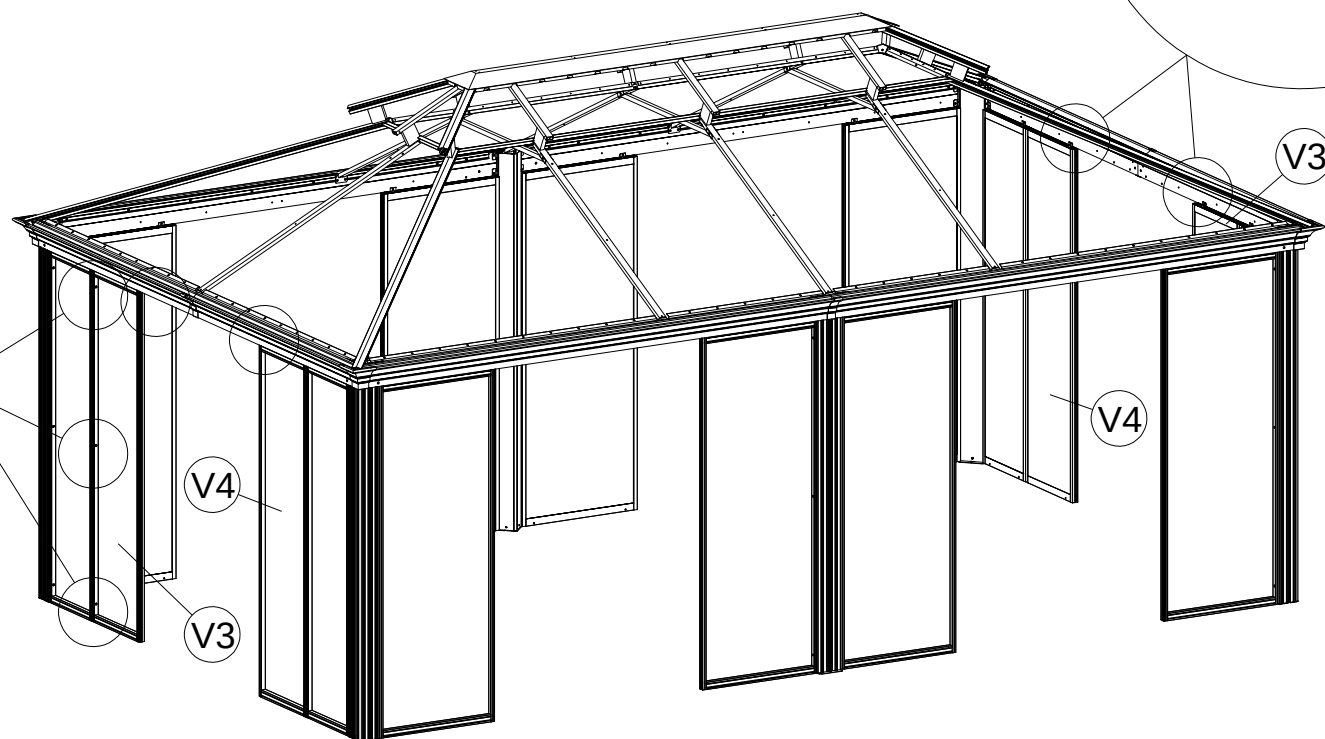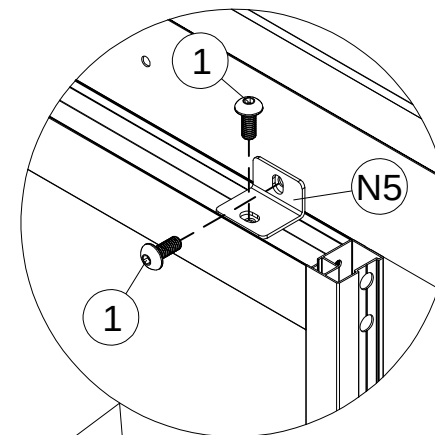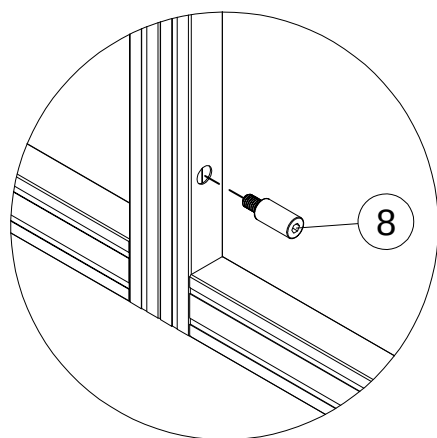



STEP 4


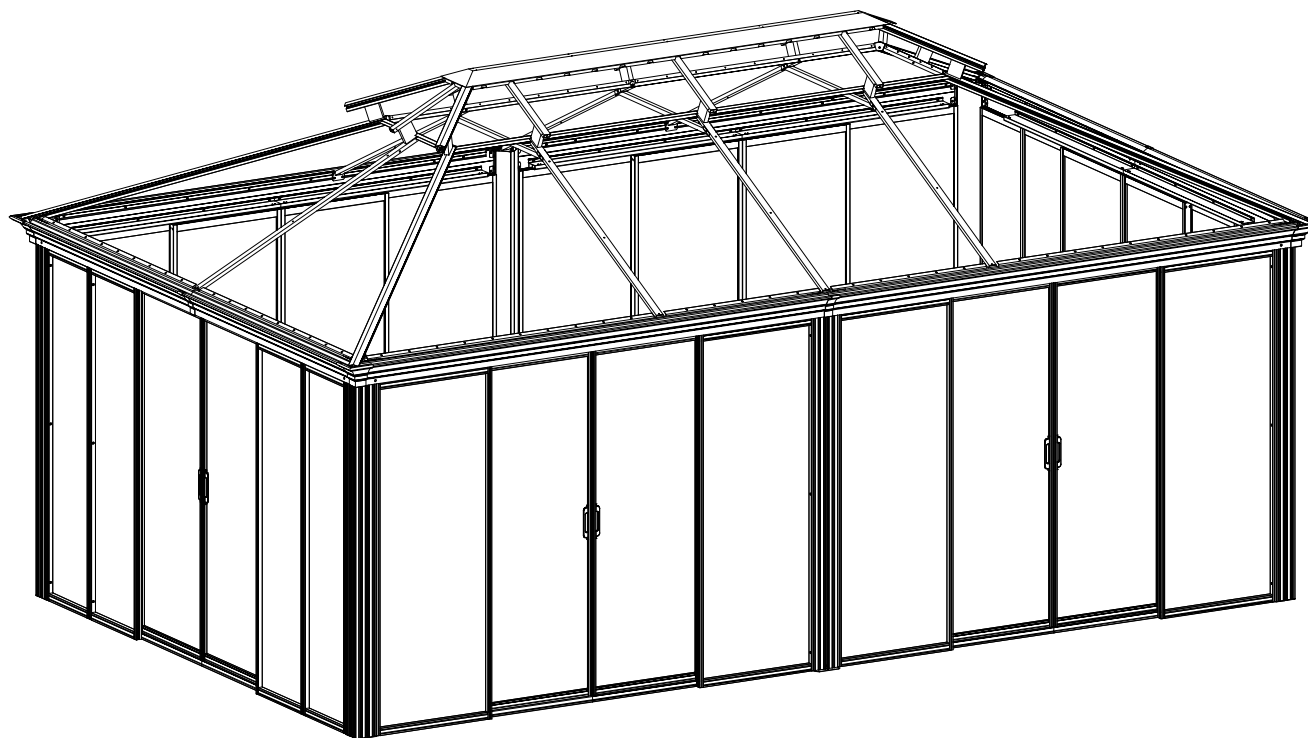


Tips: When installing the screws, don't tighten them all the way first, just roughly hold them in place, and when you're sure that all the parts are installed, then you can tighten the screws to secure the frame.



 D4 x2	 D5 x2	 P1 x2	 1 x8 M6x15
--	---	---	--

<21>

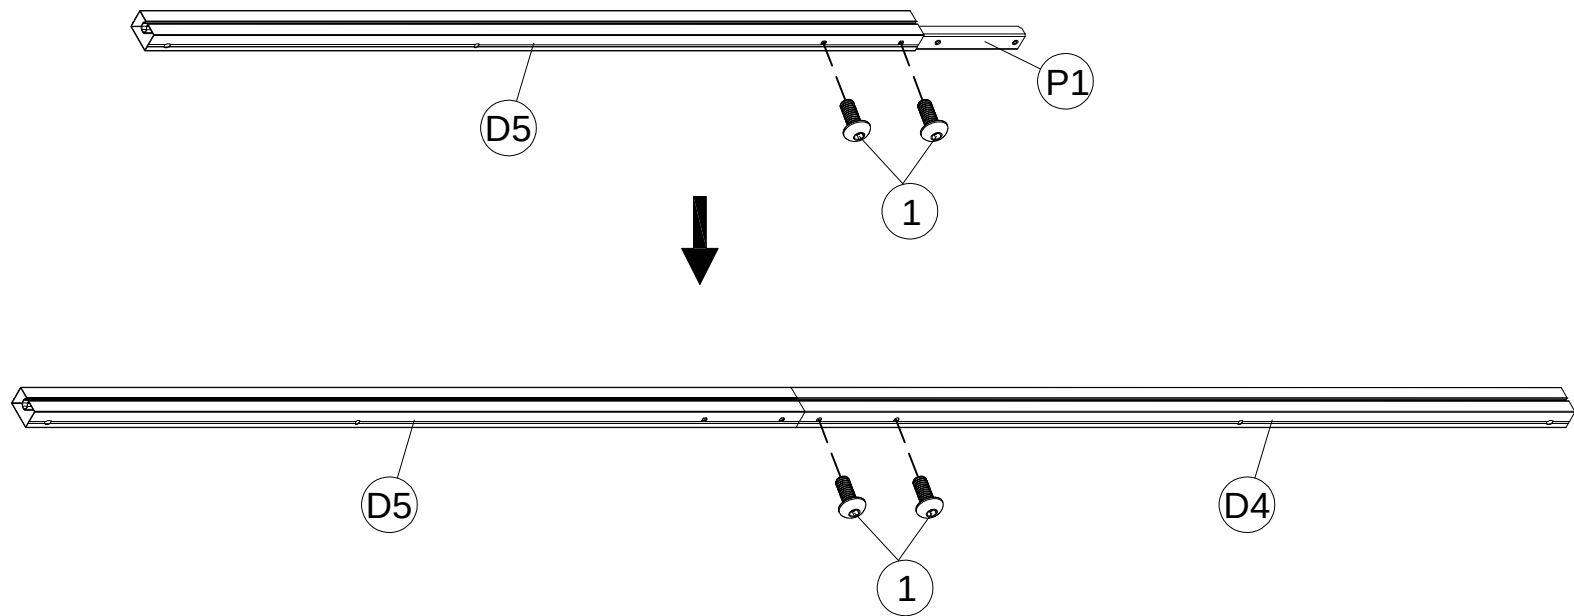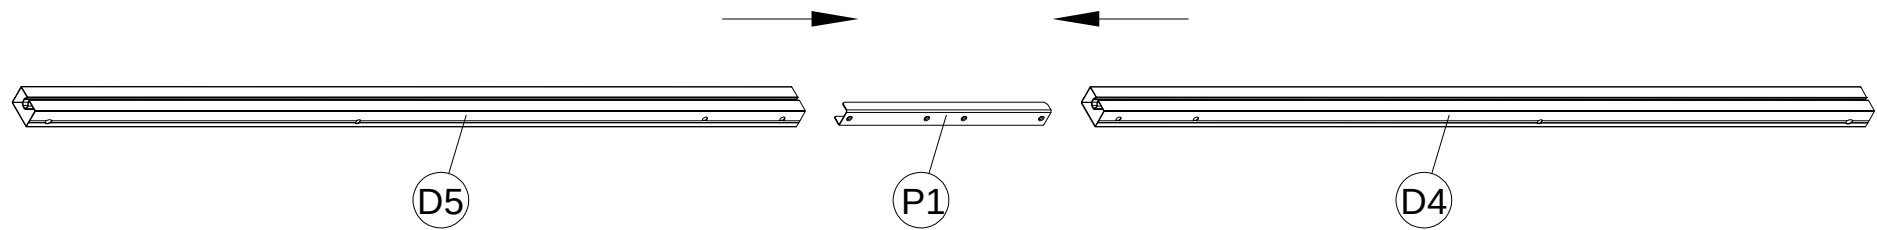


 D6 x2	 D7 x2	 P1 x2	 1 x8 M6x15
--	---	---	--

<22>

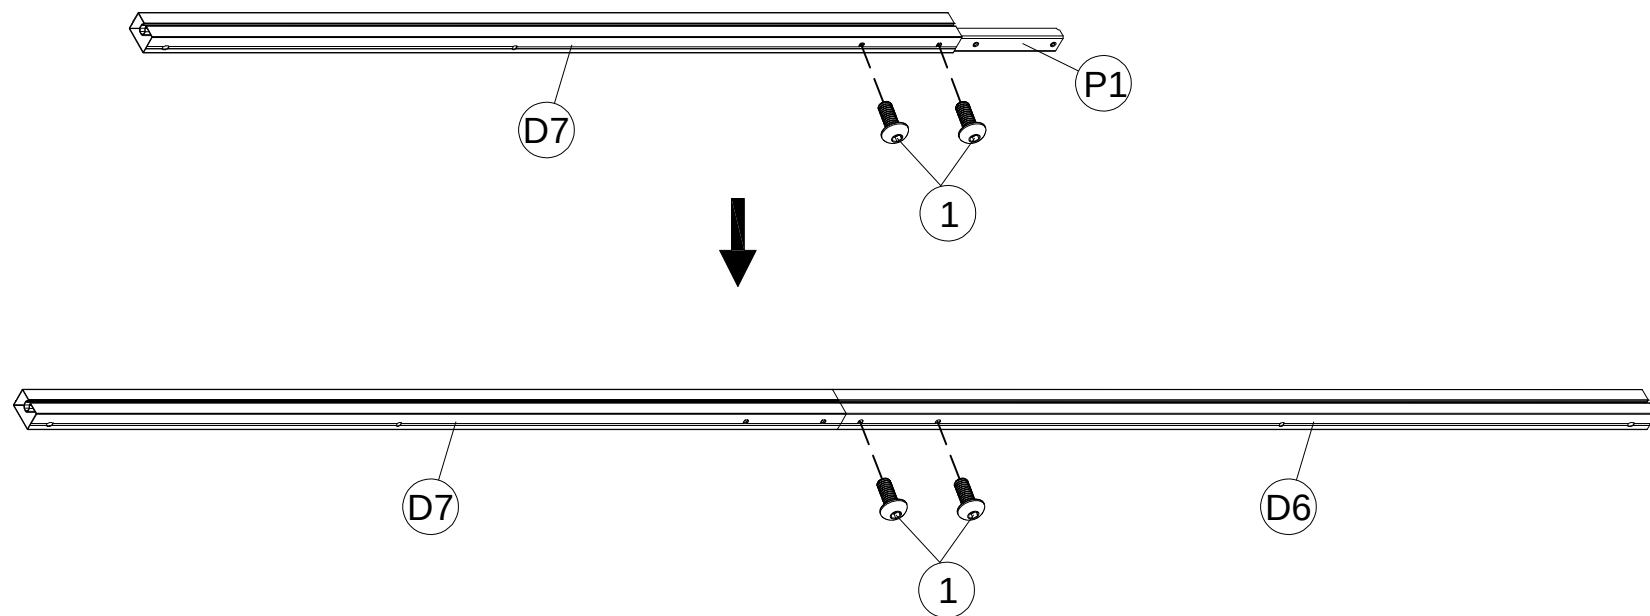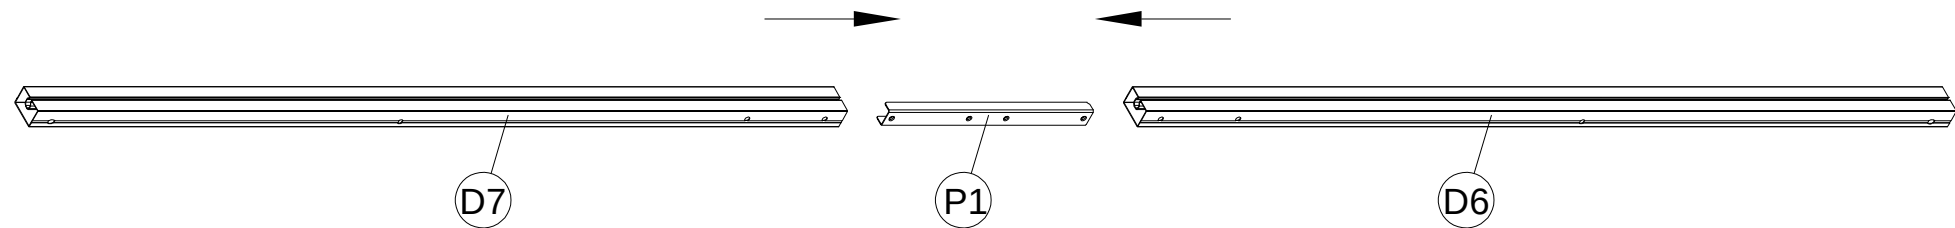



N5 x16






M6x60


11 x24

<23>

1

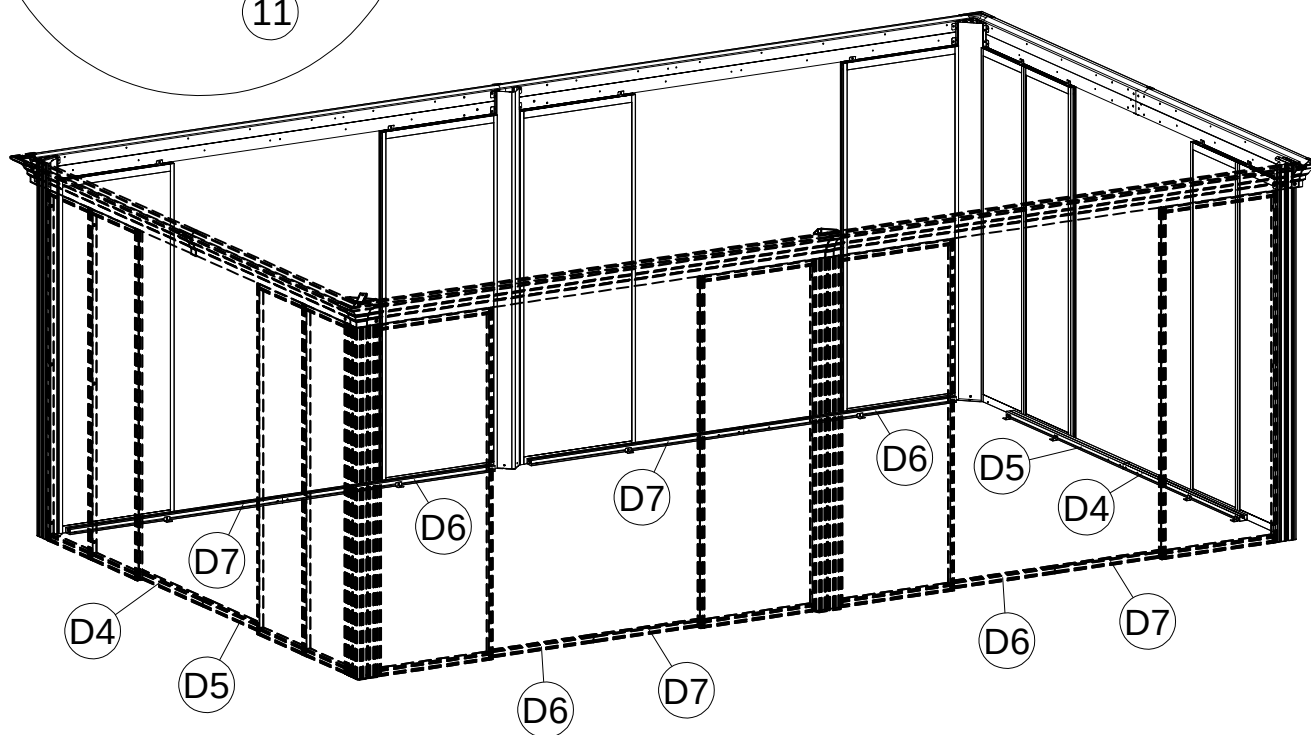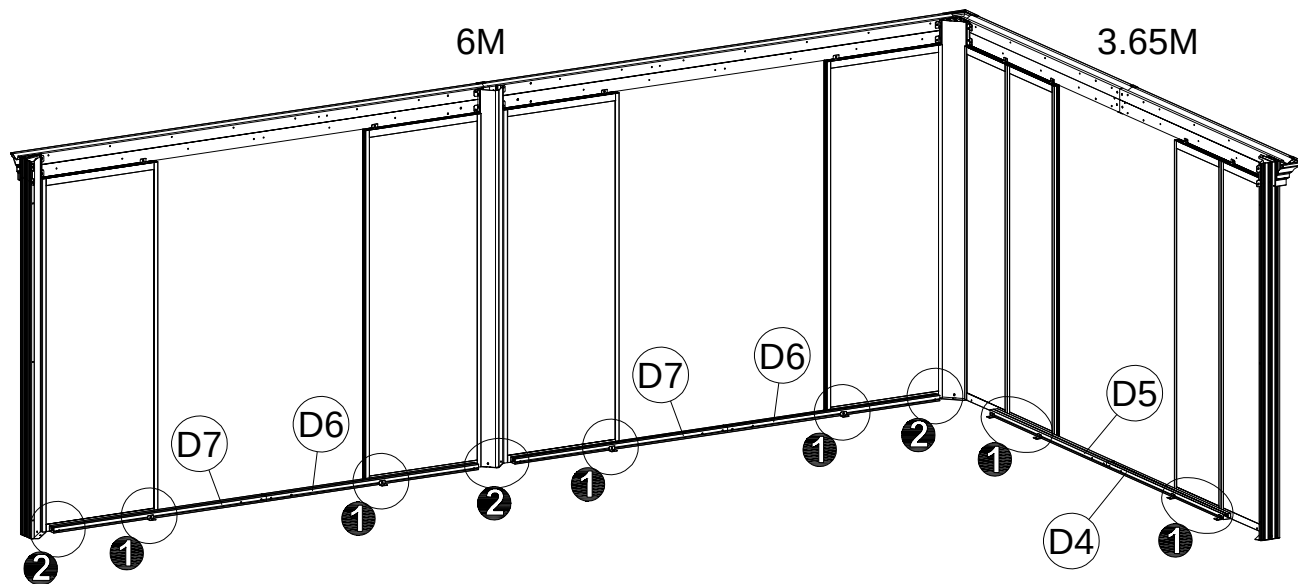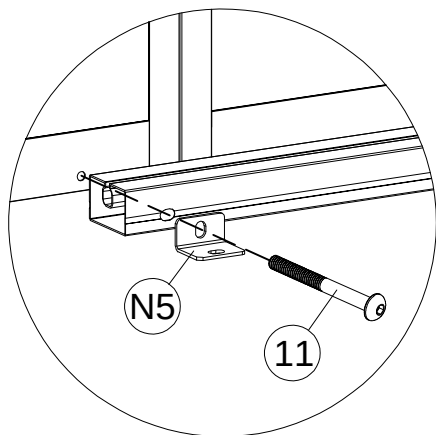

2

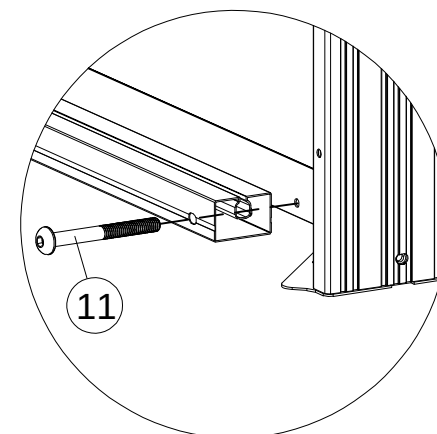




V7 x6



U2 x12



U3 x12




M6x15

1 x24




M6x15



9 x24

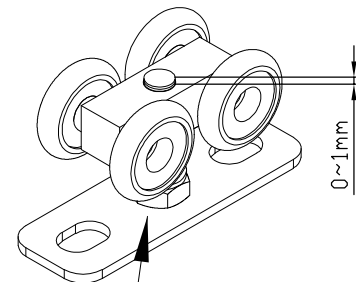


<24>

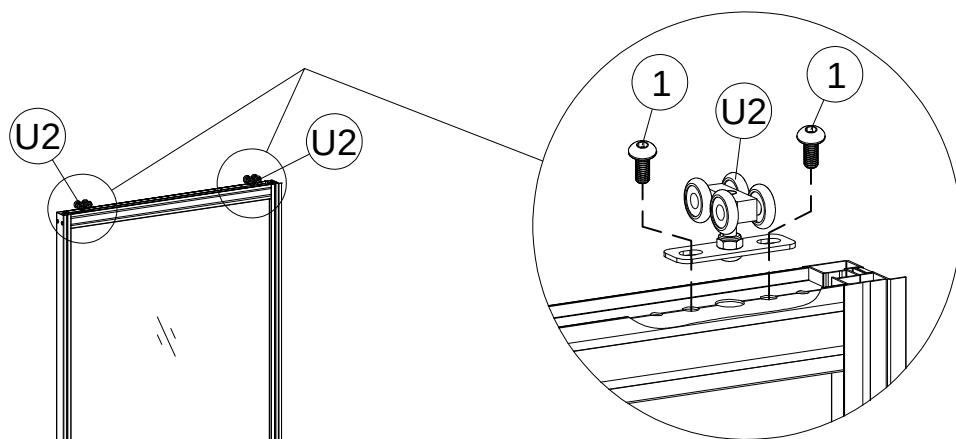


After installing the pulley, rotate the pulley left or right until the middle screw is in the same level of the block, max 0-1mm higher than the block.

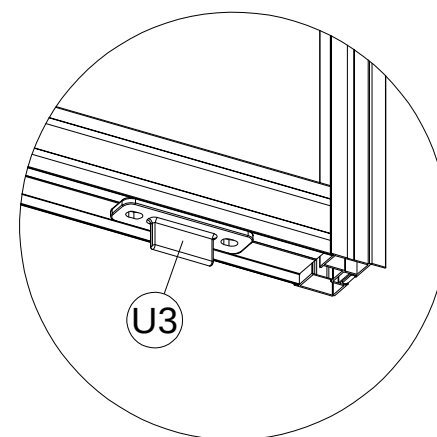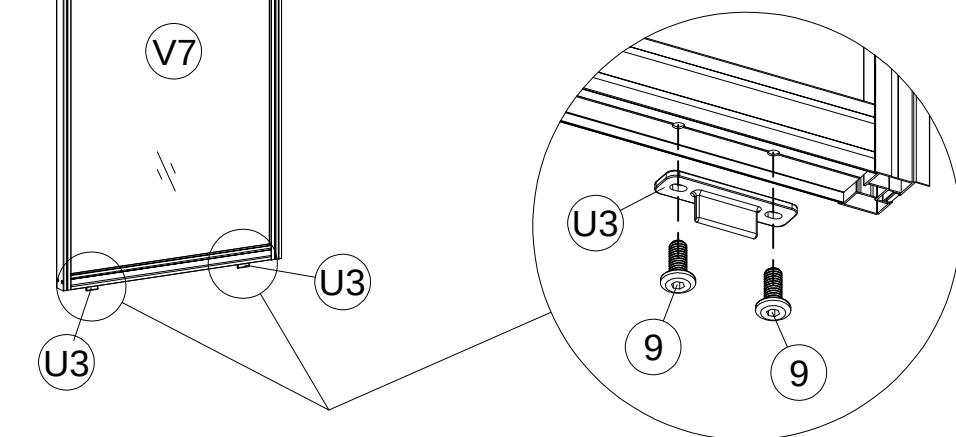

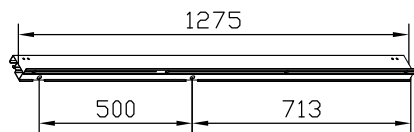

(D) x2

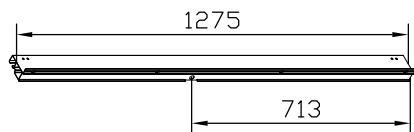

(D2) x4





(U1) x12




M5x25

(10) x12

<25>

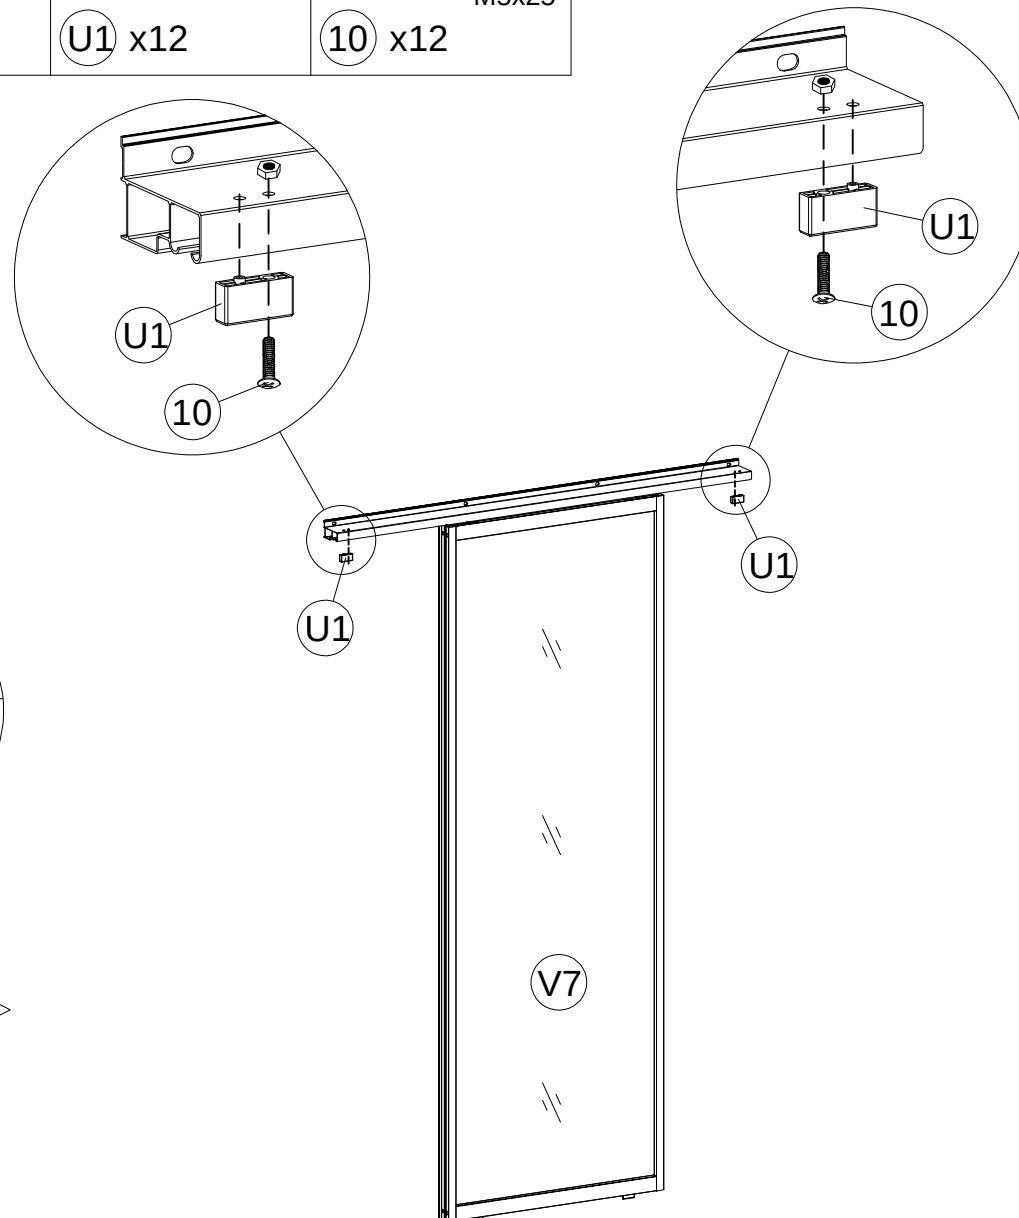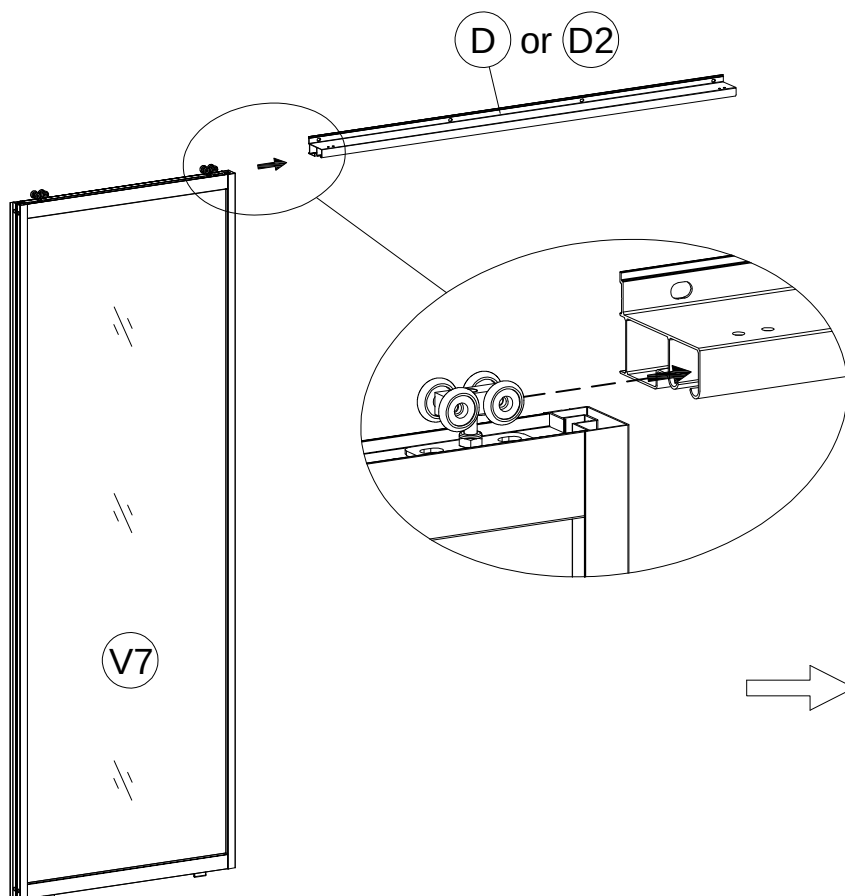


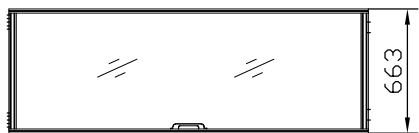

V8 x6



U2 x12



U3 x12




M6x15

1 x24




M6x15





9 x24

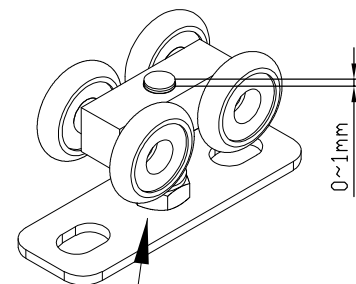


<26>

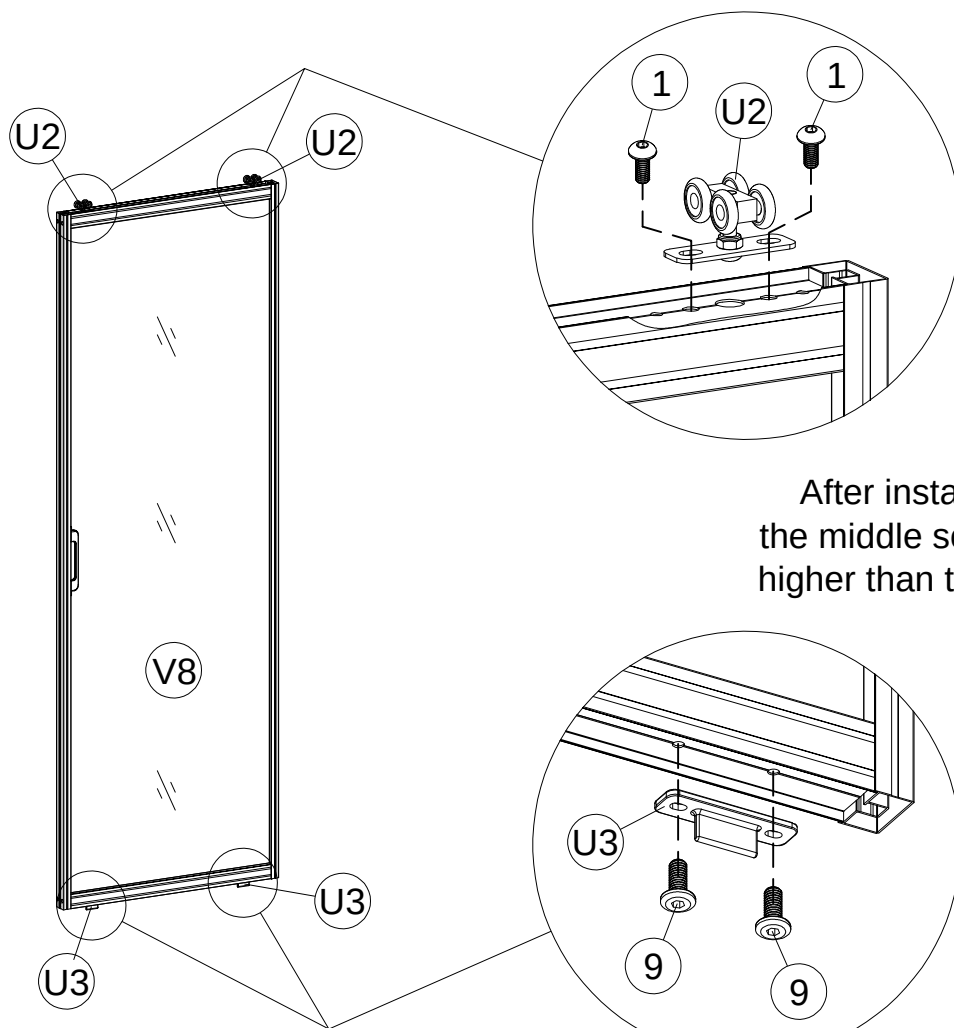


After installing the pulley, rotate the pulley left or right until the middle screw is in the same level of the block, max 0-1mm higher than the block.

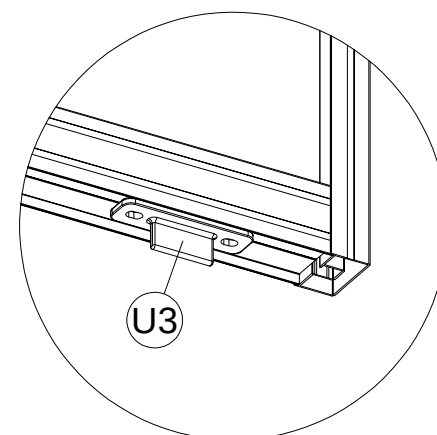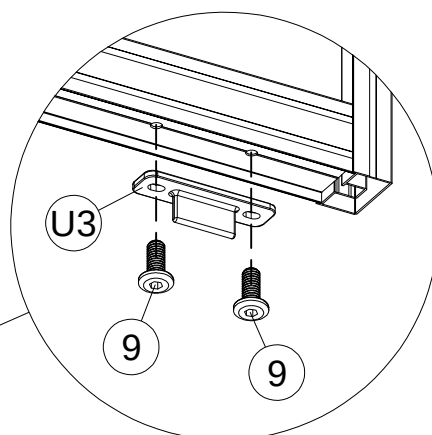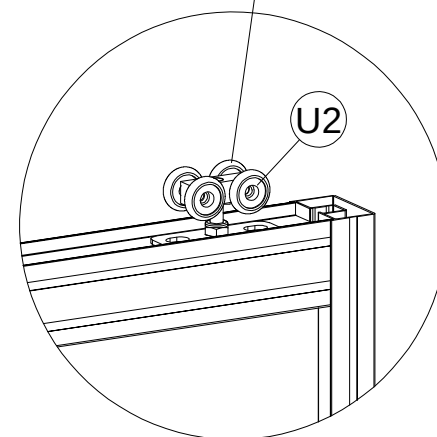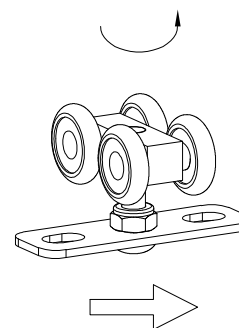

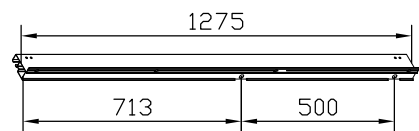

(D1) x2

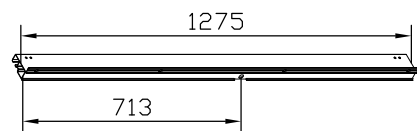

(D3) x4





(U1) x12




M5x25

(10) x12

<27>

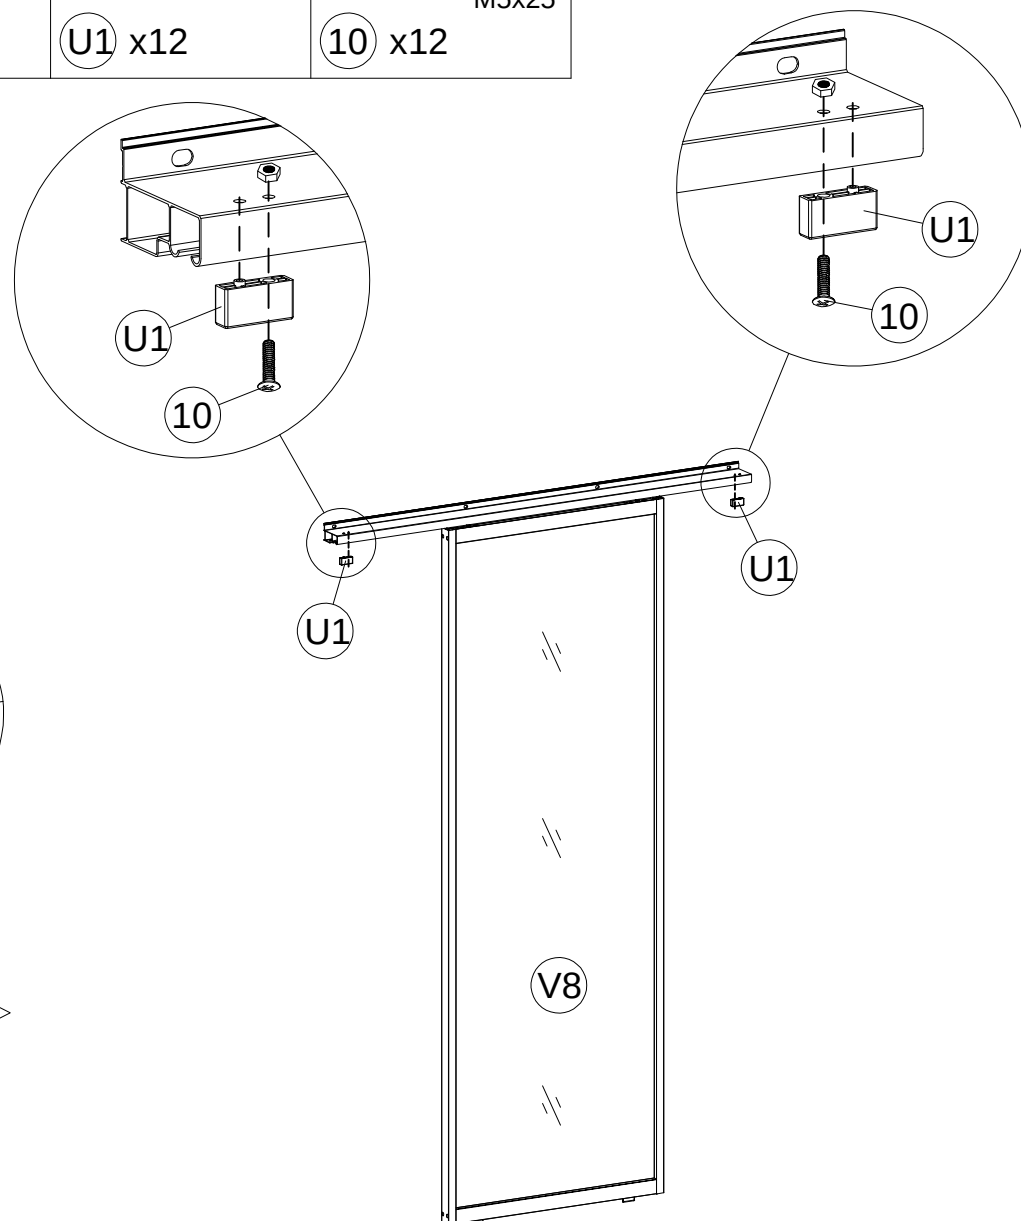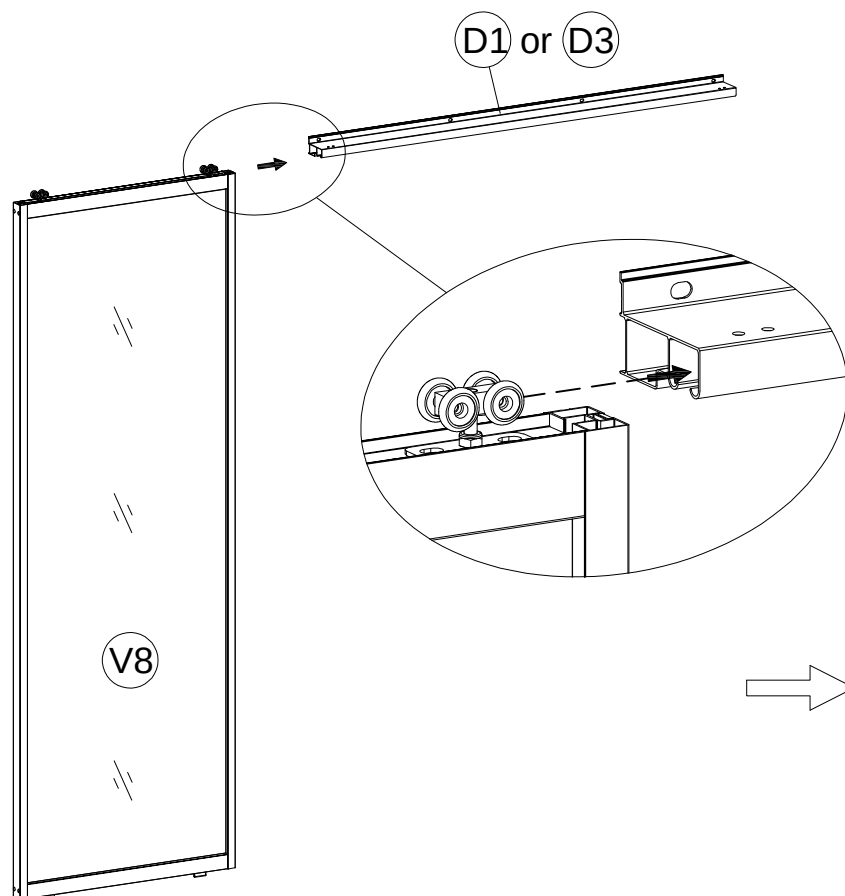

<28>

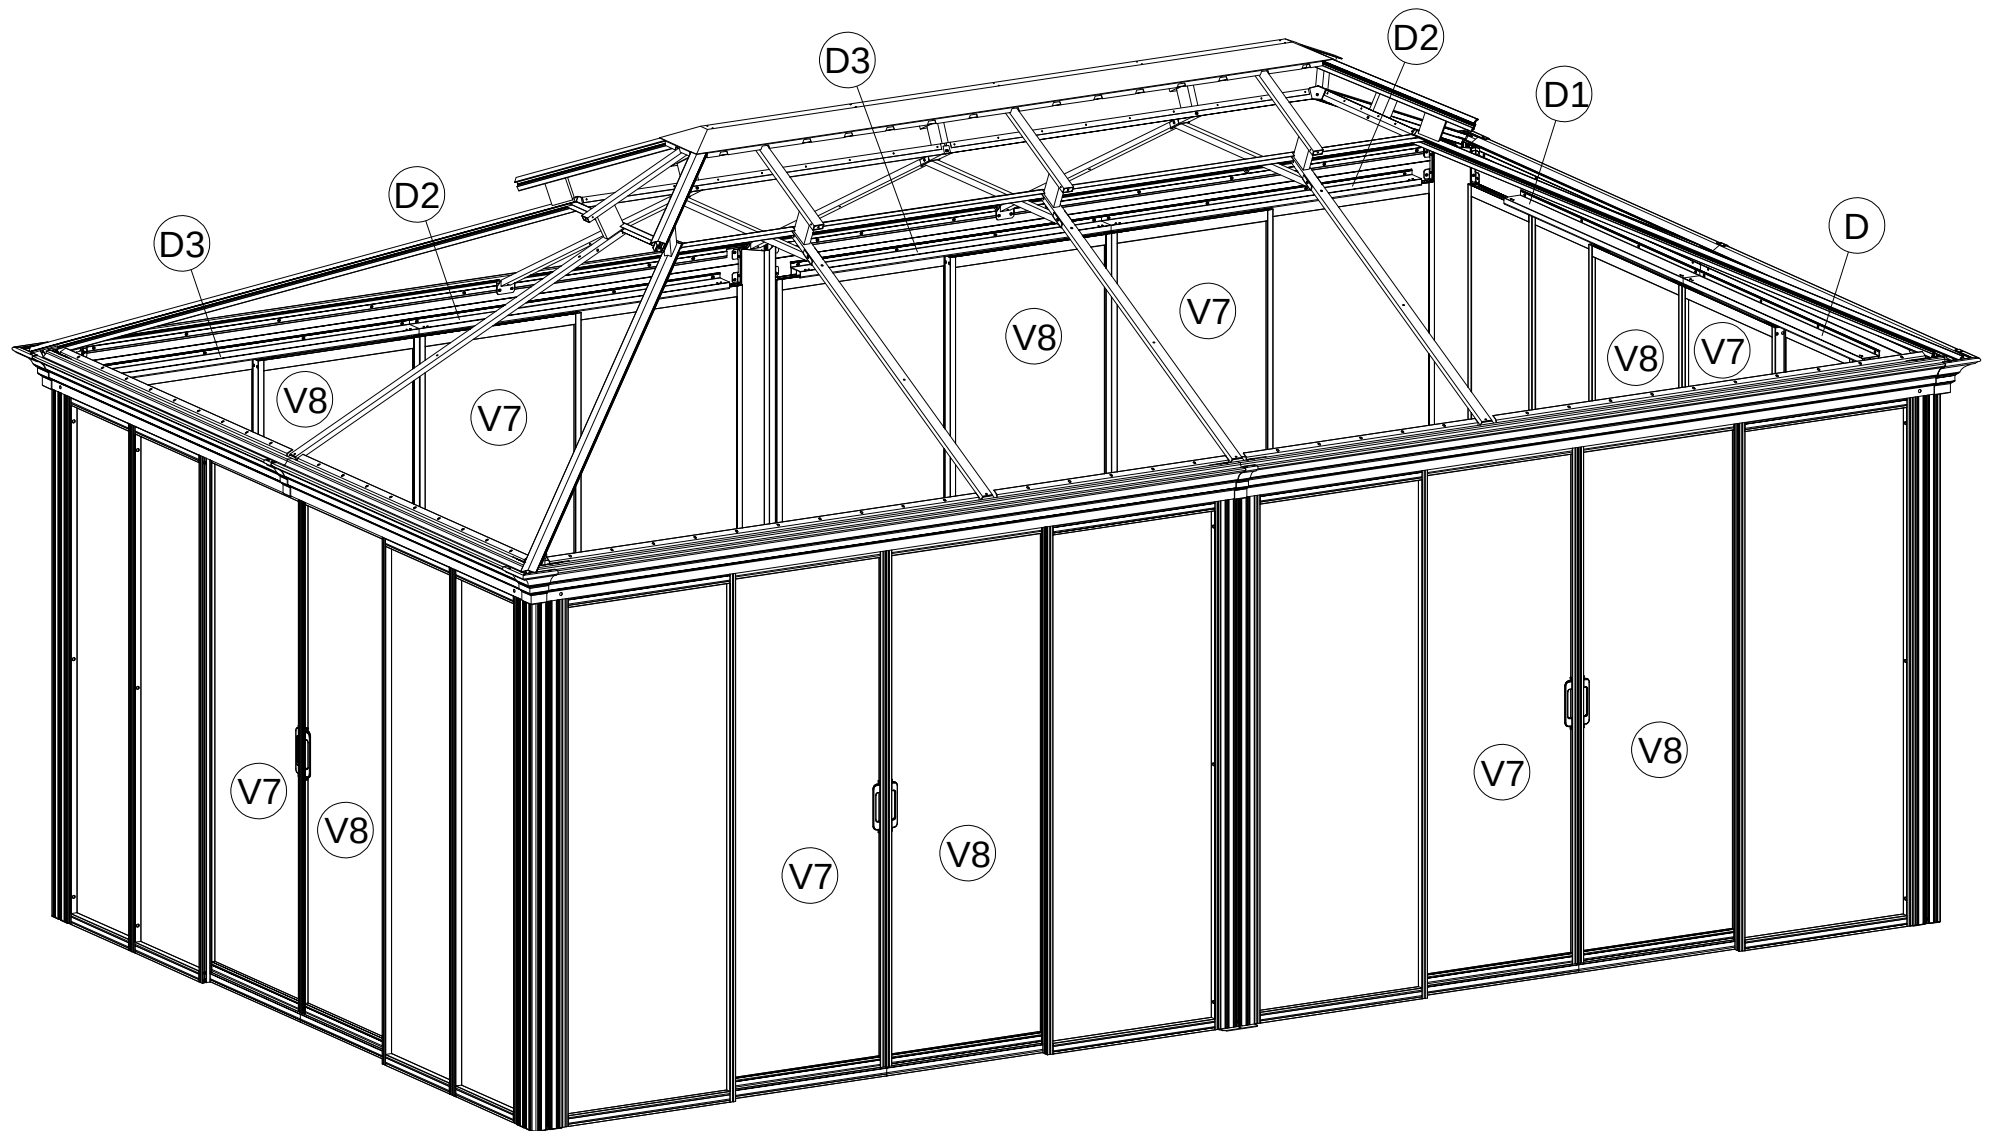





M6x15

1 x16


<29>

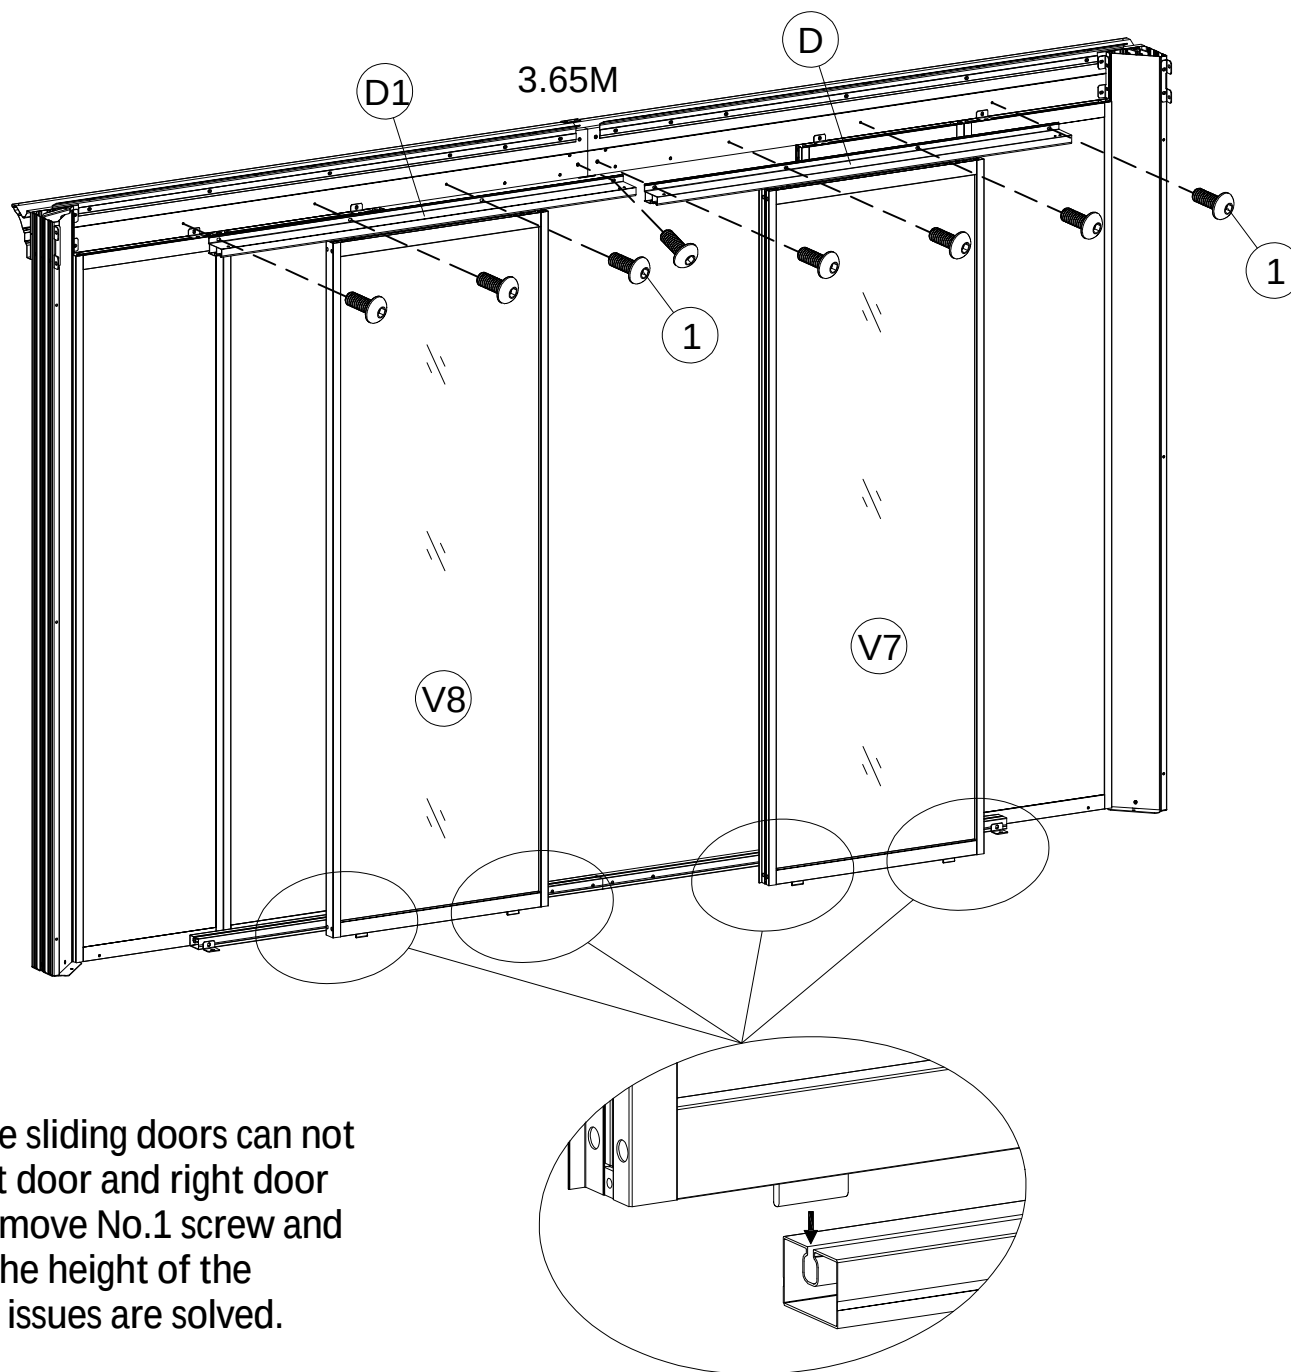


After installation, if the sliding doors can not slide smoothly, or the left door and right door do not close properly, remove No.1 screw and return to P37. Readjust the height of the pulley until all the above issues are solved.

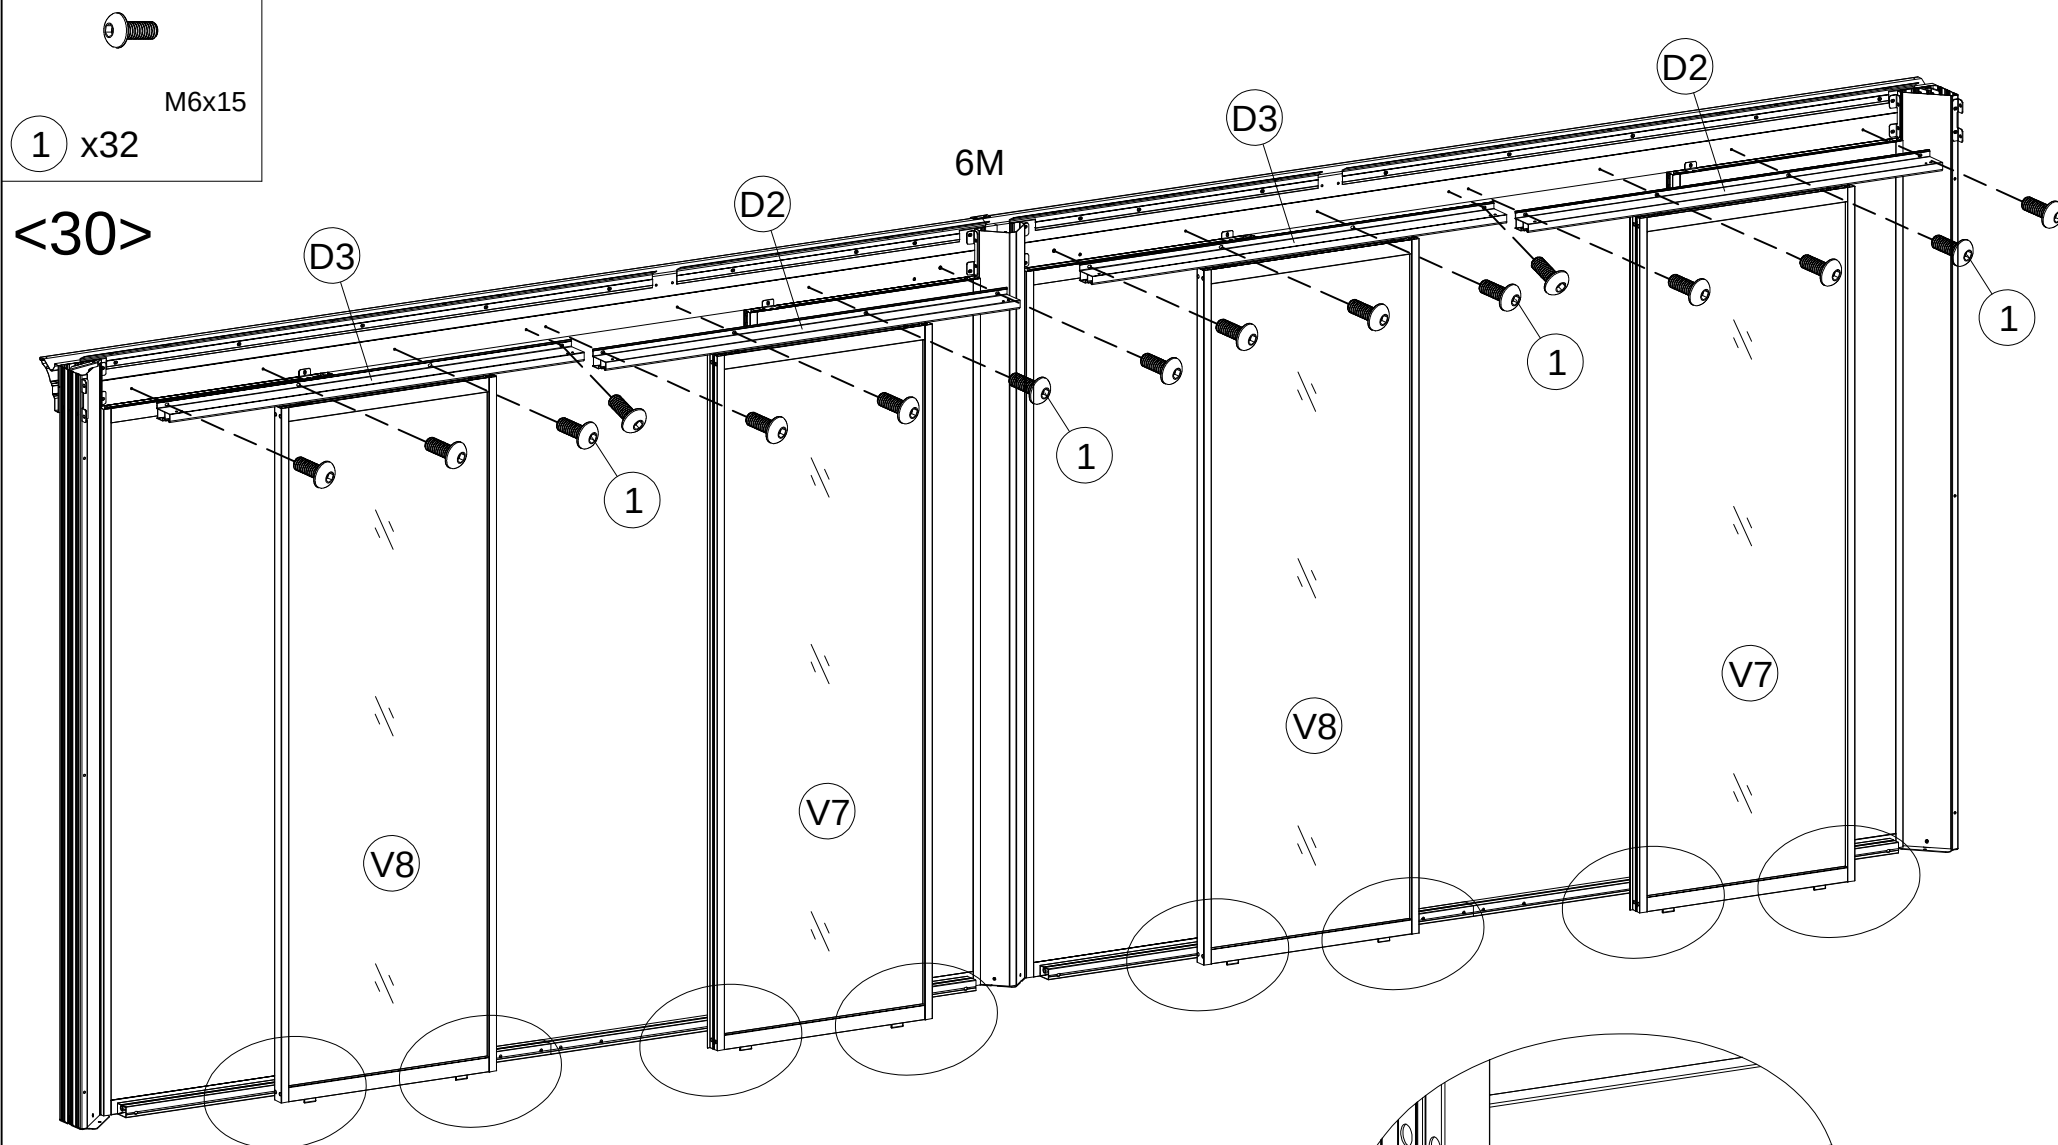


After installation, if the sliding doors can not slide smoothly, or the left door and right door do not close properly, remove No.1 screw and return to P39. Readjust the height of the pulley until all the above issues are solved.

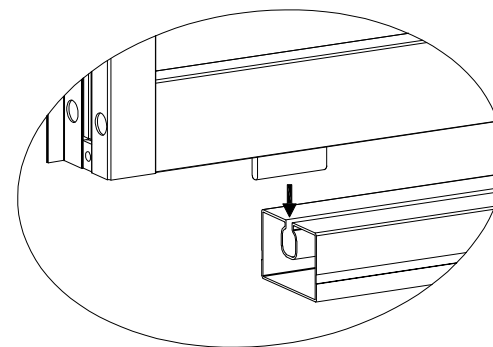


STEP 5

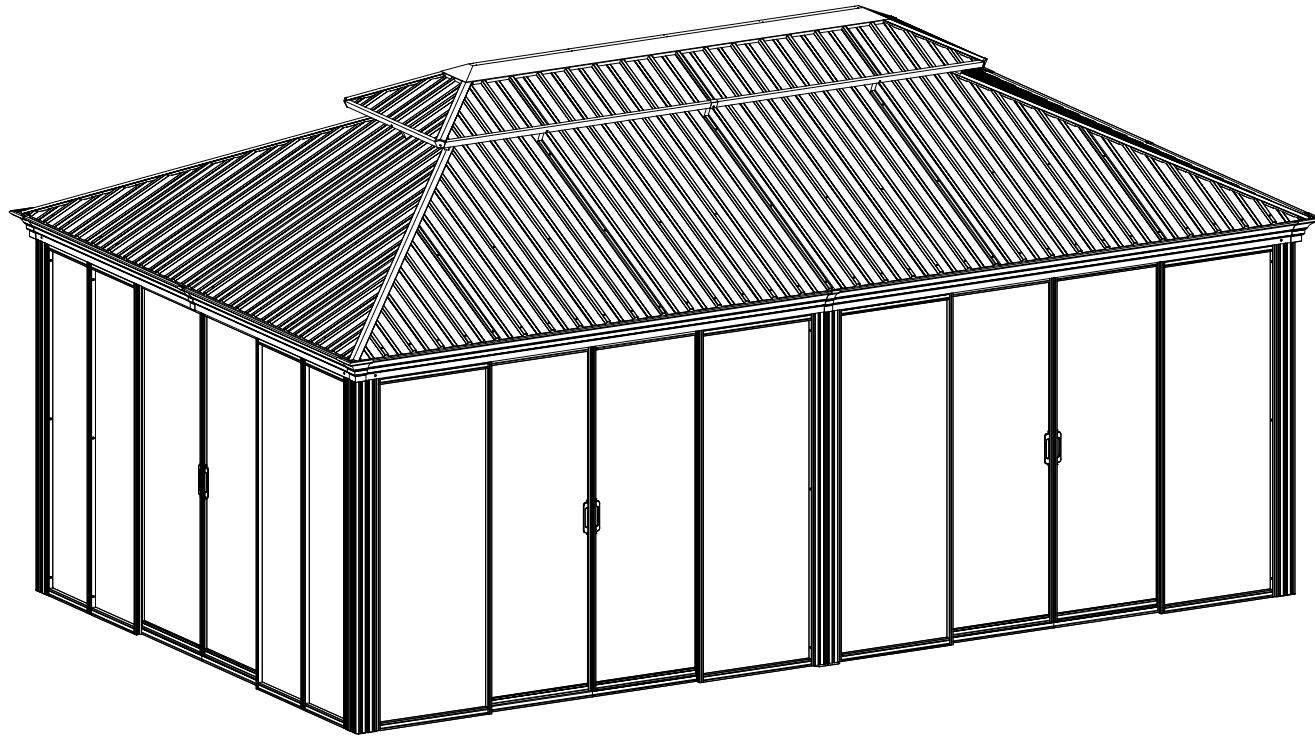


Tip: Be sure to hang the nettings on the inside track and the privacy curtains on the outside track

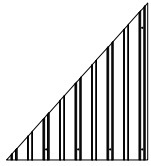


Q1 x2

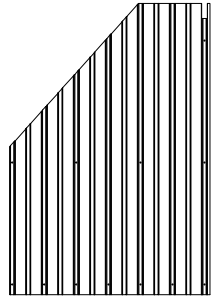


Q2 x2

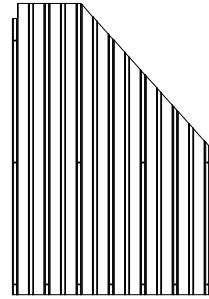

Q3 x2




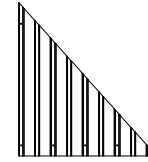


Q4 x2




S x2


<31>

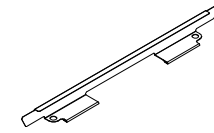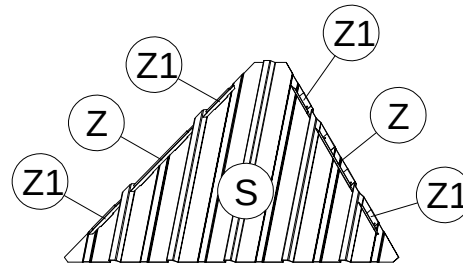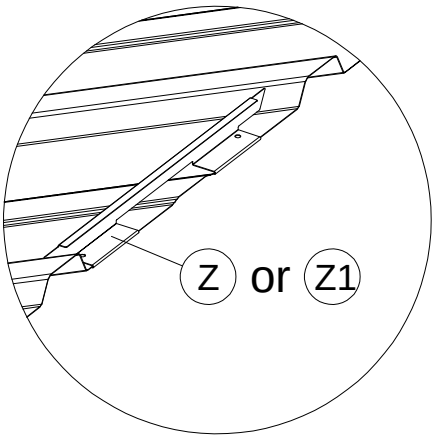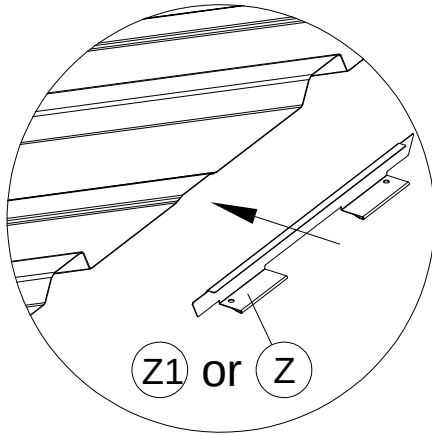


Z x36




Z1 x8

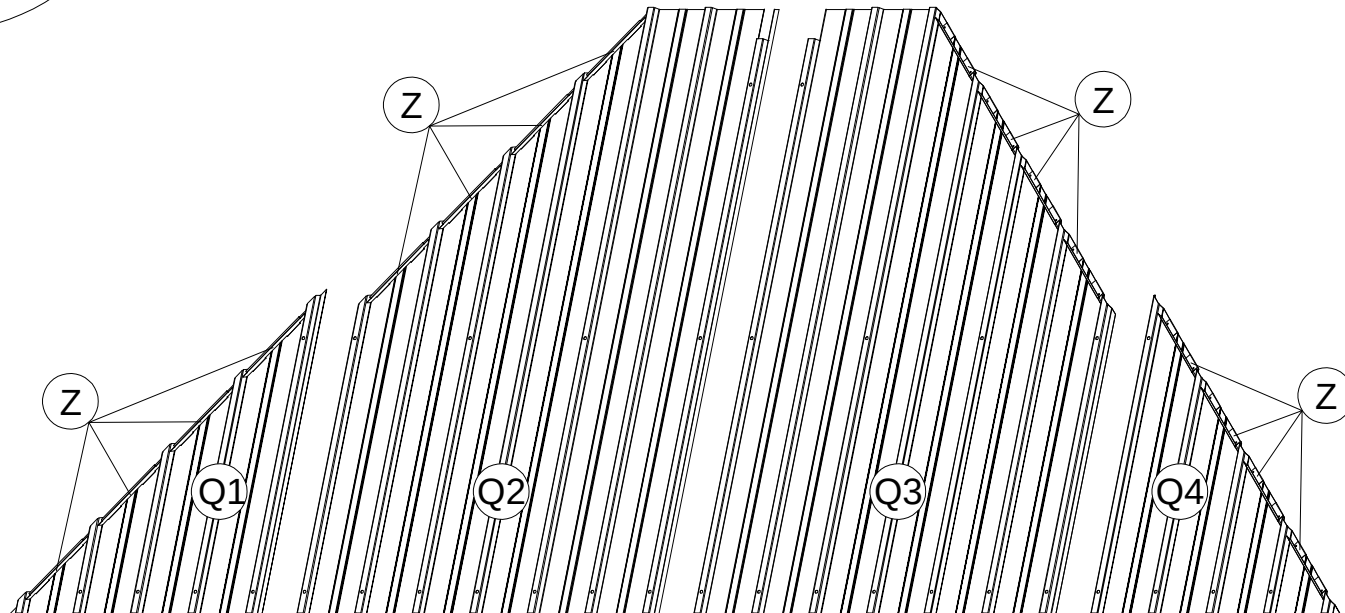


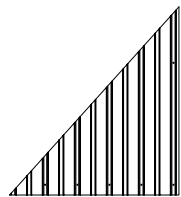


R1 x2

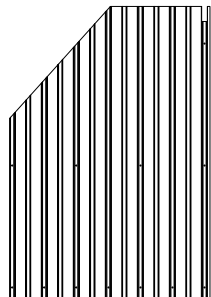

R2 x2

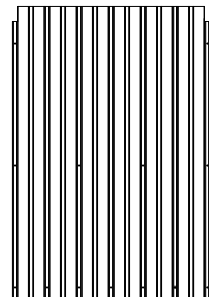

R3 x2




S1 x2




S3 x2



<32>

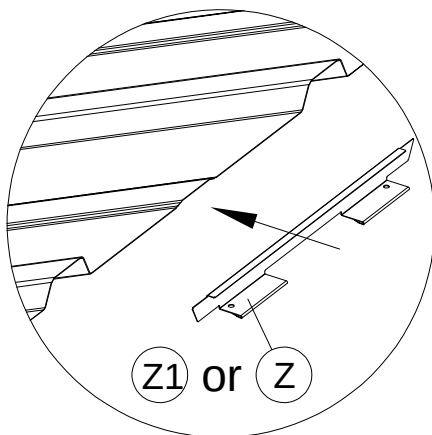


Z1 or Z

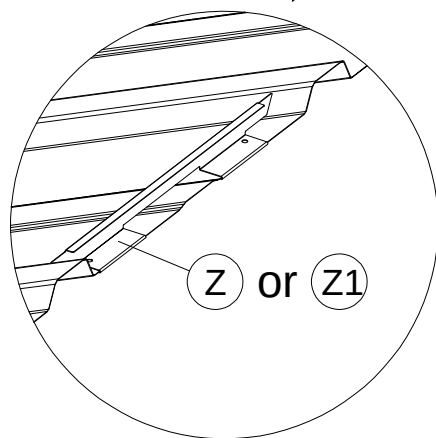


Z or Z1

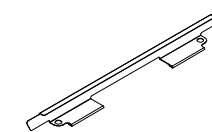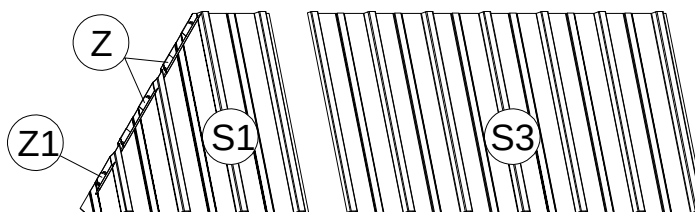


Z x20




Z1 x2

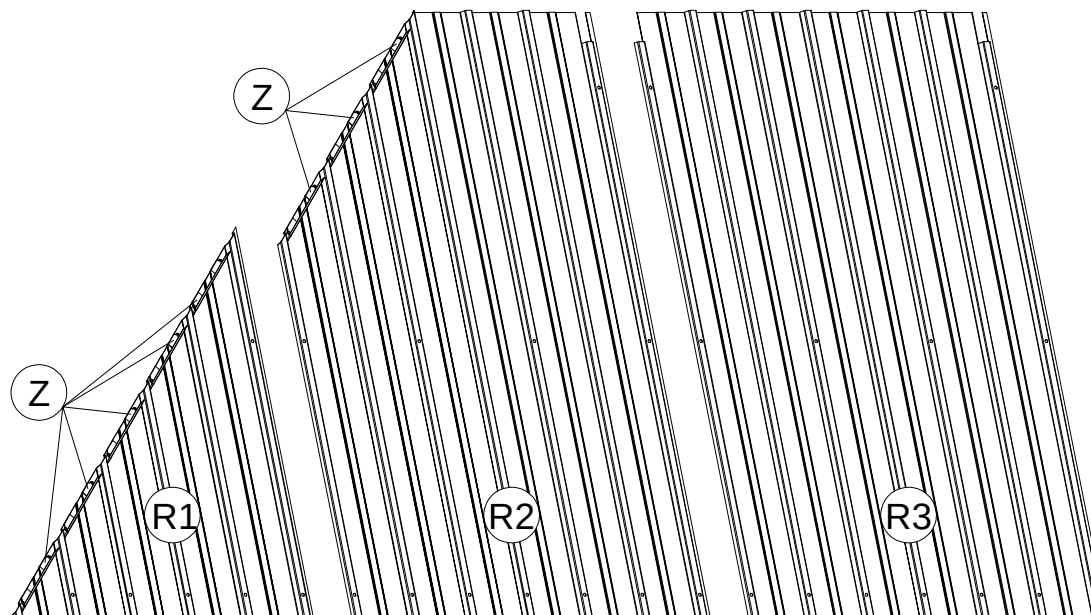


(R3) x2

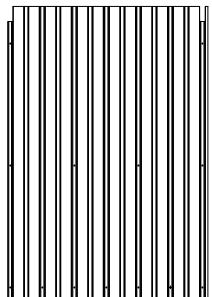


(R4) x2

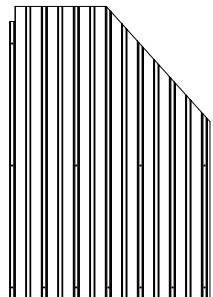


(R5) x2

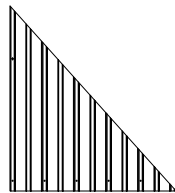










(S2) x2







(S3) x2




<33>

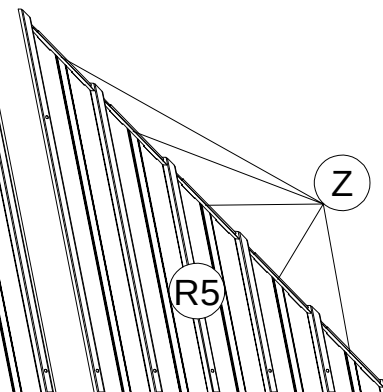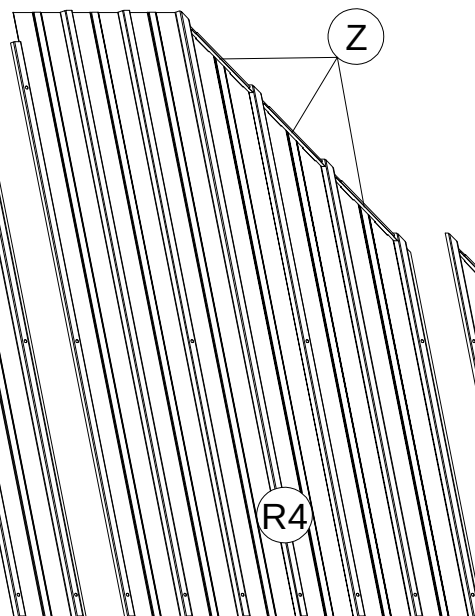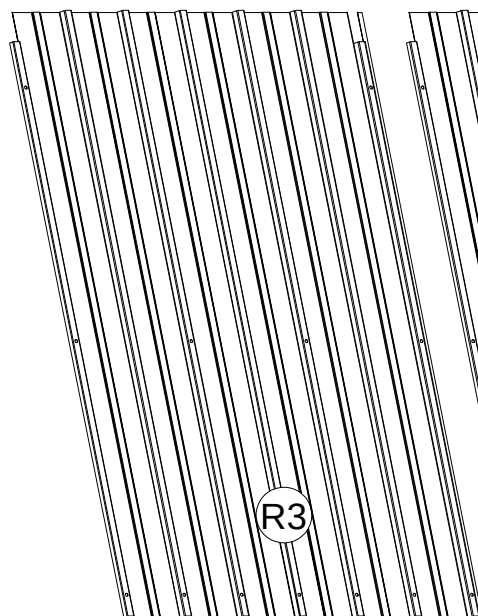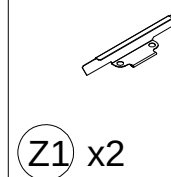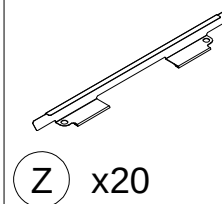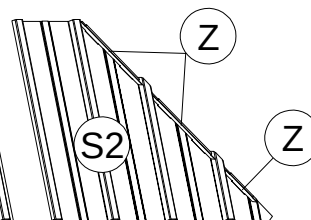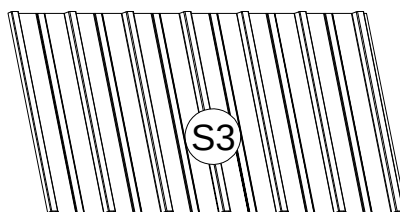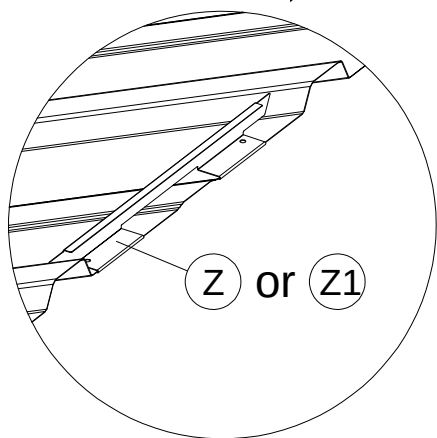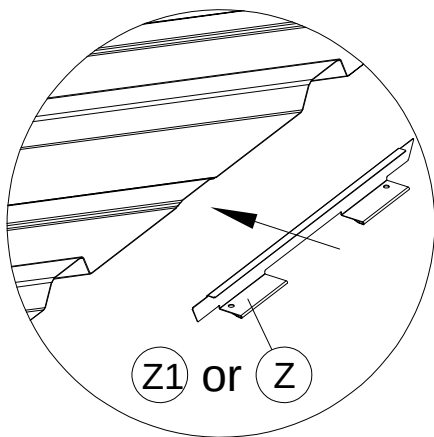

<34>

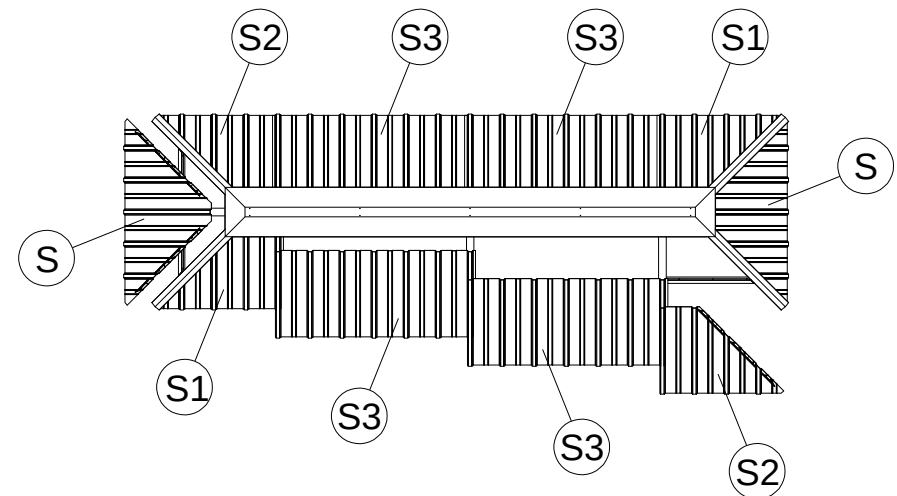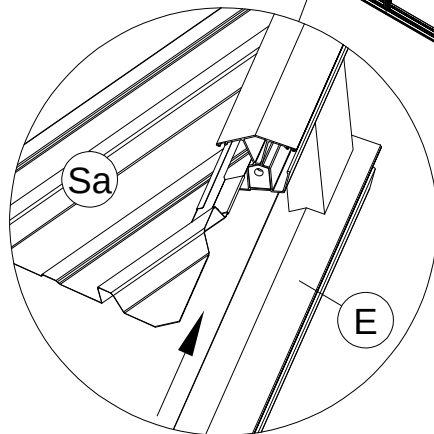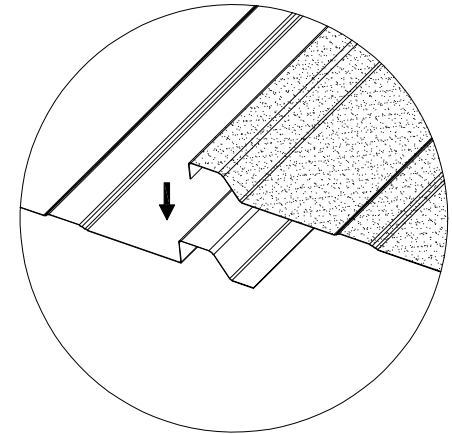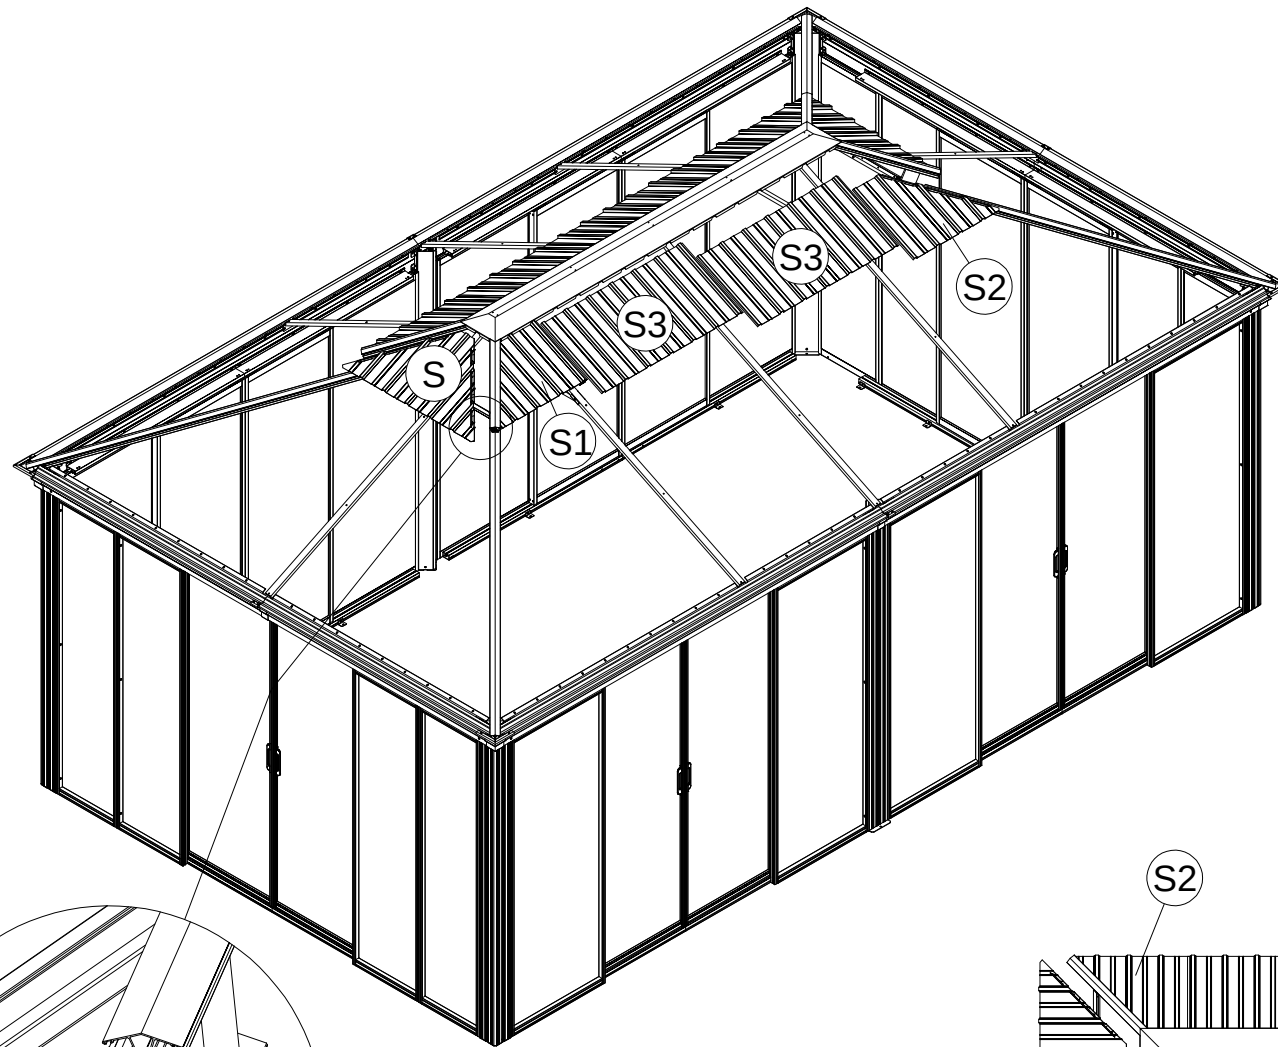


				
G1 x2	G2 x2	G3 x2	N2 x4	N3 x2





M6x15


1 x12

<35>

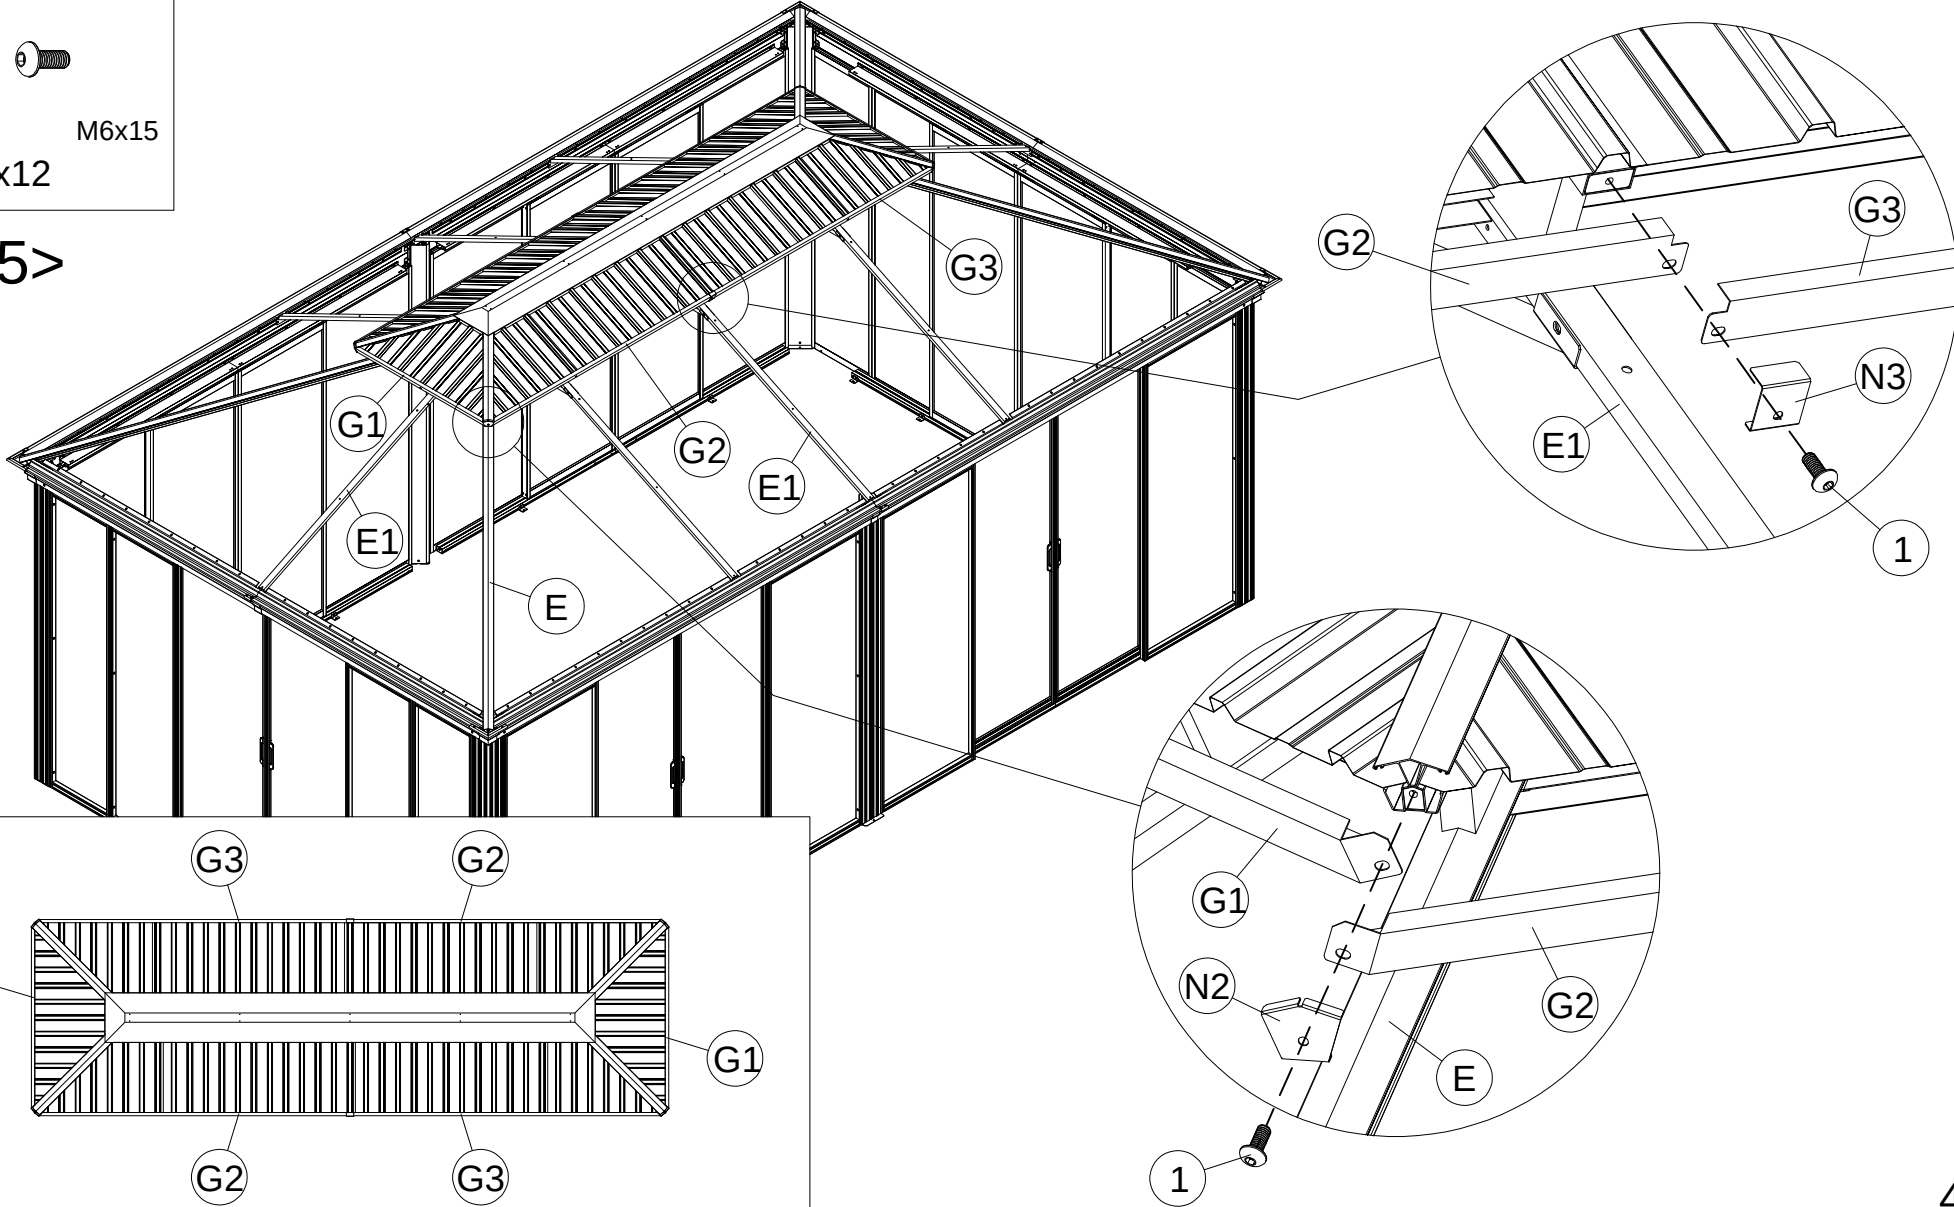

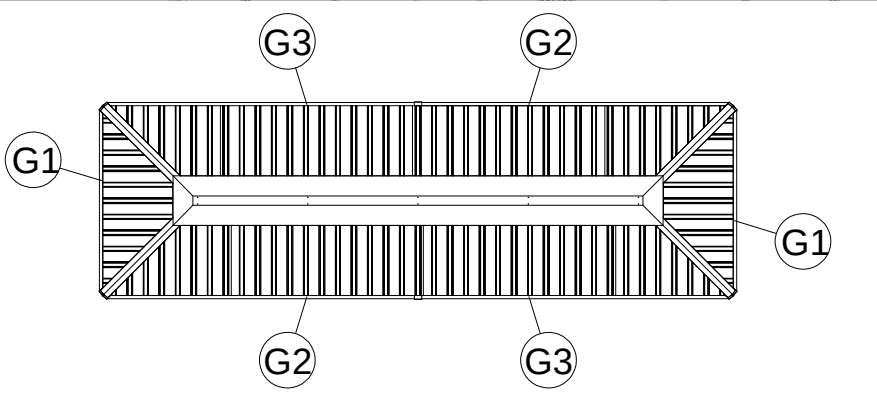

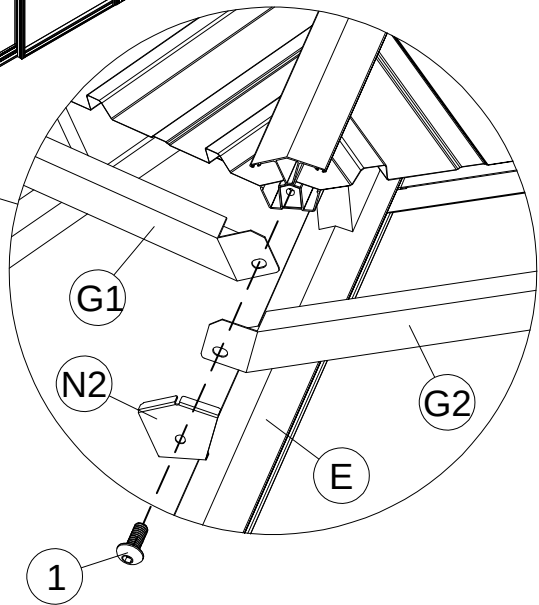

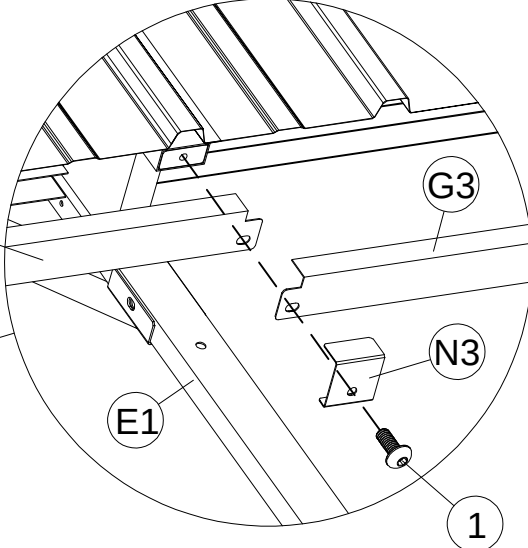

49




F x4




F1 x4



F2 x4






W x4




W1 x8

<36>

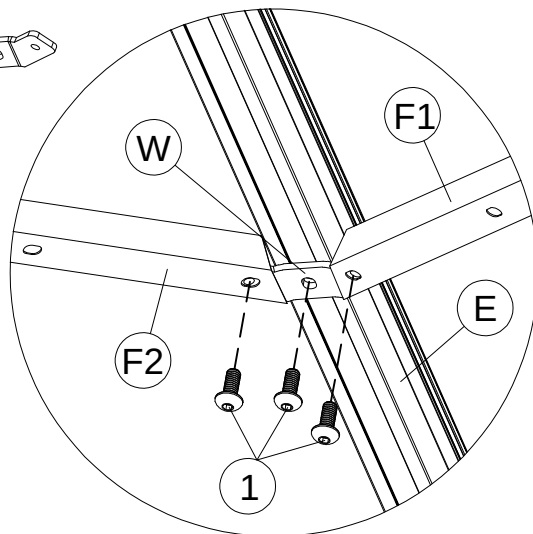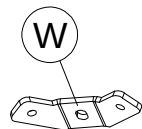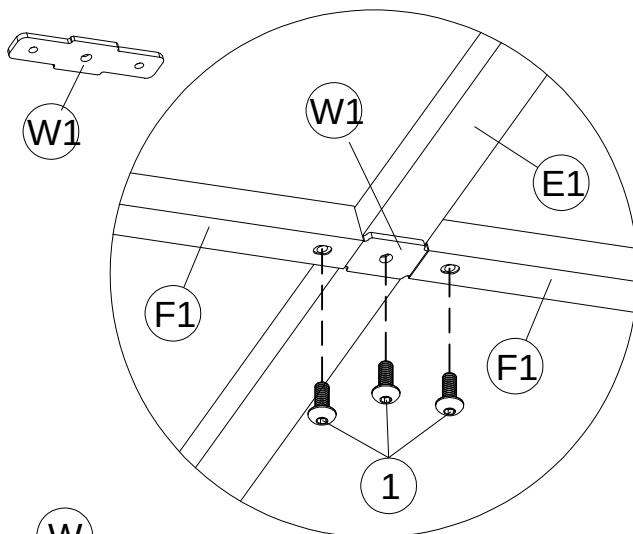


M6x15


1 x36

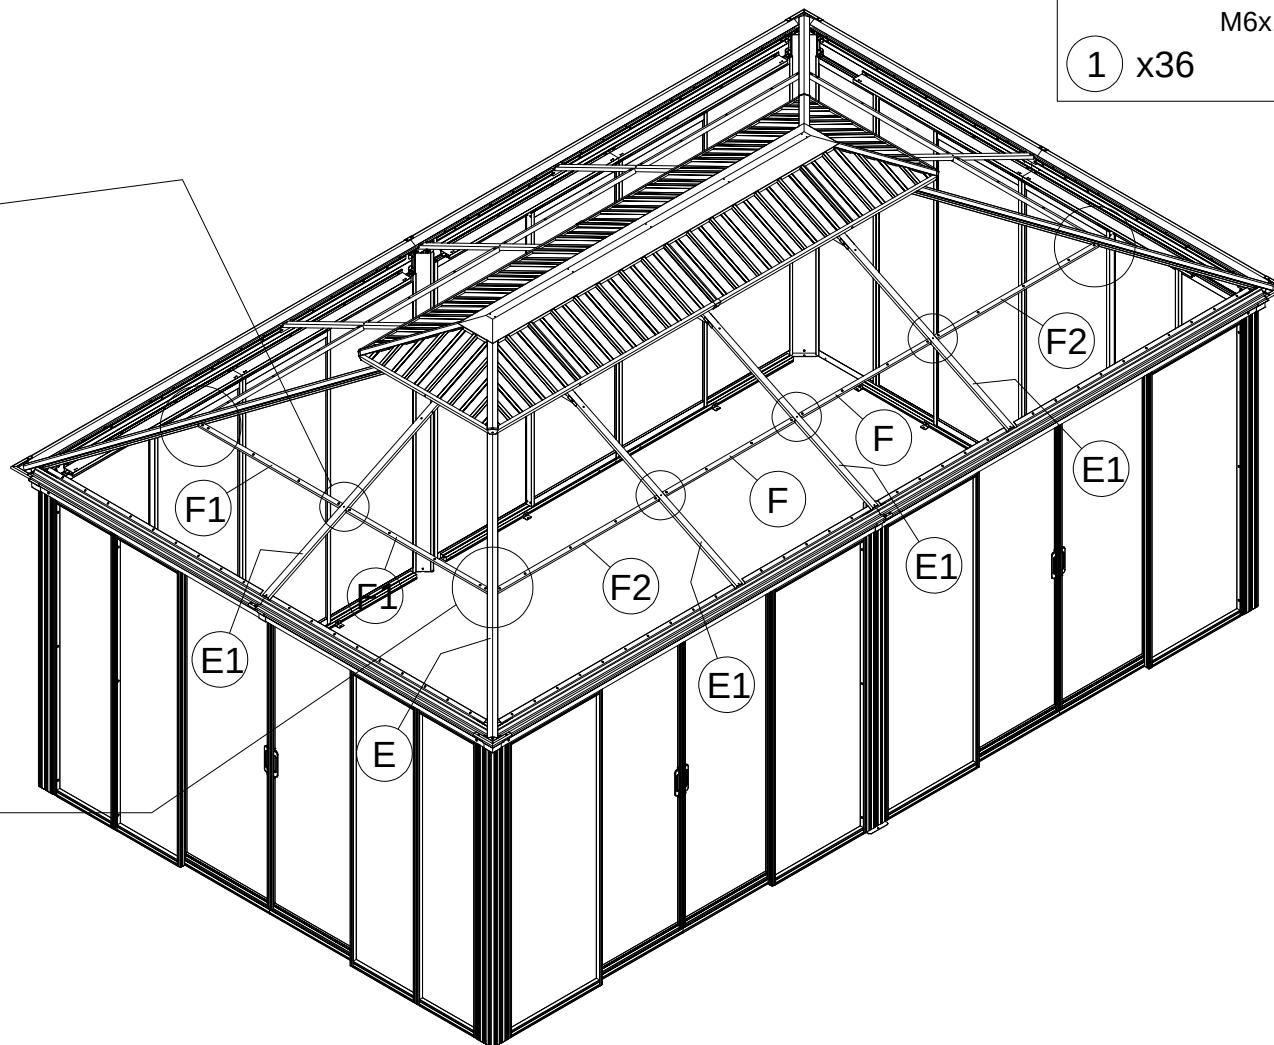


<37>

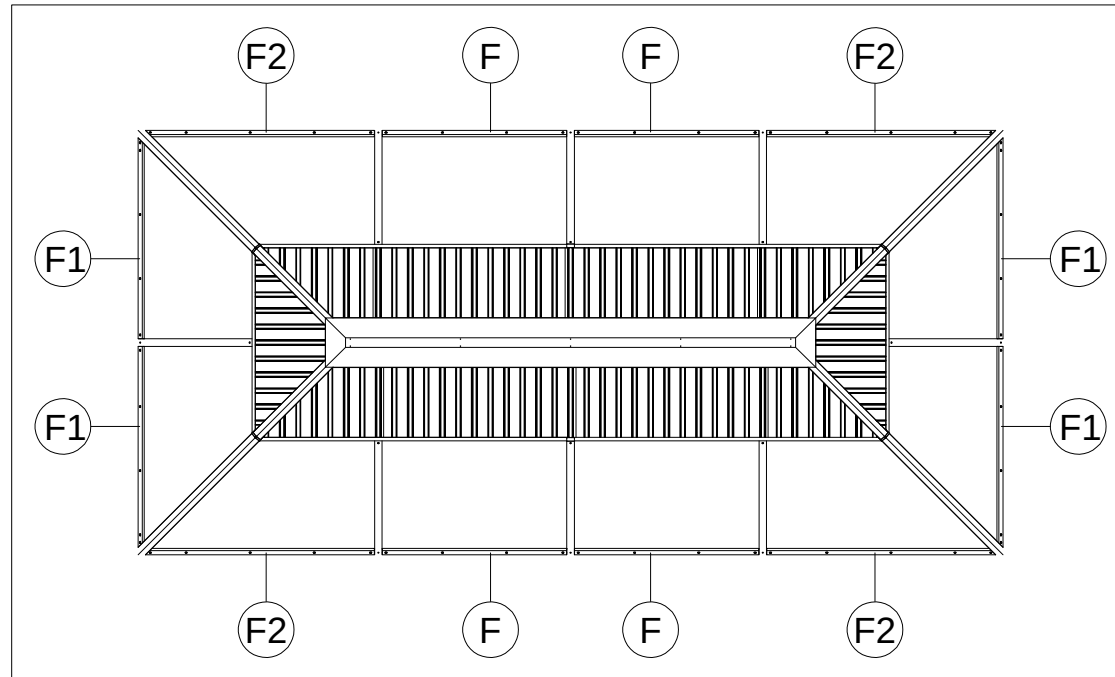


<38>

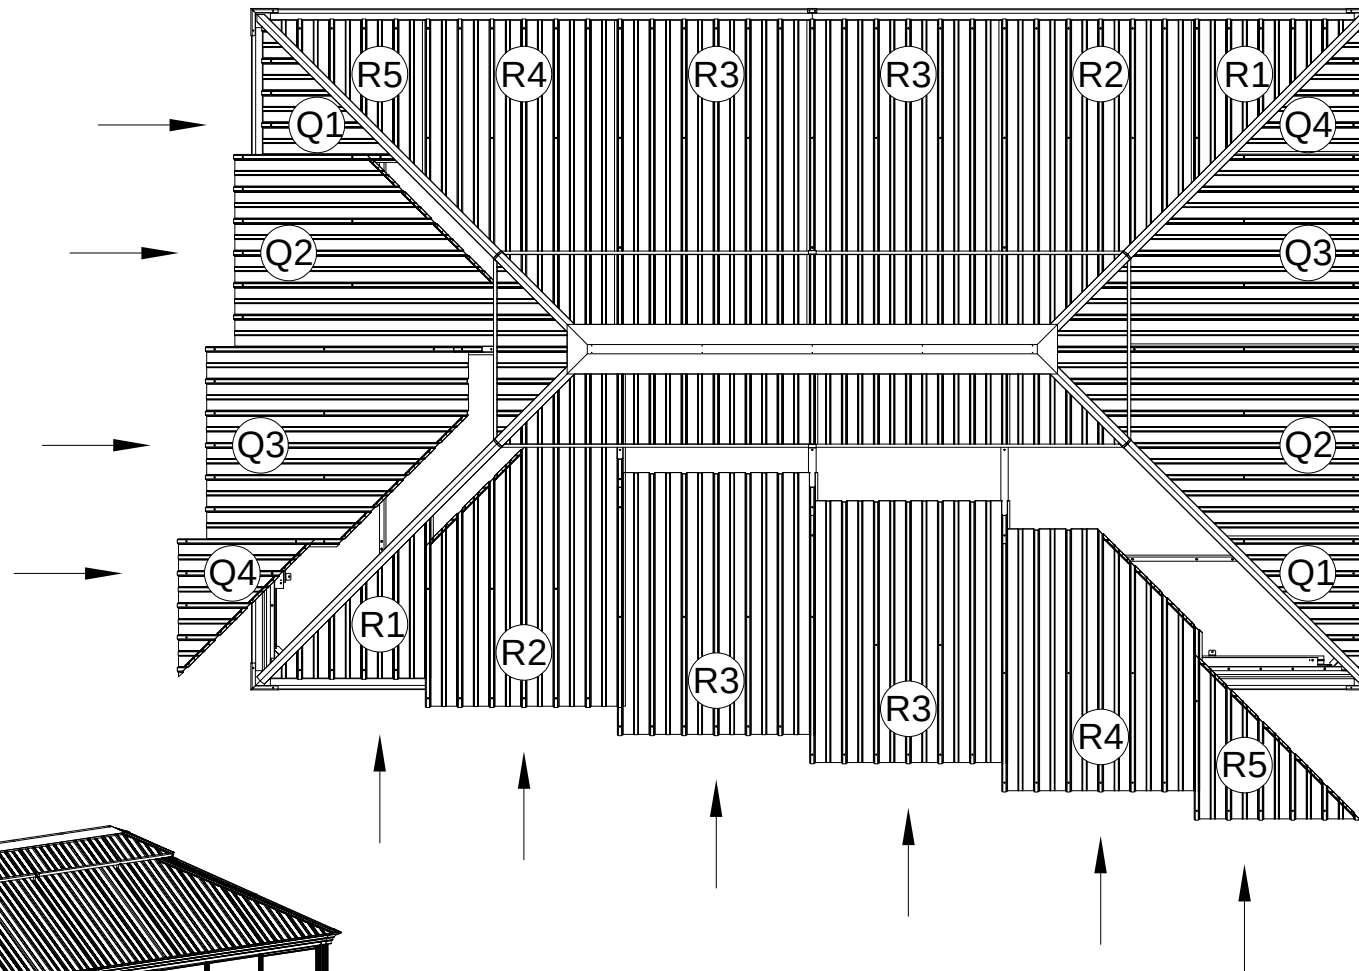

<39>

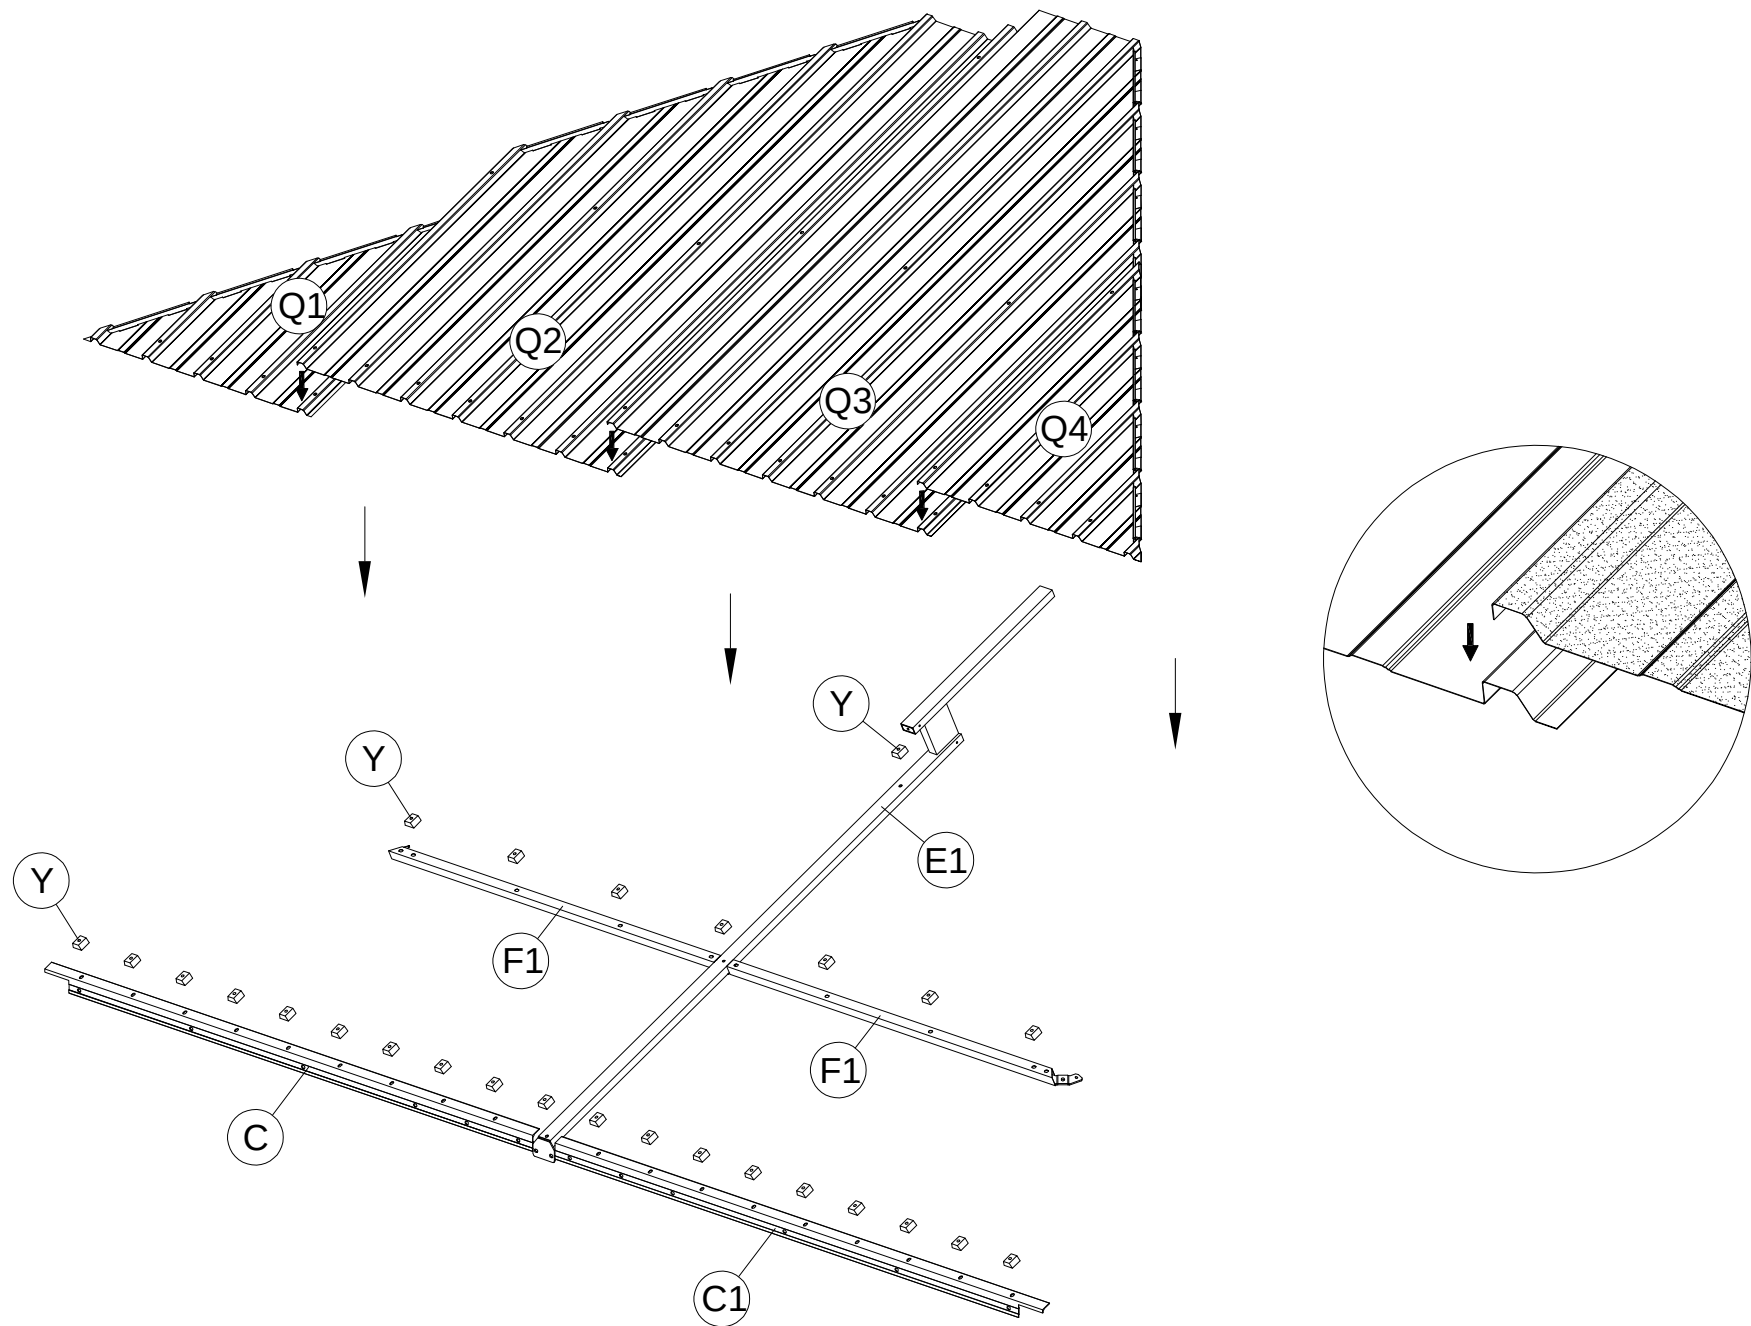

<40>

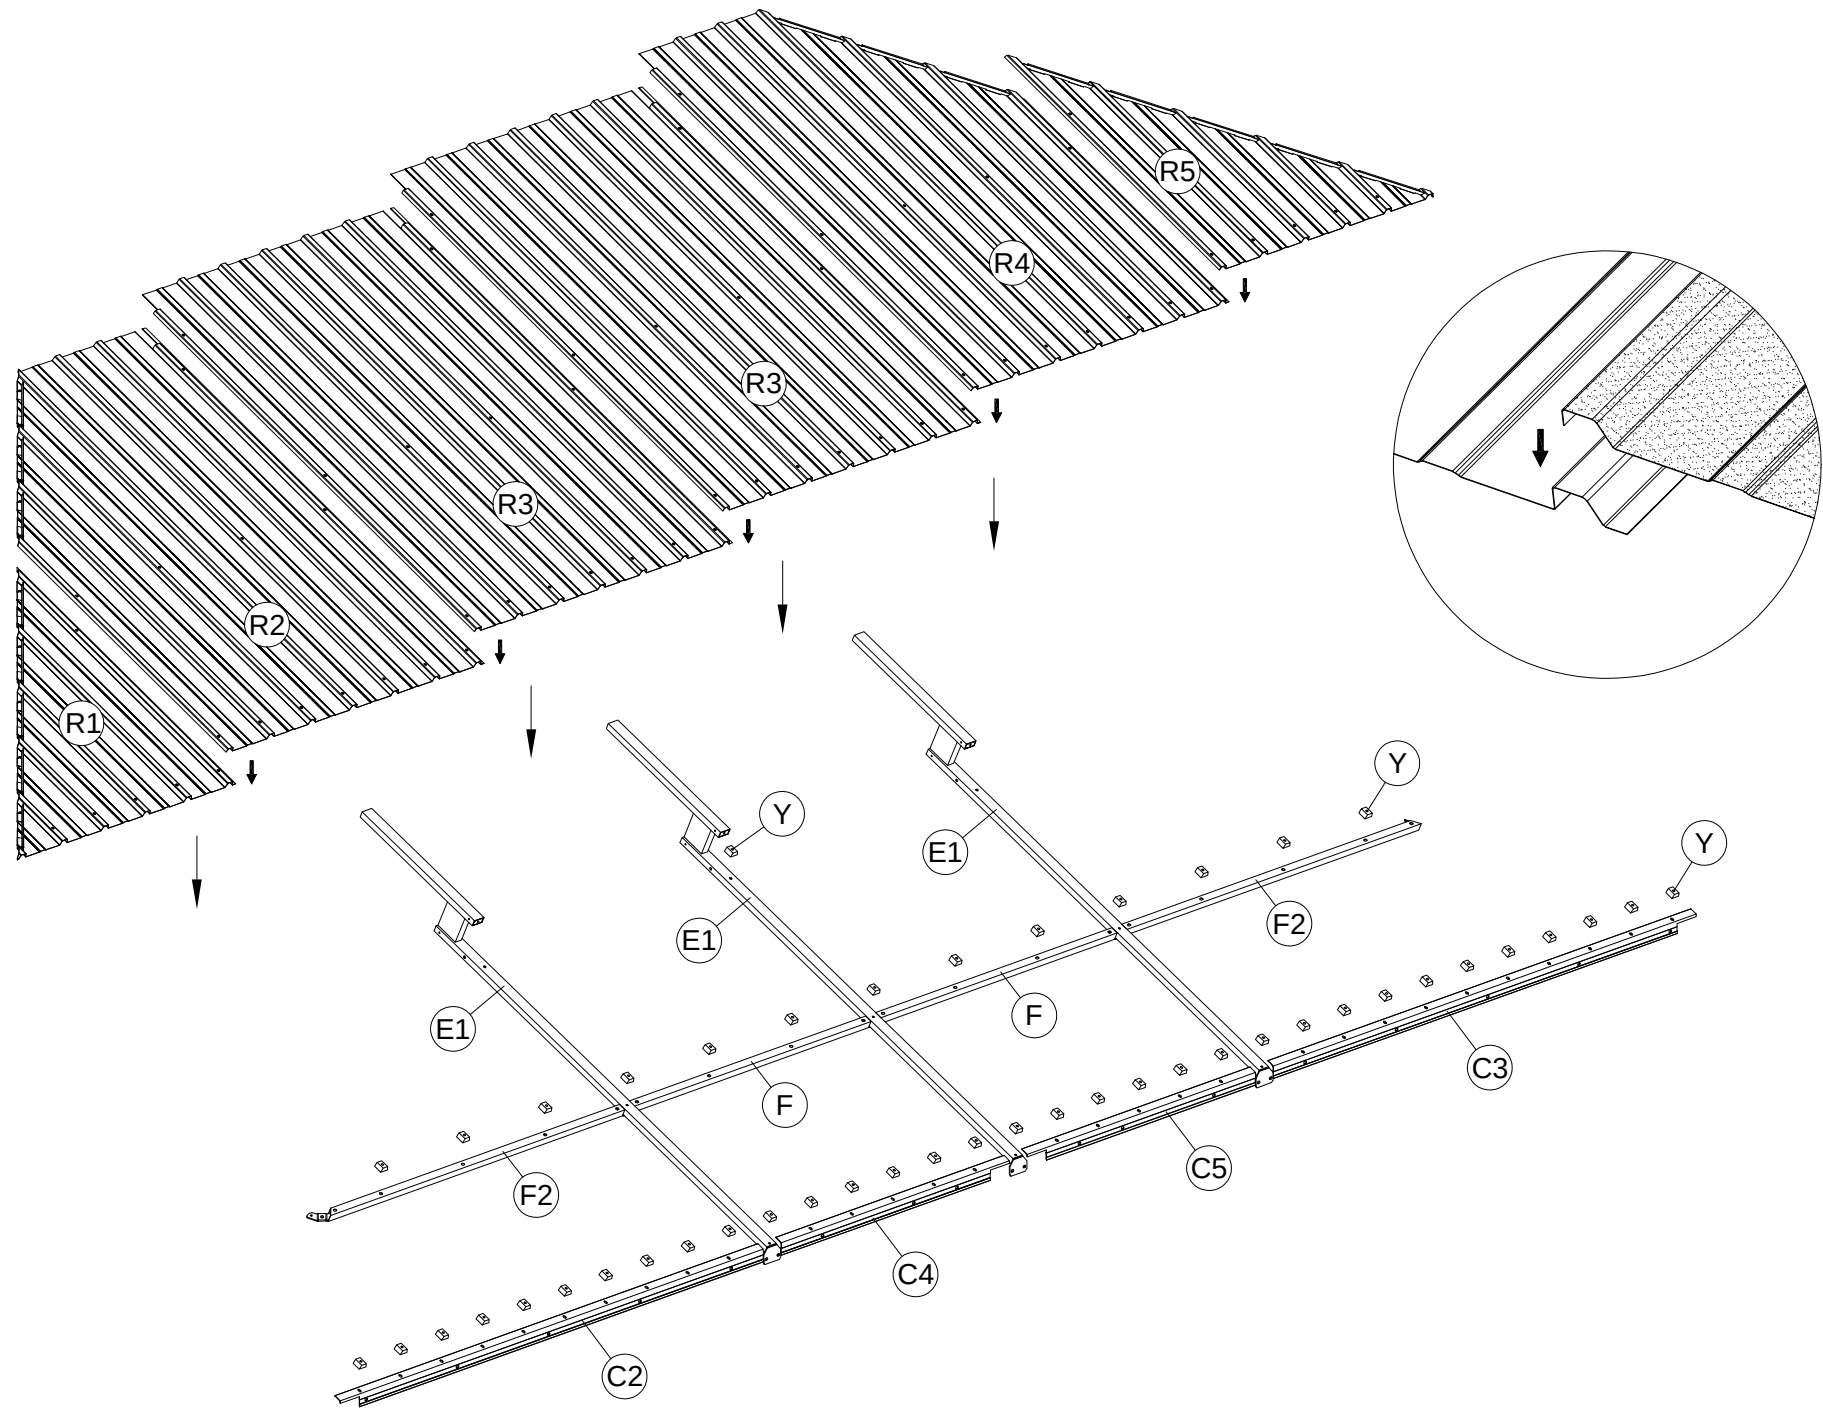



Y x152



16x



96x


M6x23

2 x16+x96



M6x42


6 x8







M6x47


7 x32

<41>

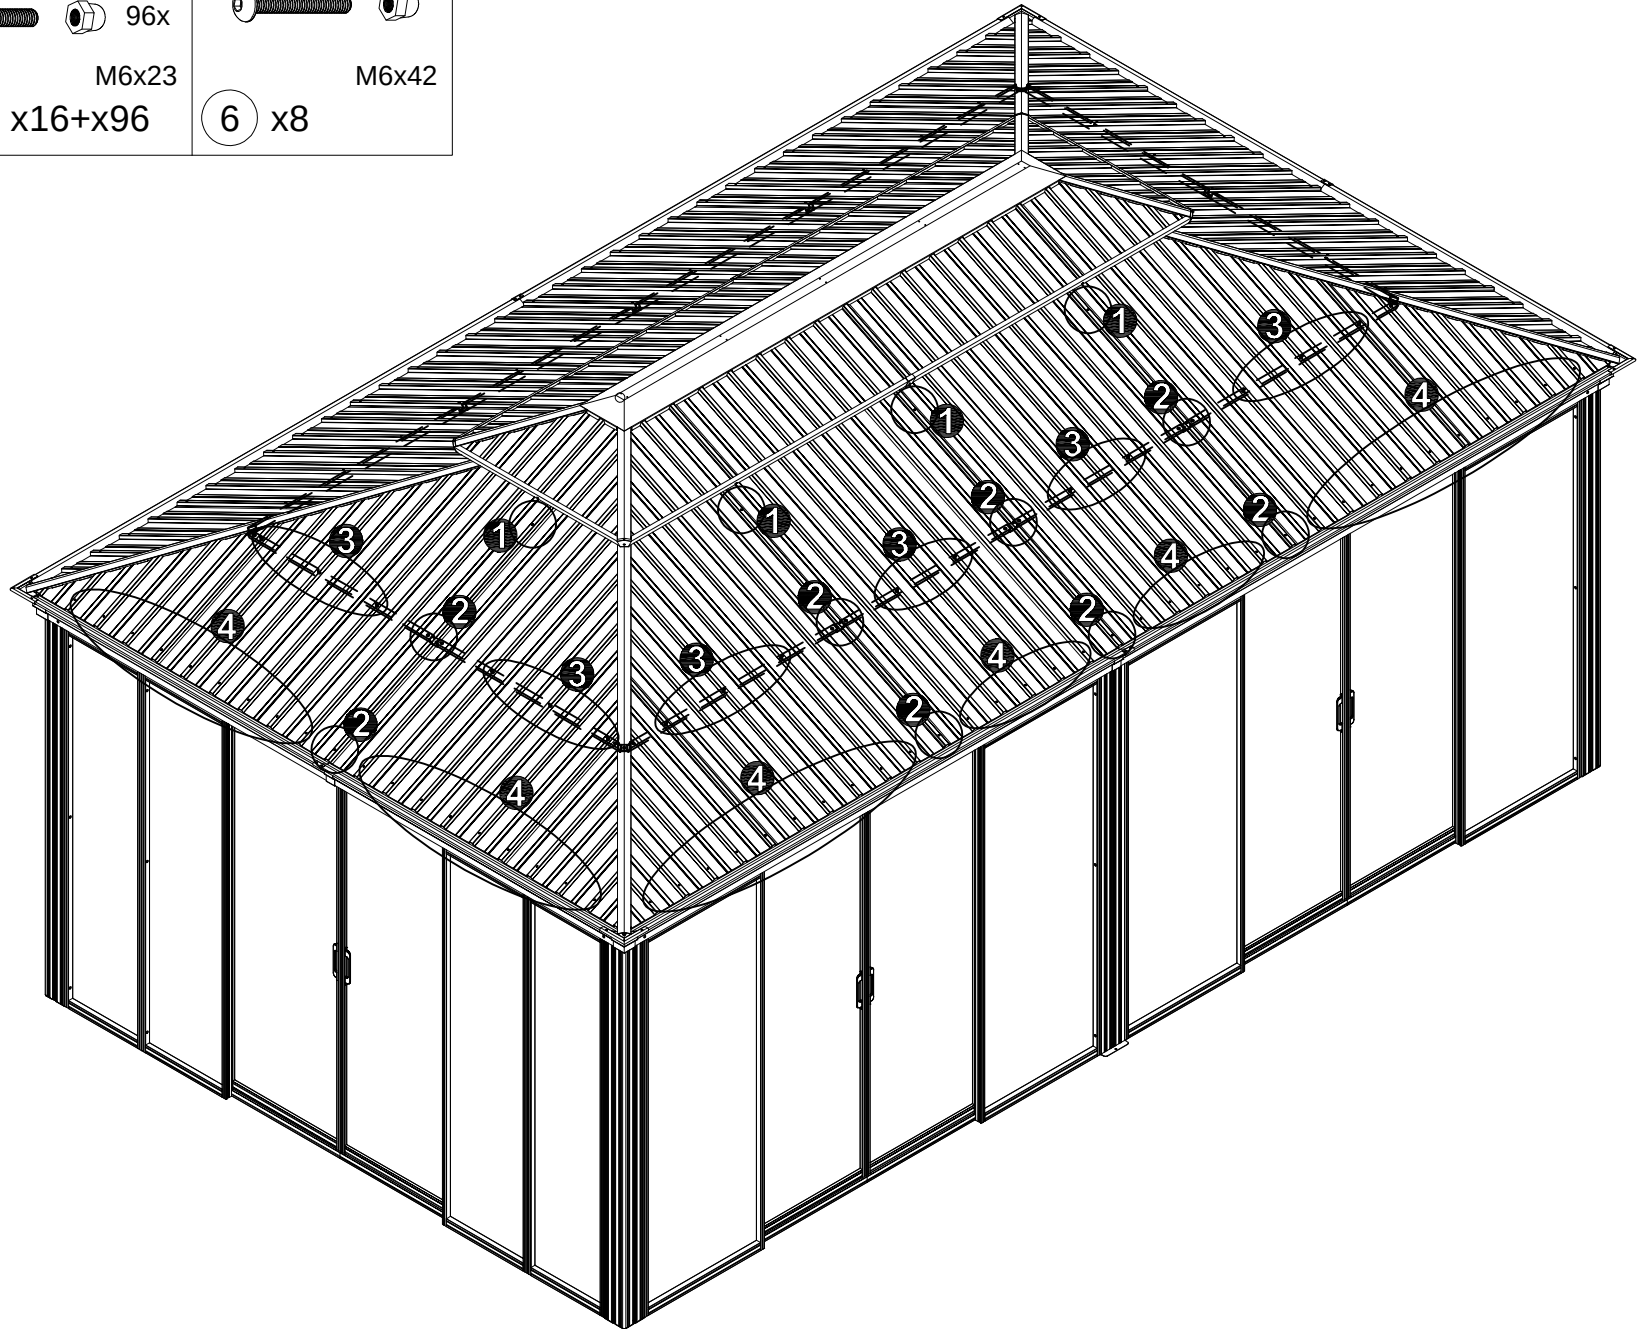

<42>

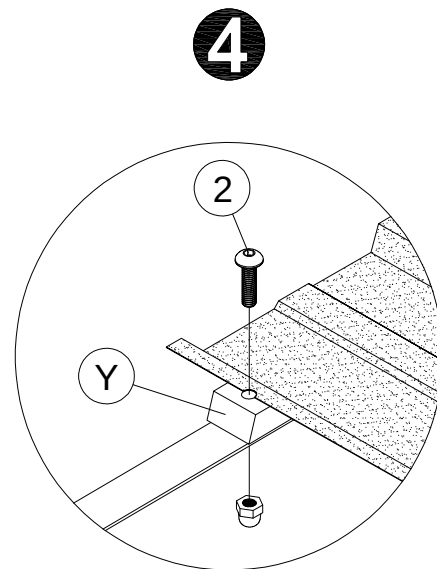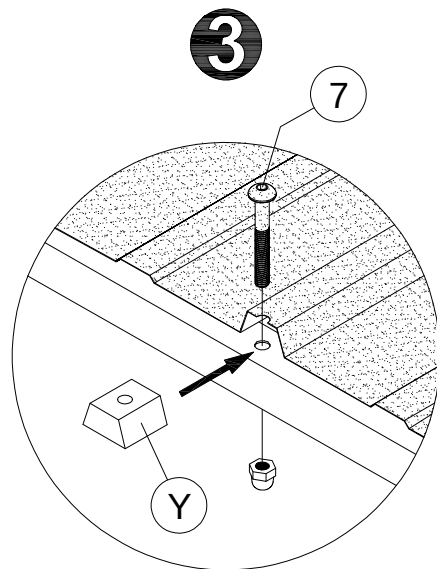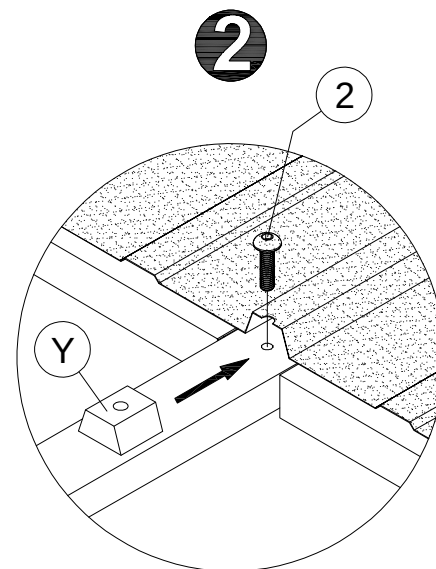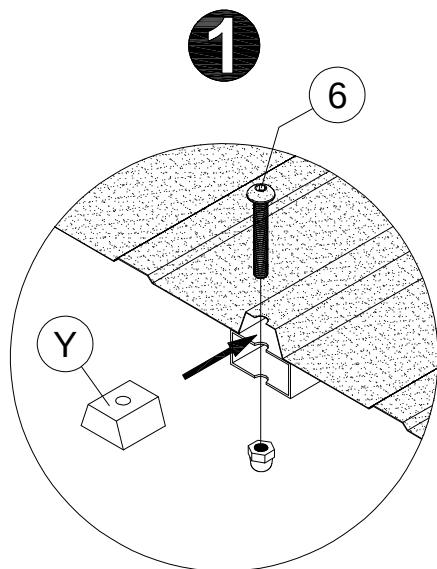







T1 x1



13 x22

Tips: The gazebo is already installed. Please determine where the gazebo will be placed and fix it with screws. If the floor on which the gazebo will be installed is concrete, it can be fixed with the expansion screws provided in the package.

<43>

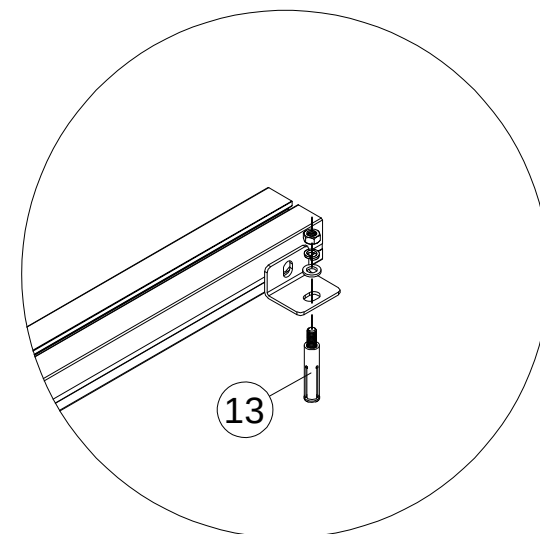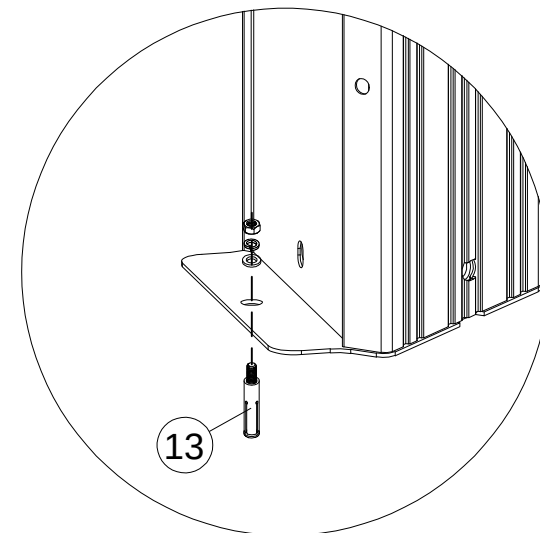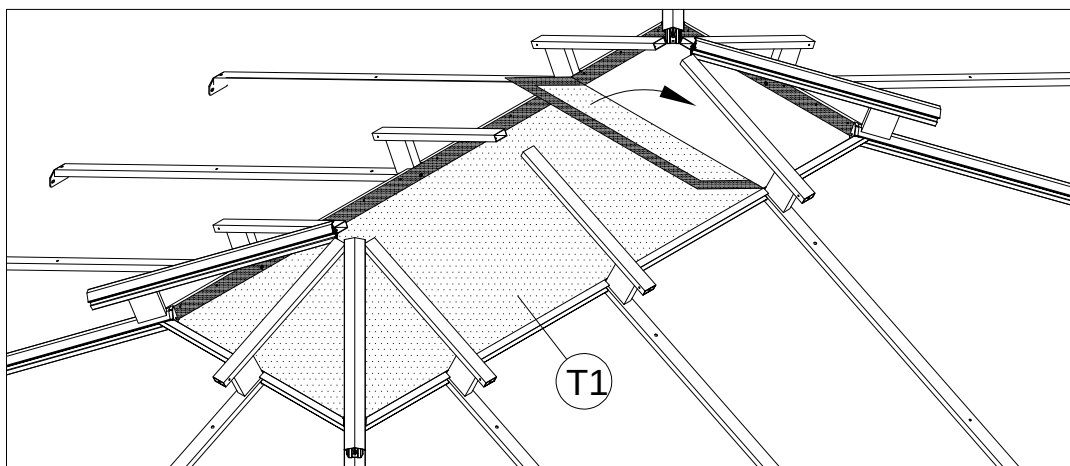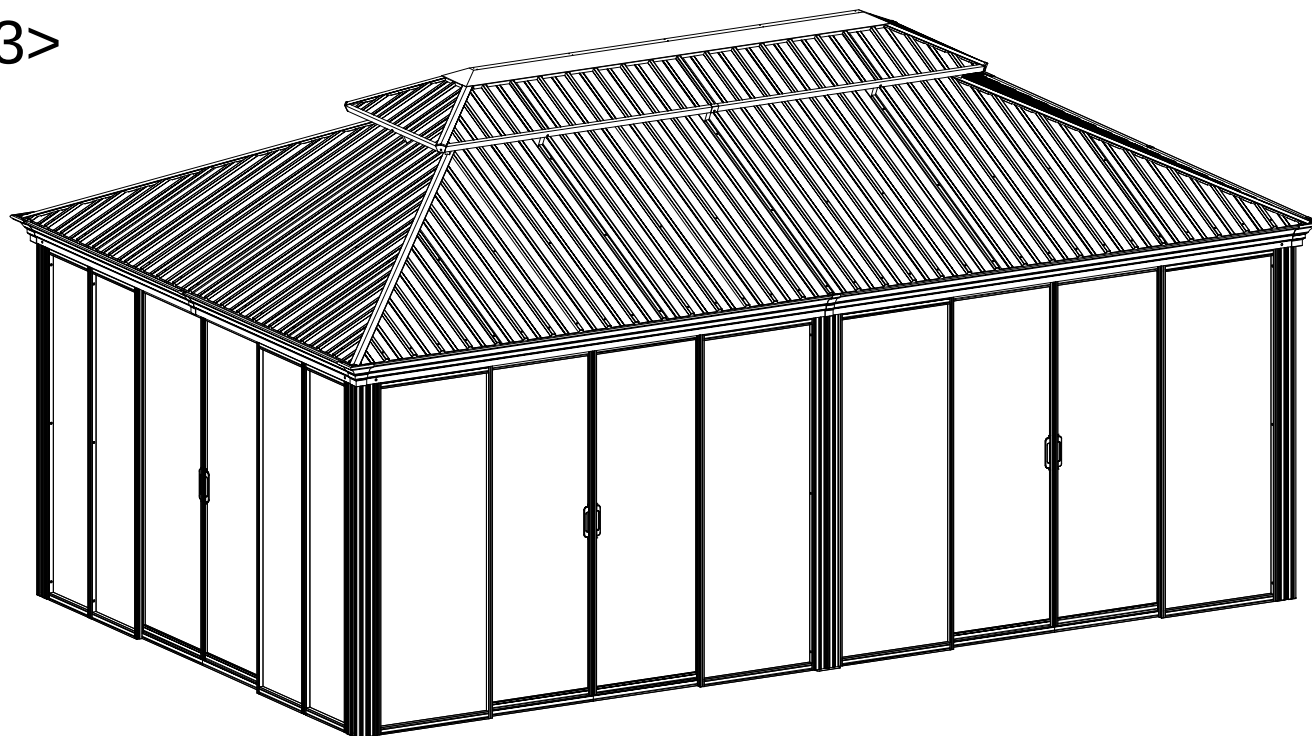

Contact information

Austria



Belgium



Croatia



Denmark



Estonia



Finland



France



Germany



Ireland



Italy



Latvia



Lithuania



Nederland



Norway



Poland



Portugal



Spain



Sweden



Switzerland



UK

