


DANCOVER[®]







.com

Manual
for
Modular Connector Set MP-01
f/Pergola Gazebo San Pablo

User's Manual

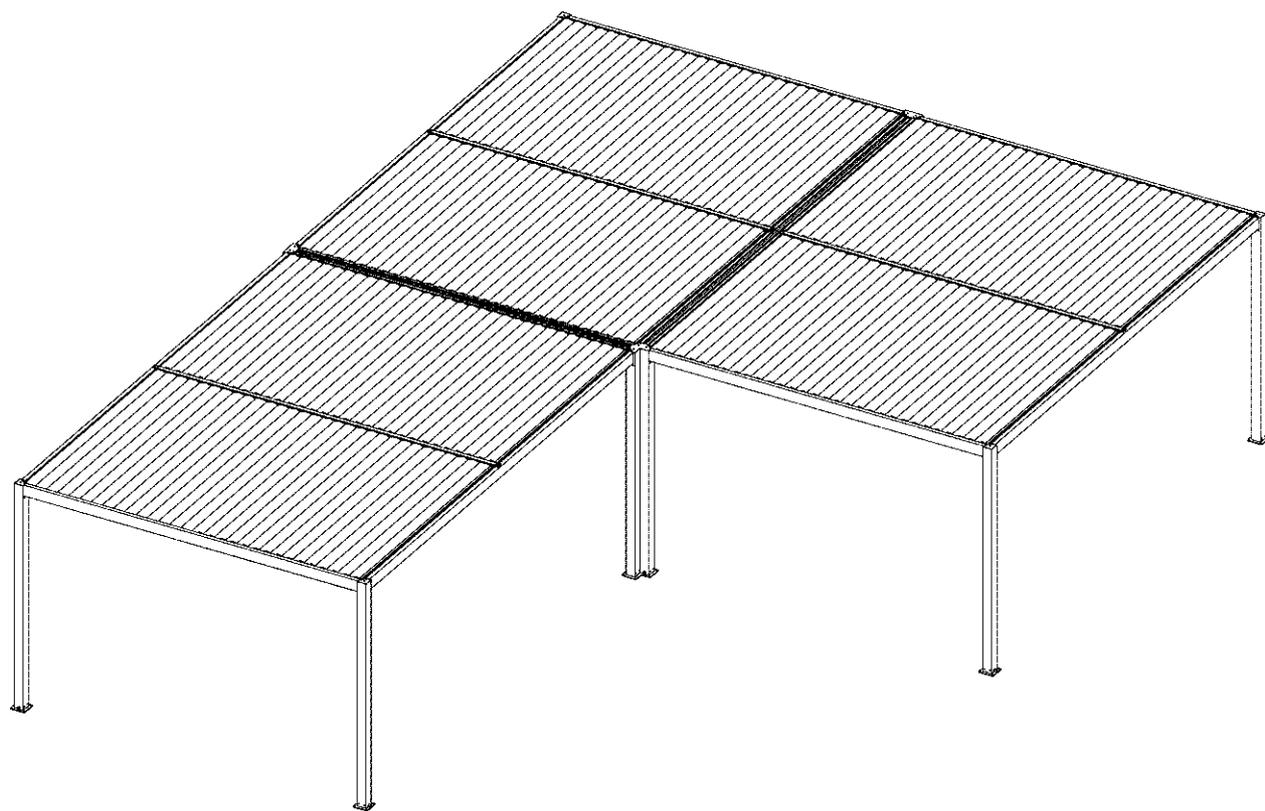

Part List

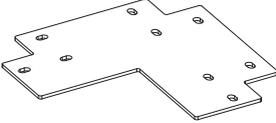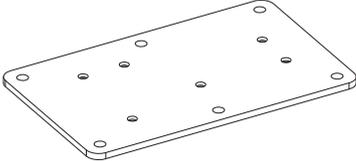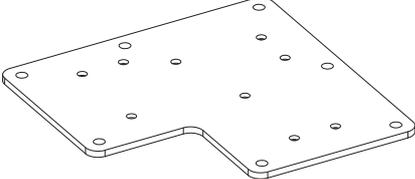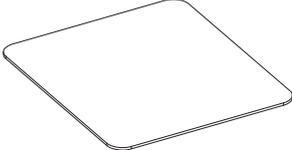
REF	PHOTO	QTY
A1	1351mm Rain cover plate 	4
A2	992mm Rain cover plate 	2
B1	Two-Column Cover Plate 	2
B2	Three-Column Cover Plate 	1
C1	Two-Column Base Plate 	2
C2	Three-Column Base Plate 	1
D	Waterproof Sticker 	4
E	waterproof Sealant 	3

Kind Reminder

General Guidelines

- Please keep this manual for future use after you install the pergola;
- Please read the following instruction carefully before assembly;
- This manual may not include every details and considerable steps;
- Please contact us when you need further information or any help;

What you may need?



Ladder x2



Tapeline




Mallet



Glove




Ø10mm
electric screw
driver

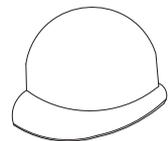


Safety
hat



Level



Marker
Pen



Wrench



screwdriver or
electric
screwdriver




Sleeve tool




4#/6#


Allen key

1 In the figure: schematic of accessory installation

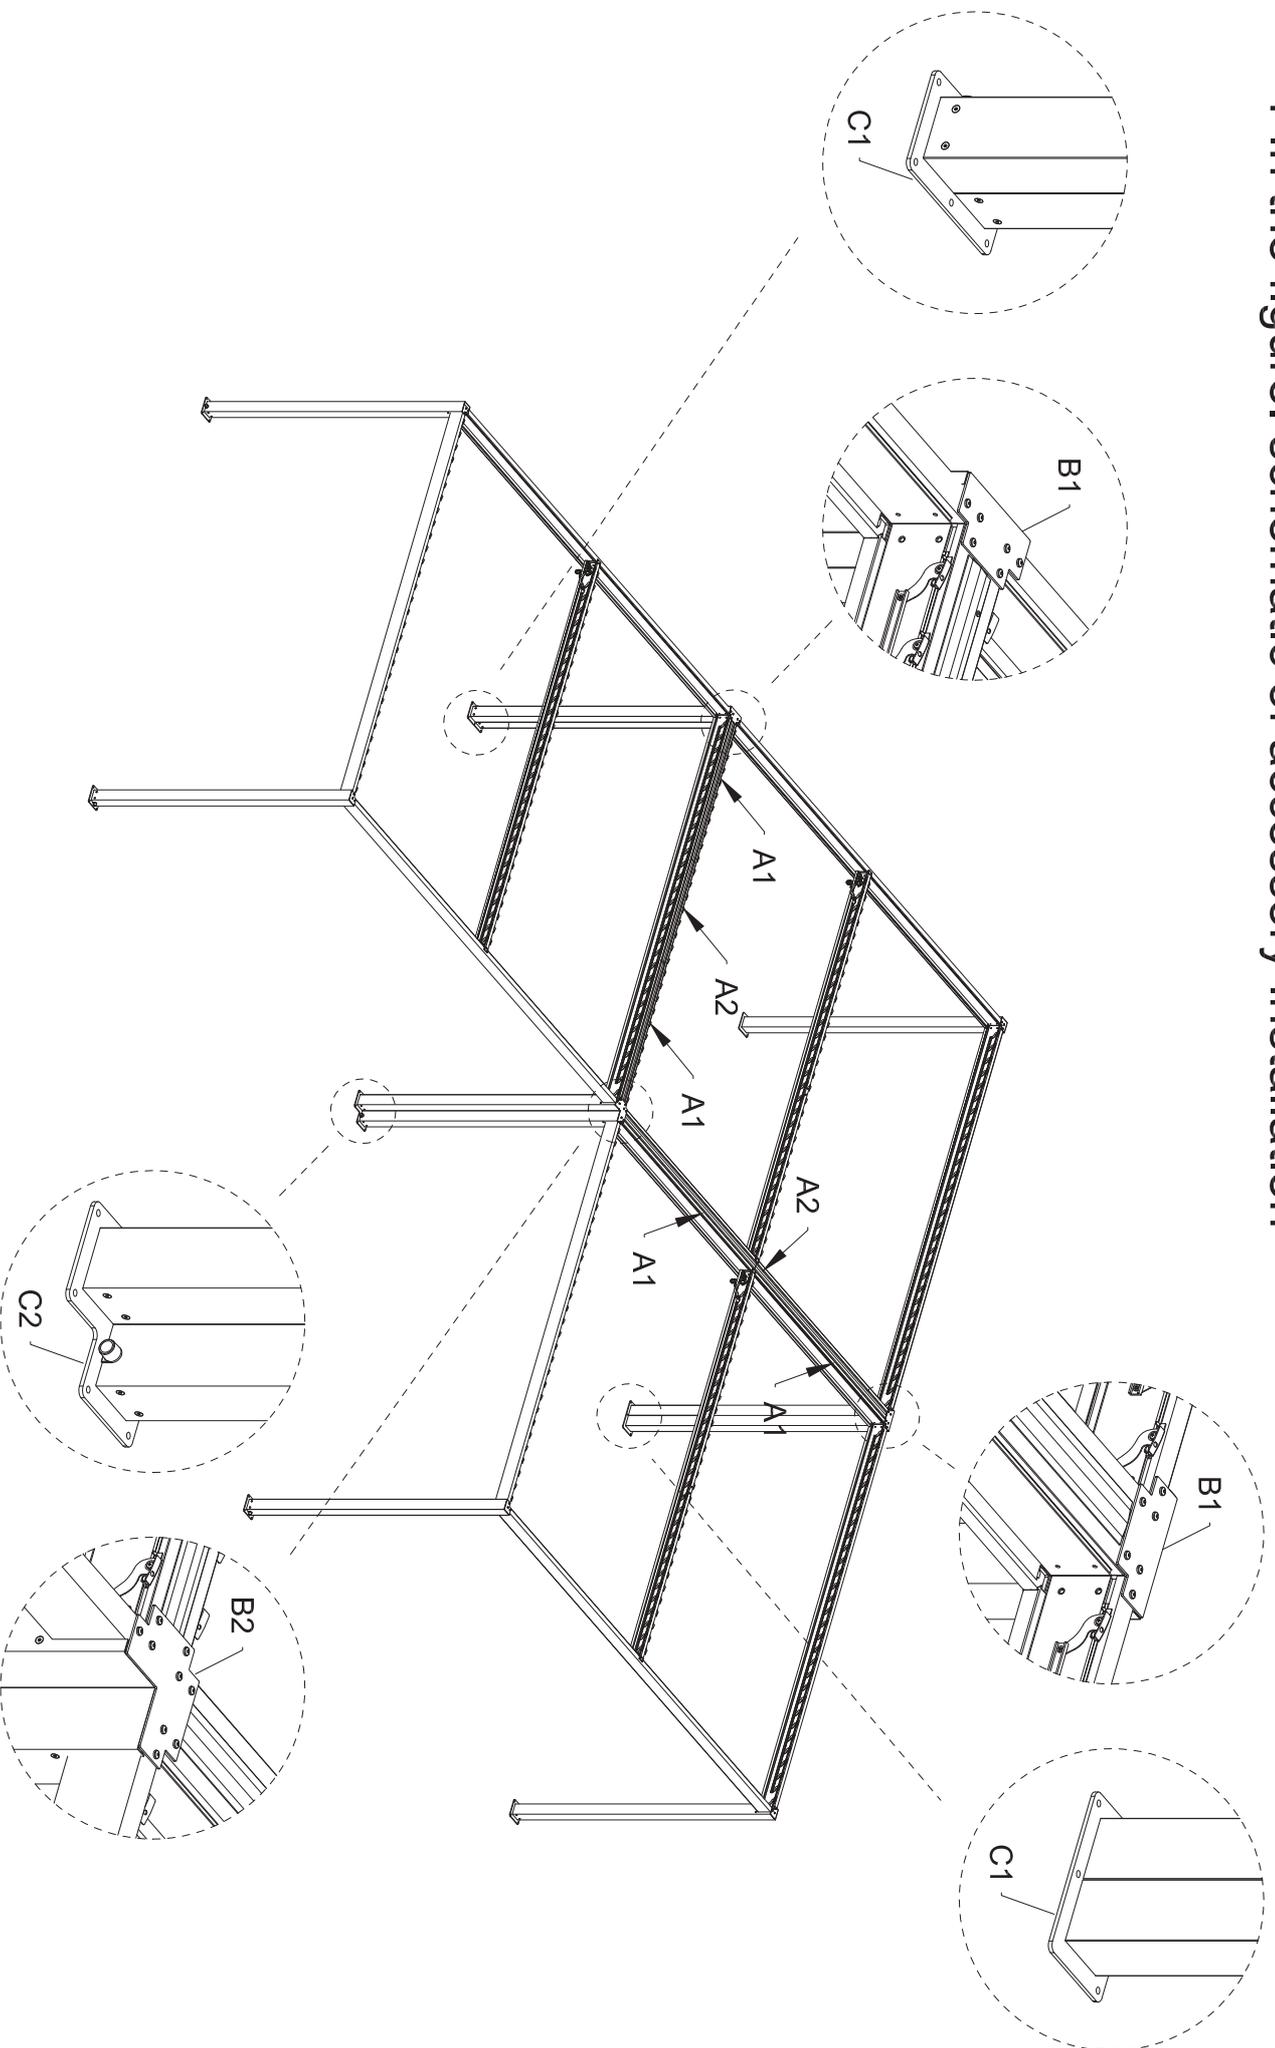


2-a Combine the two columns using the dual-column base plate (where only the base plate is replaced, and the drainage joint and screws use the original accessories).

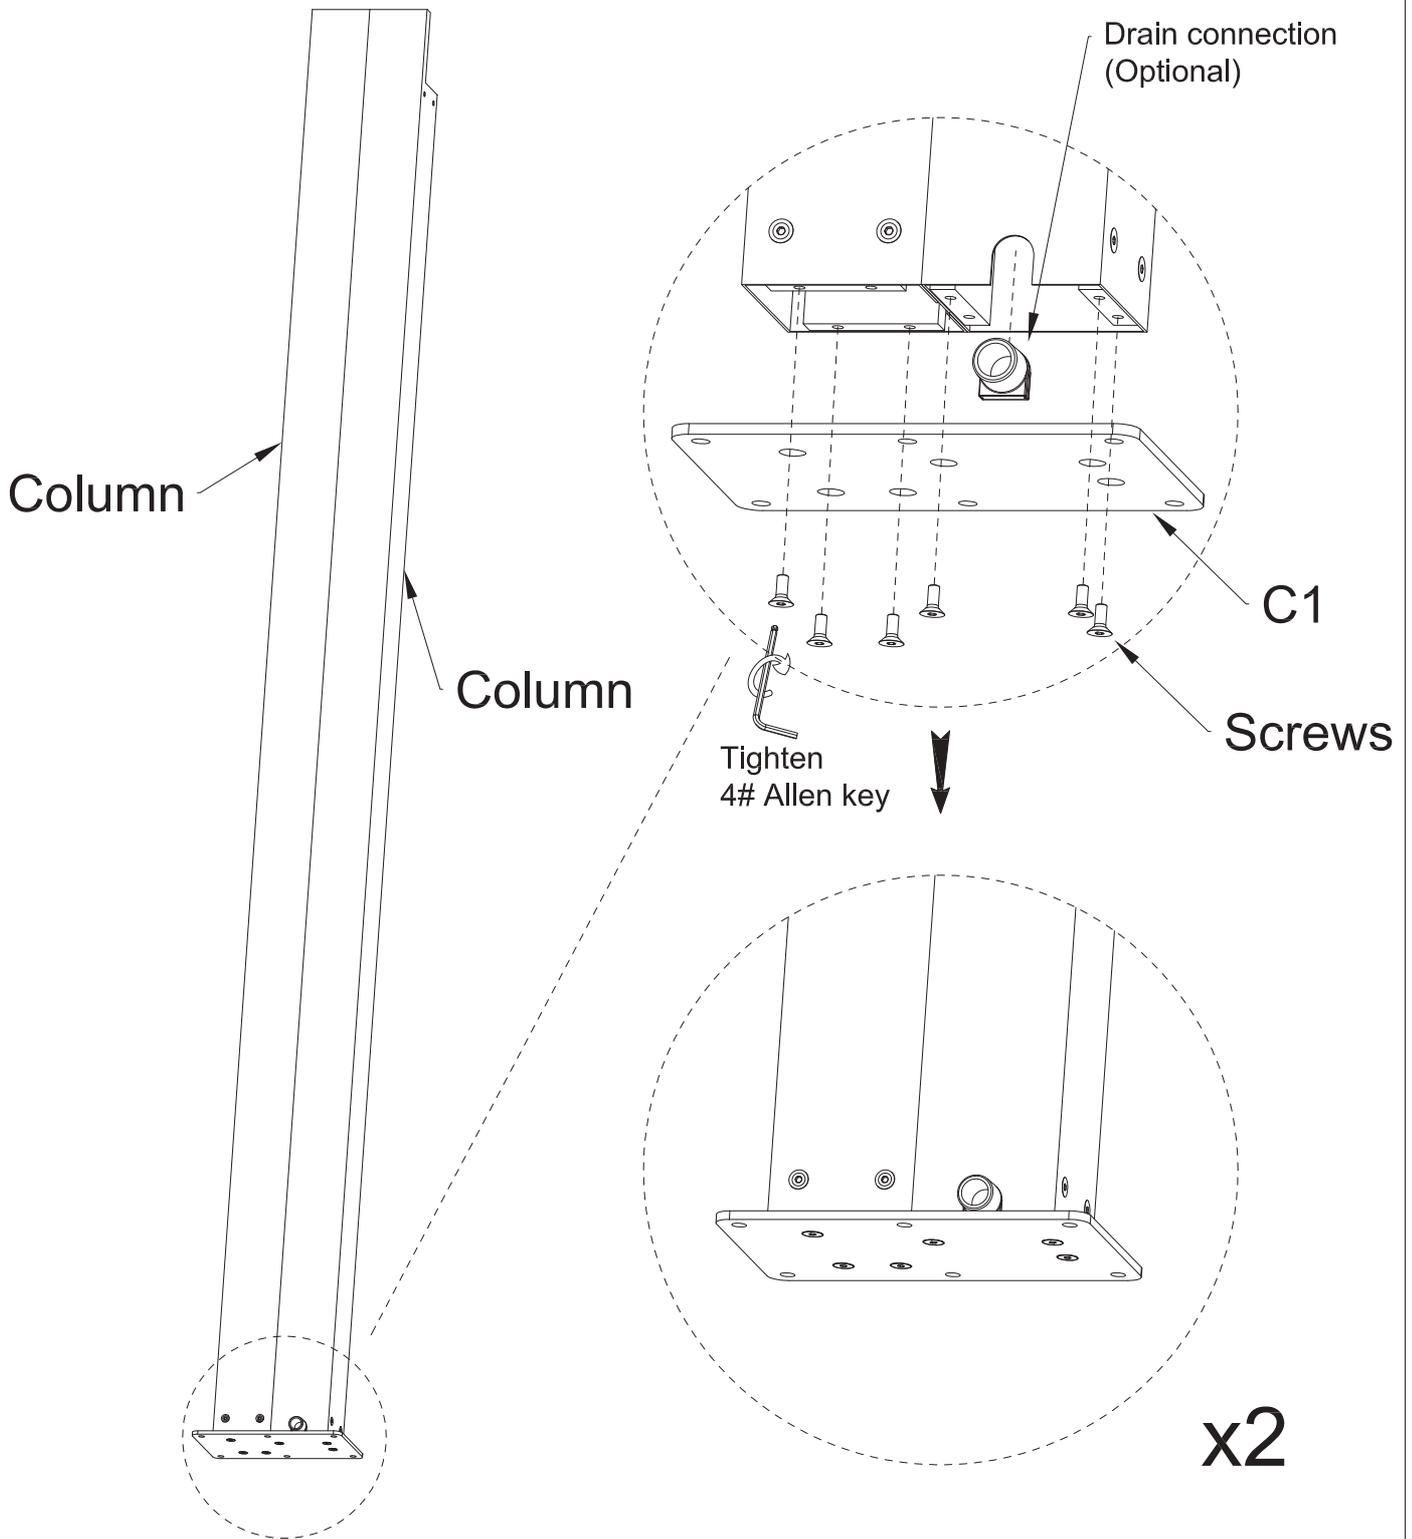


C1		QTY:2PCS
-----------	-------------------------------------------------------------------------------------	----------

2-b Combine the three columns using the Three-column base plate (where only the base plate is replaced, and the drainage joint and screws use the original accessories).


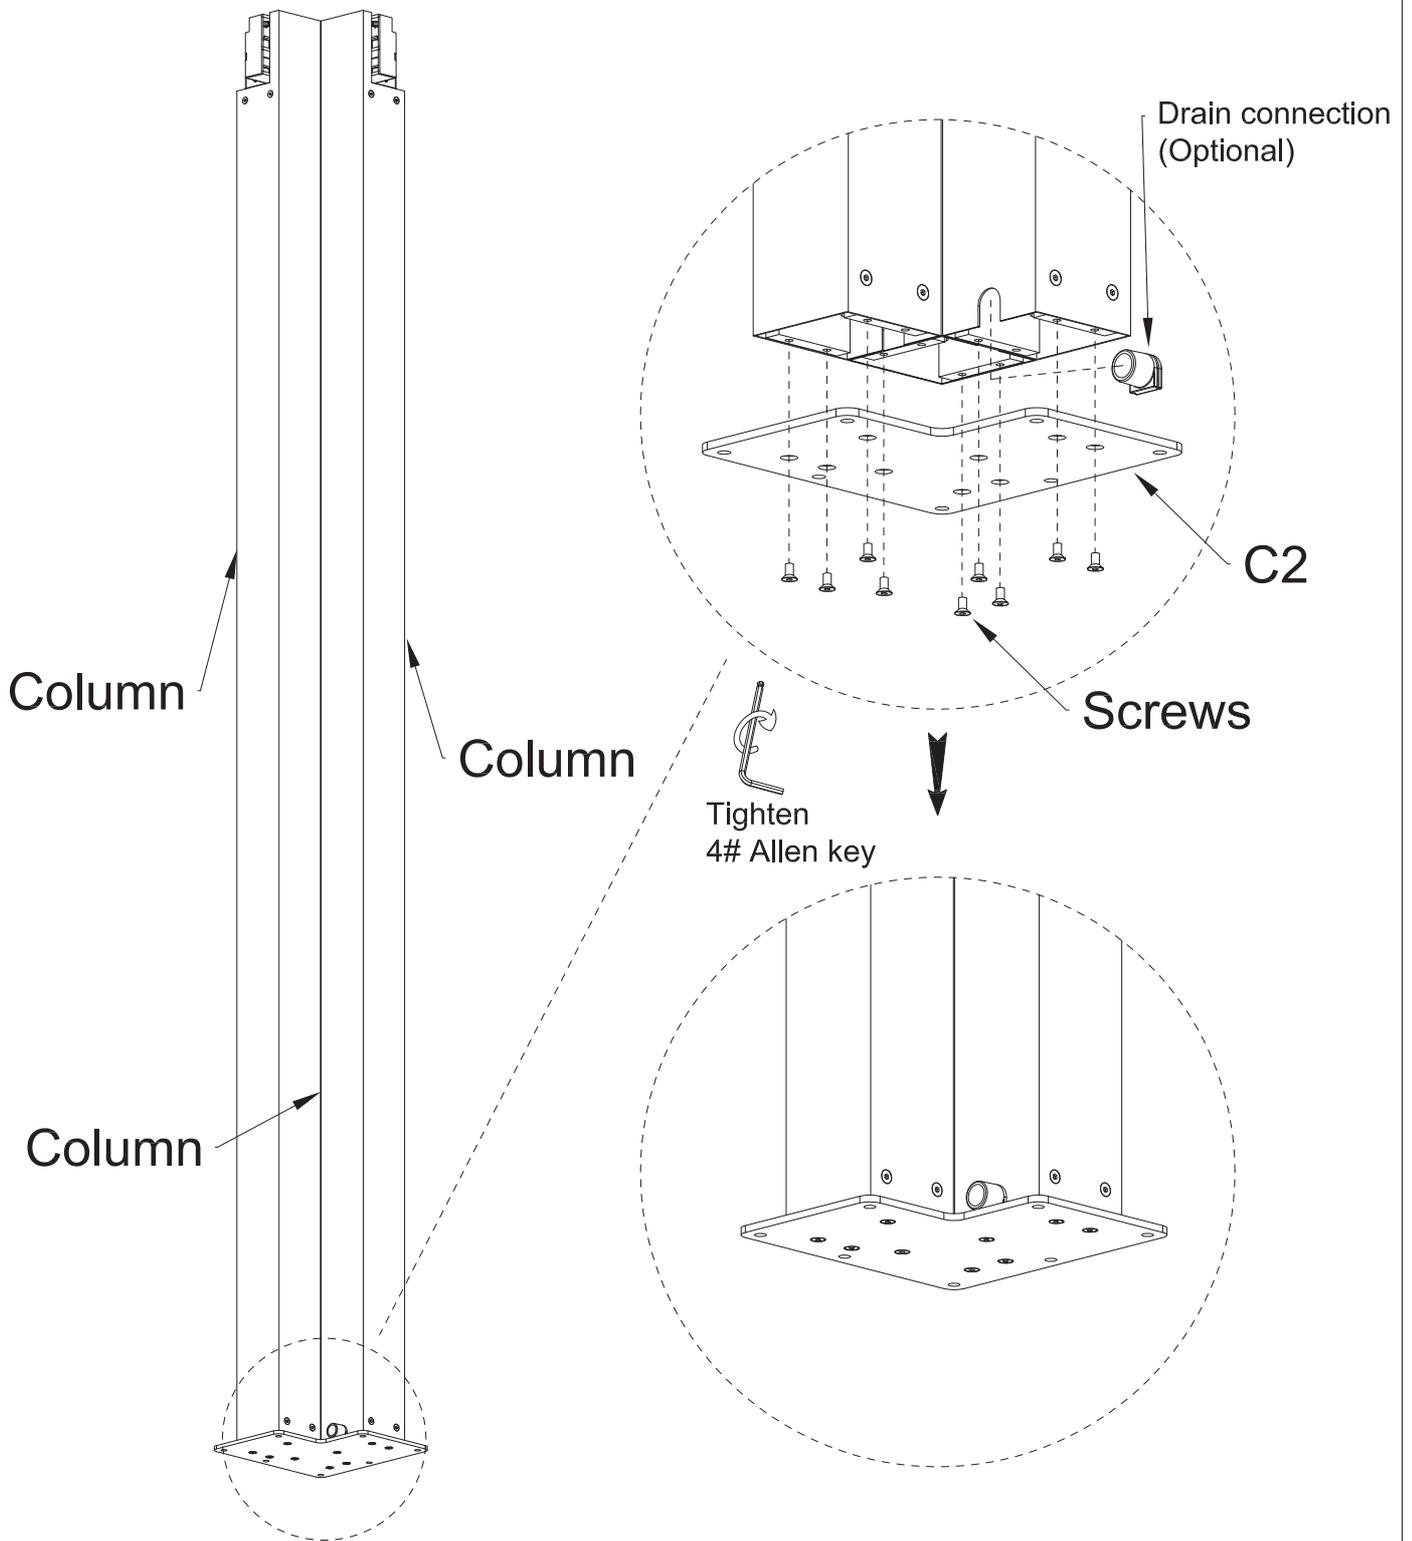



C2  QTY:1PC

3 Install the column cover (fixing screws use the original configuration).

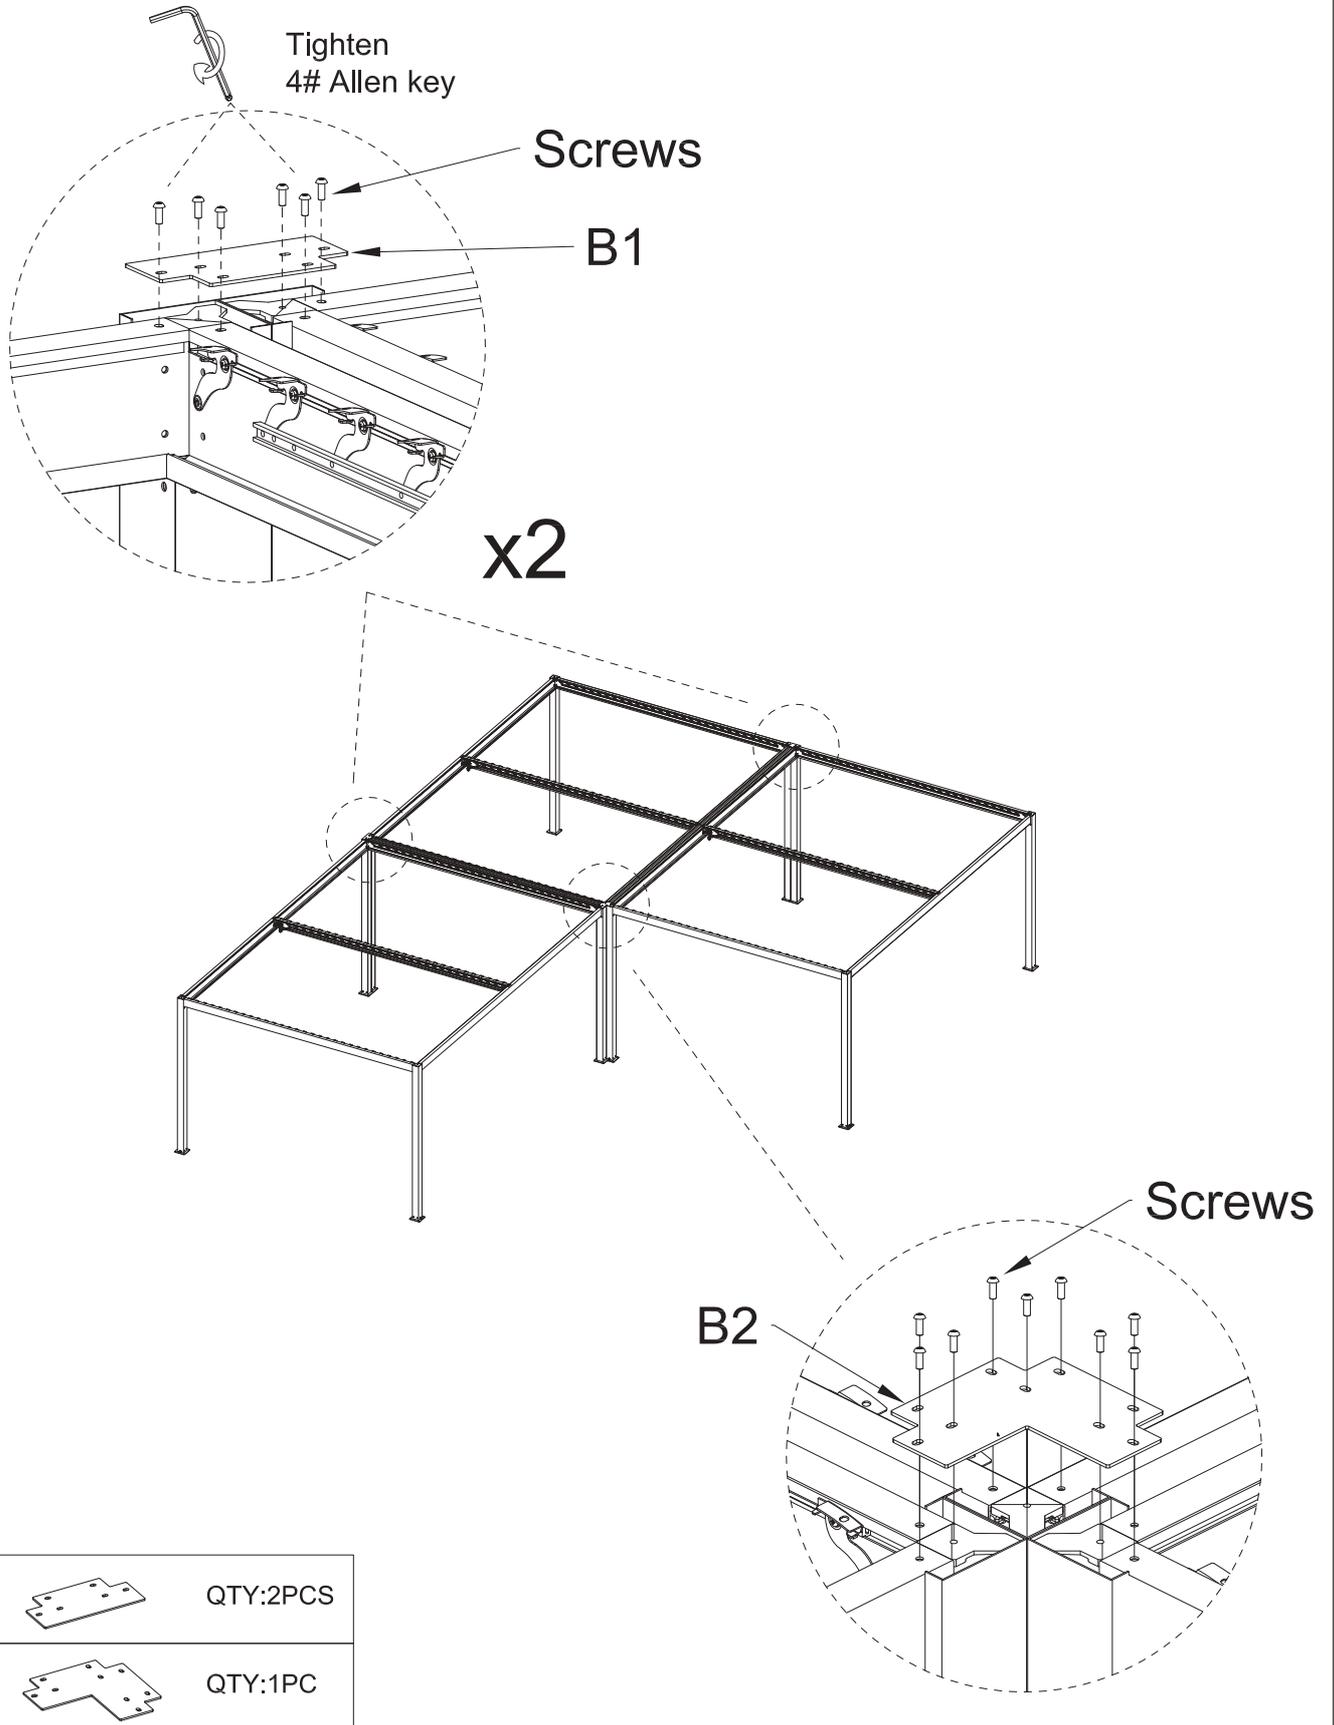


4 Install the rain cover panel and apply waterproof sealant at the seams.

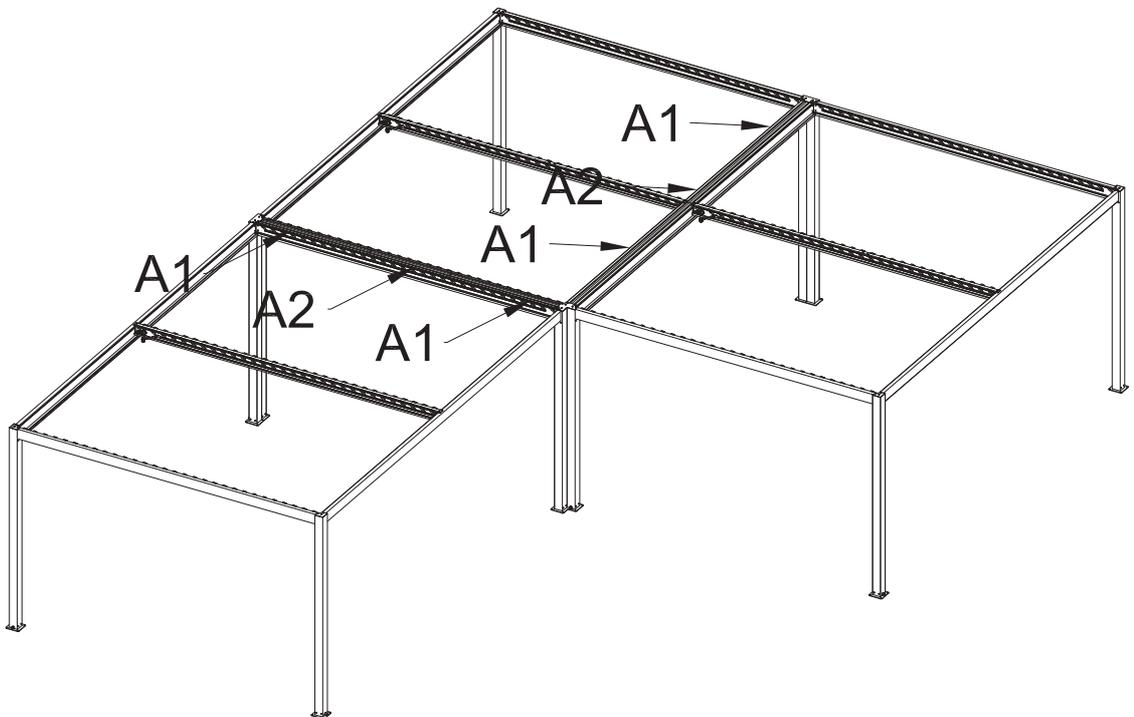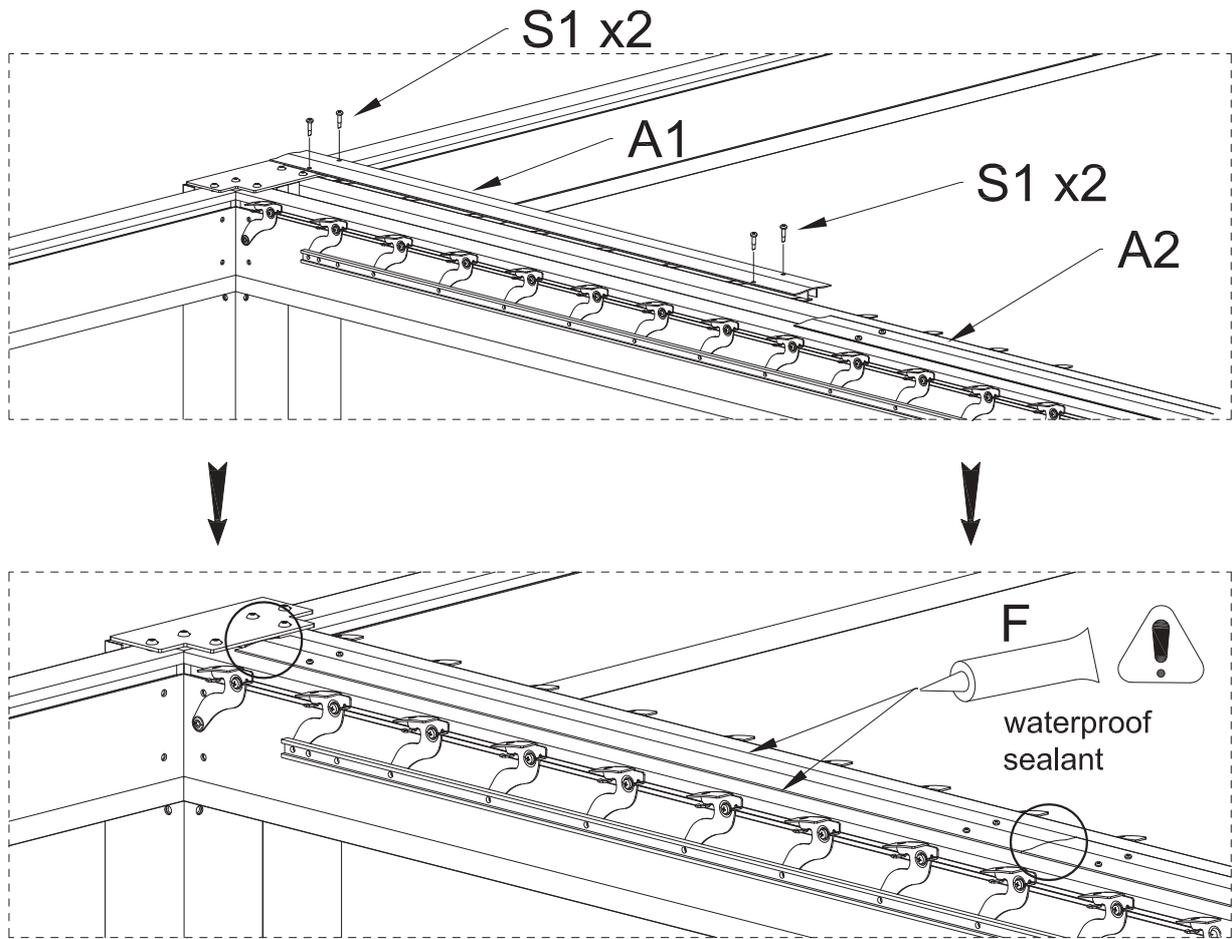

A1		QTY:4PCS	S1	 QTY:24PCS
A2		QTY:2PCS	E	

5 In the combined column, the water outlet of one or two columns may be blocked, and waterproof tape needs to be applied at the crossbeam drainage outlet for treatment.

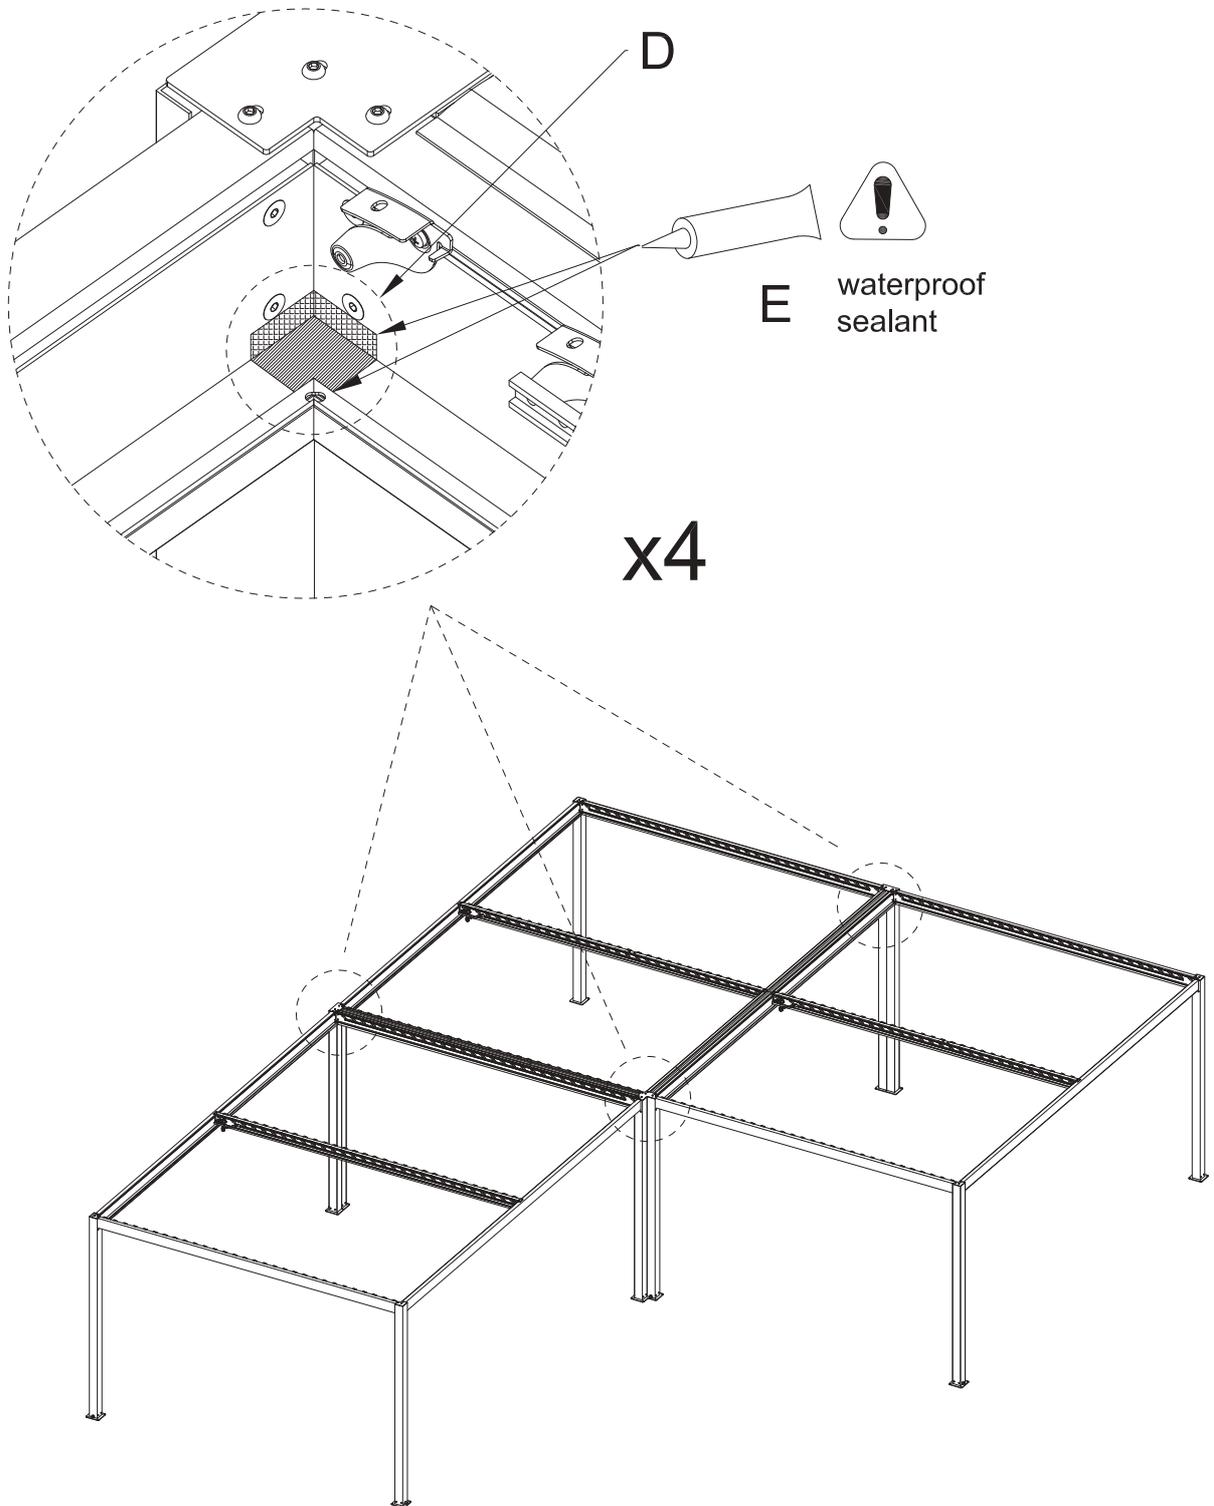

D		QTY:4PCS	E	
---	-------------------------------------------------------------------------------------	----------	---	-------------------------------------------------------------------------------------

Contact information

Austria



Belgium



Croatia



Denmark



Estonia



Finland



France



Germany



Ireland



Italy



Latvia



Lithuania



Nederland



Norway



Poland



Portugal



Spain



Sweden



Switzerland



UK

