


DANCOVER[®]







.com

Manual
for
Modular Connector Set MP-02
f/Pergola Gazebo San Pablo

User's Manual

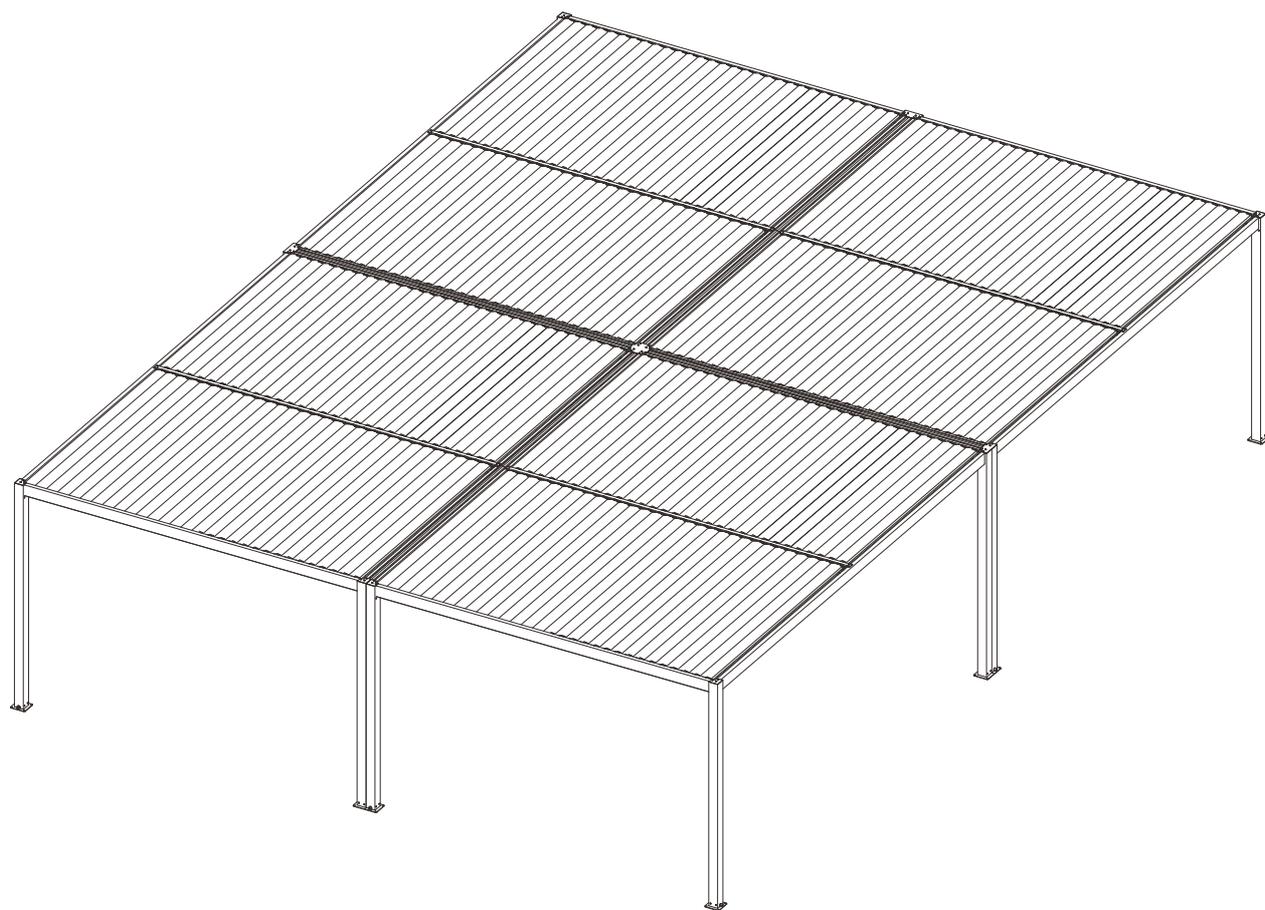

Part List

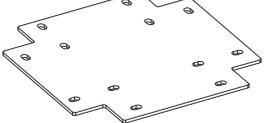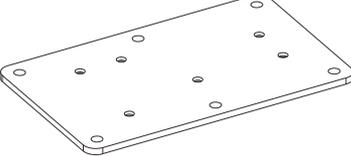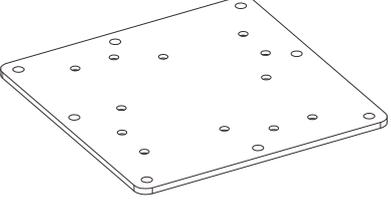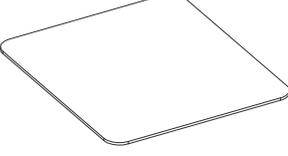
REF	PHOTO	QTY
A1	1351mm Rain cover plate 	8
A2	992mm Rain cover plate 	4
B1	Two-Column Cover Plate 	4
B2	Four-Column Cover Plate 	1
C1	Two-Column Base Plate 	4
C2	Four-Column Base Plate 	1
D	Waterproof Sticker 	8
E	waterproof Sealant 	6

Kind Reminder


General Guidelines

- Please keep this manual for future use after you install the pergola;
- Please read the following instruction carefully before assembly;
- This manual may not include every details and considerable steps;
- Please contact us when you need further information or any help;

What you may need?



Ladder x2



Tapeline



Mallet




Glove



Ø10mm


electric screw driver

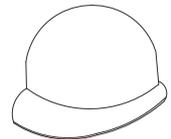


Safety hat




Level



Marker Pen



Wrench

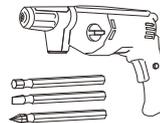

screwdriver or electric screwdriver




Sleeve tool




4#/6#


Allen key

1 In the figure: schematic of accessory installation

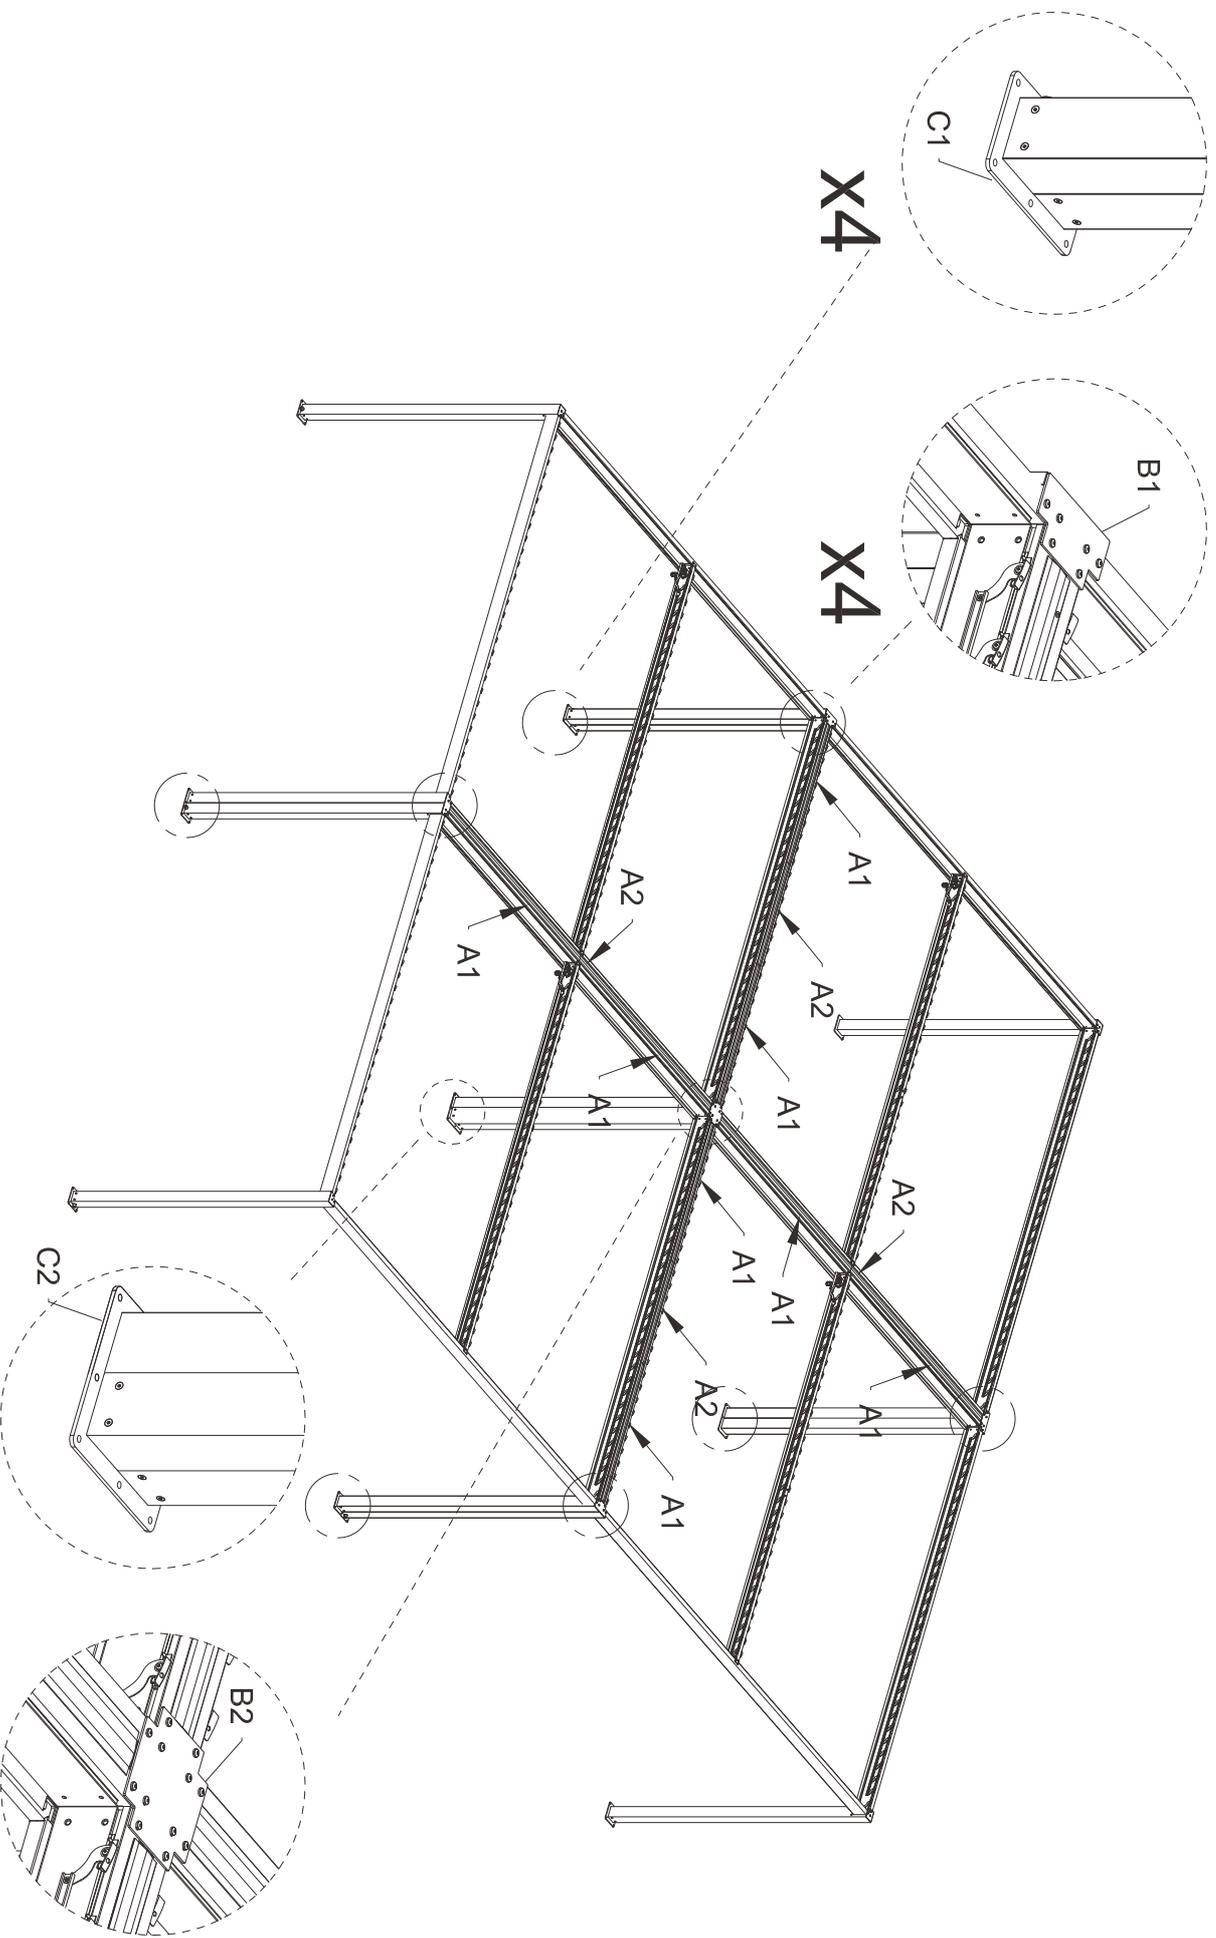



2-a Combine the two columns using the dual-column base plate (where only the base plate is replaced, and the drainage joint and screws use the original accessories).

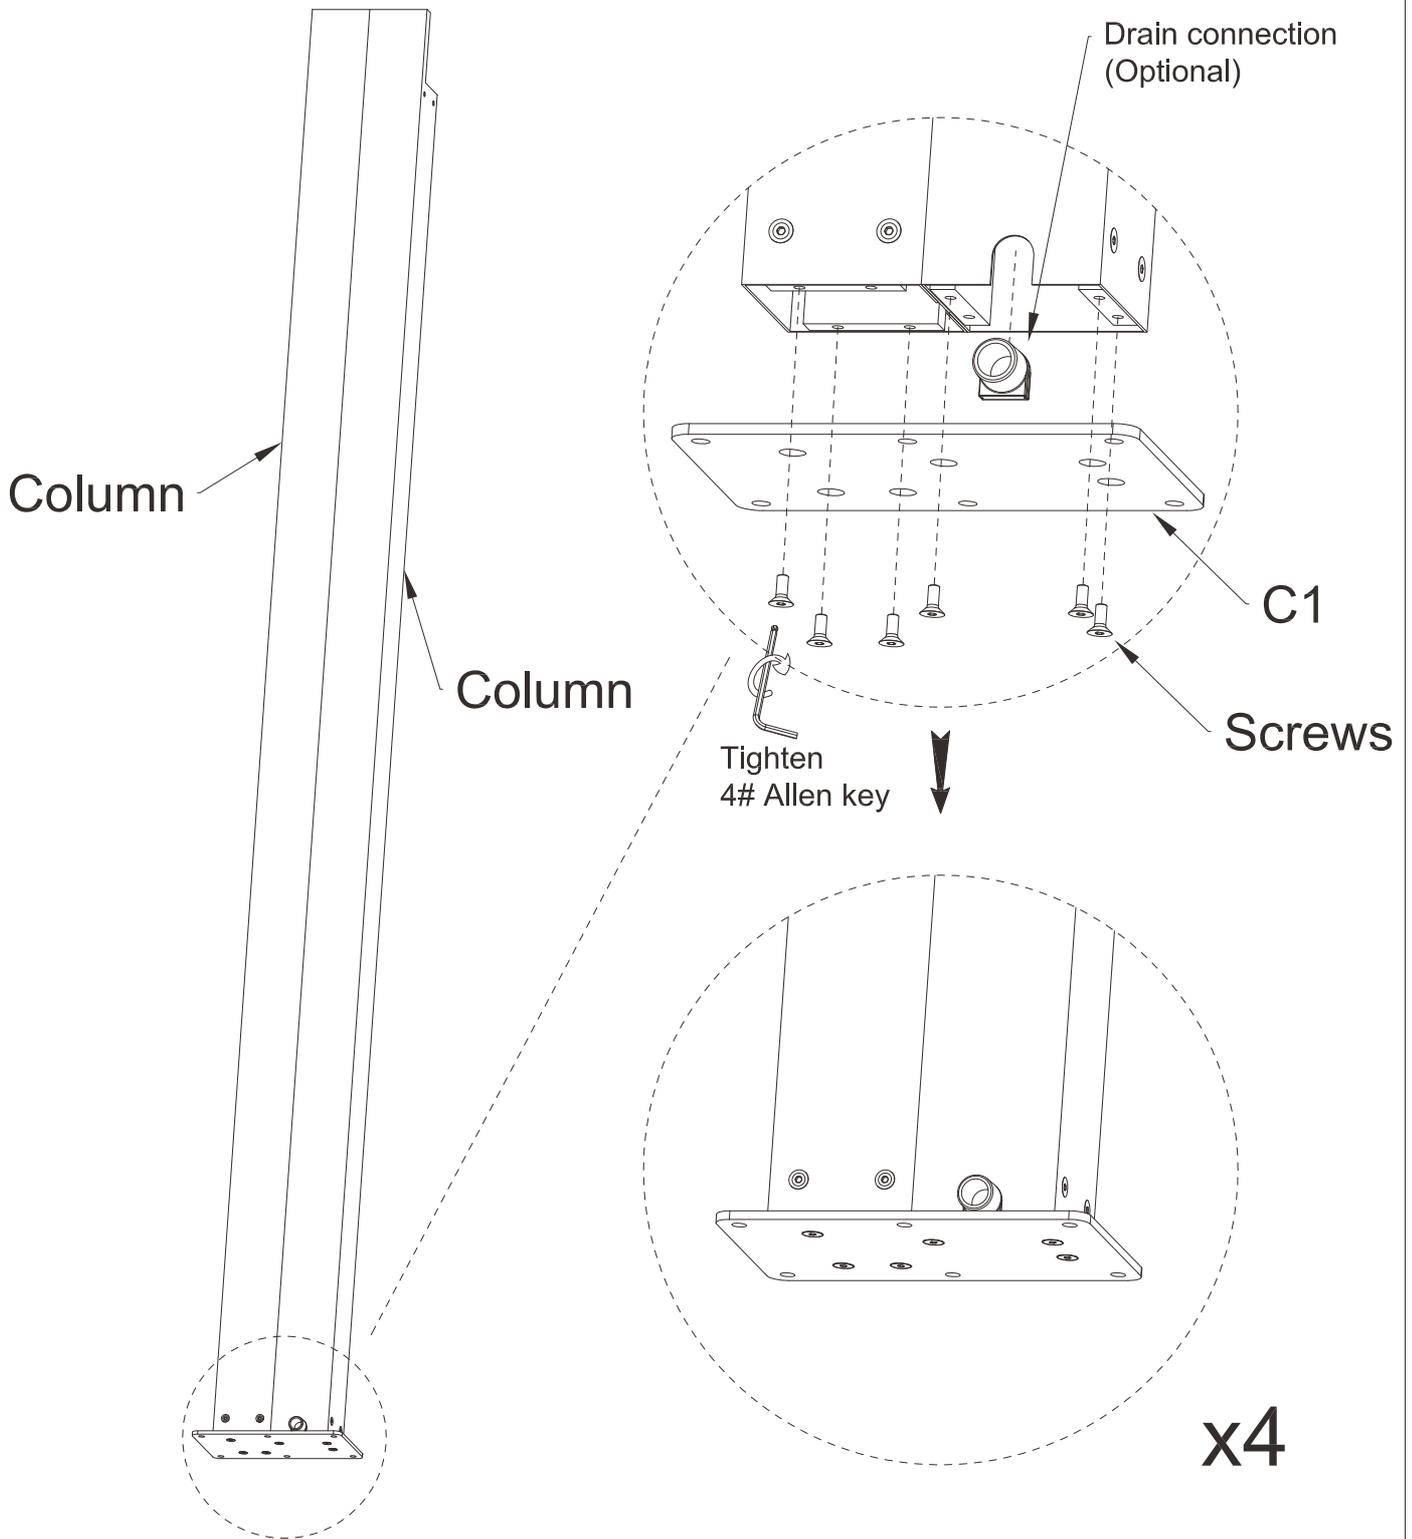



C1  QTY:4PCS


2-b Combine the three columns using the Four-column base plate (where only the base plate is replaced, and the drainage joint and screws use the original accessories).

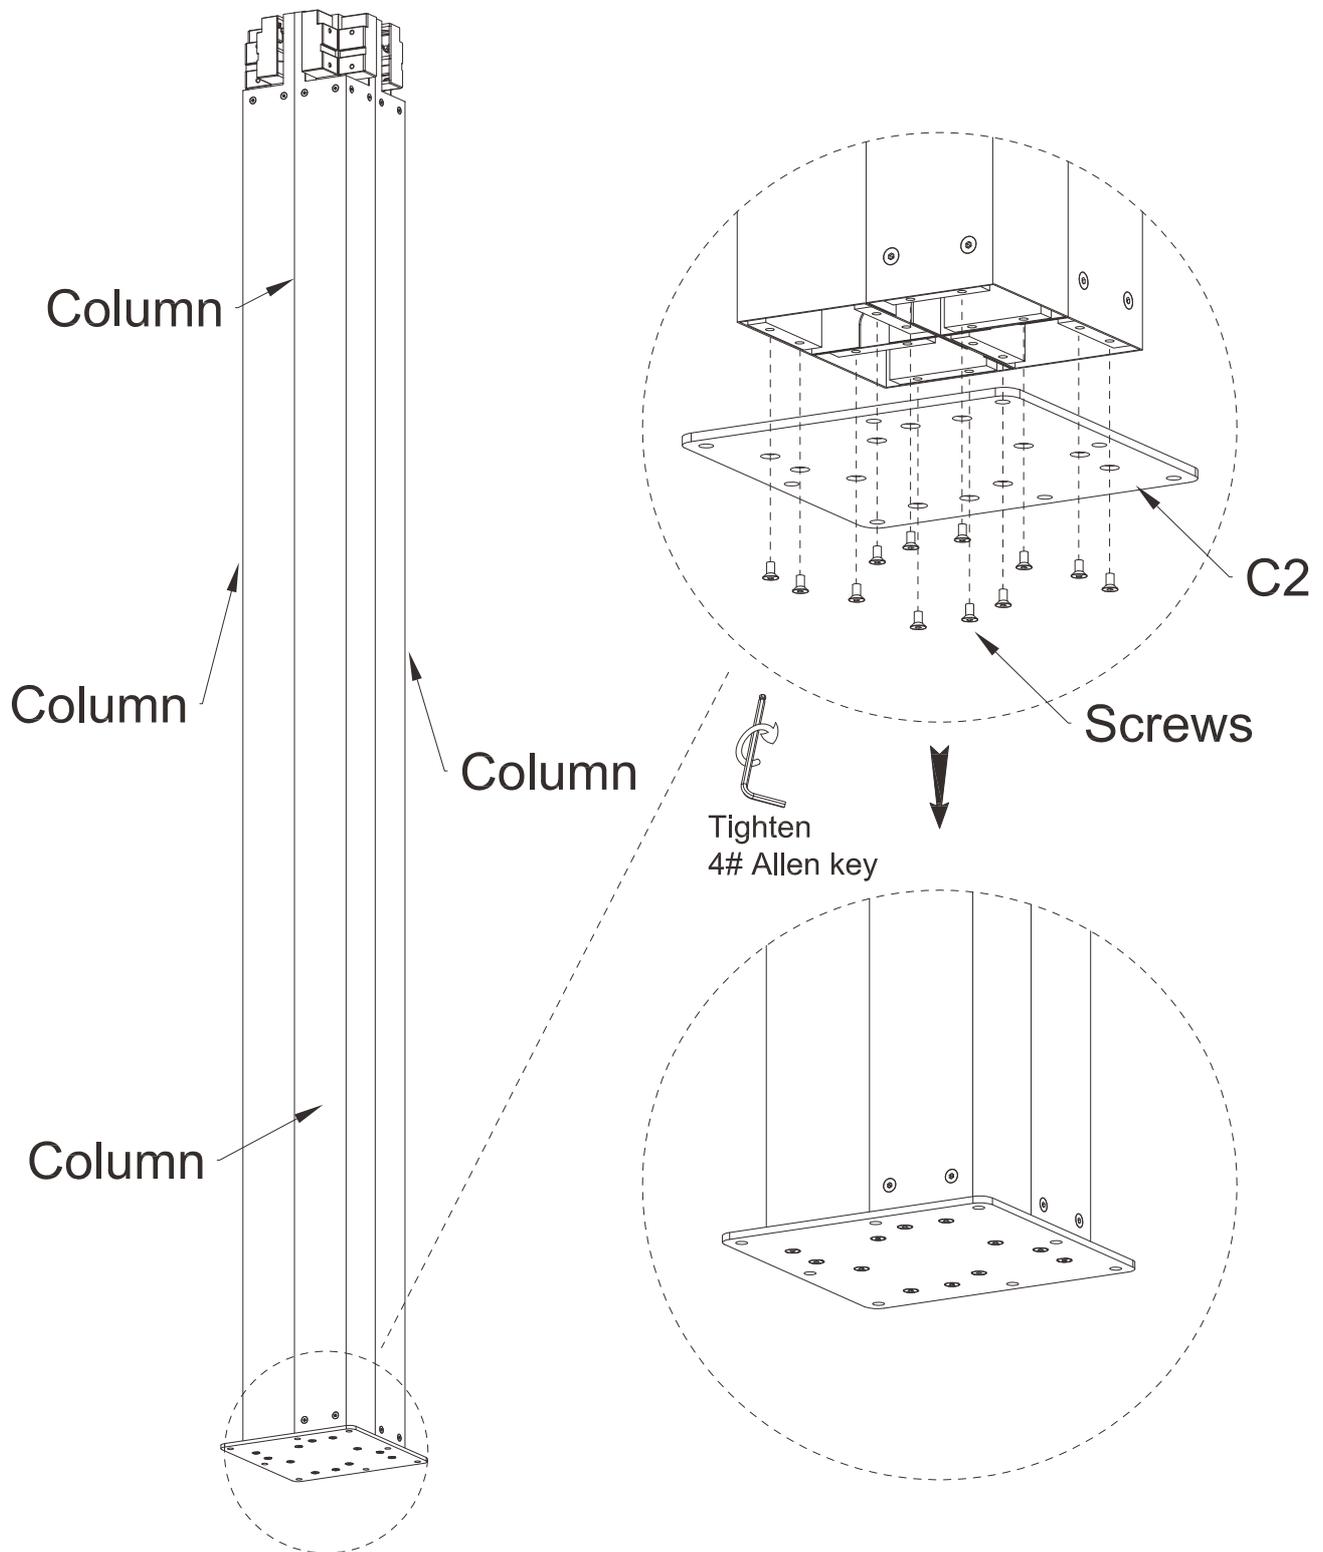



C2  QTY:1PC

3 Install the column cover (fixing screws use the original configuration).

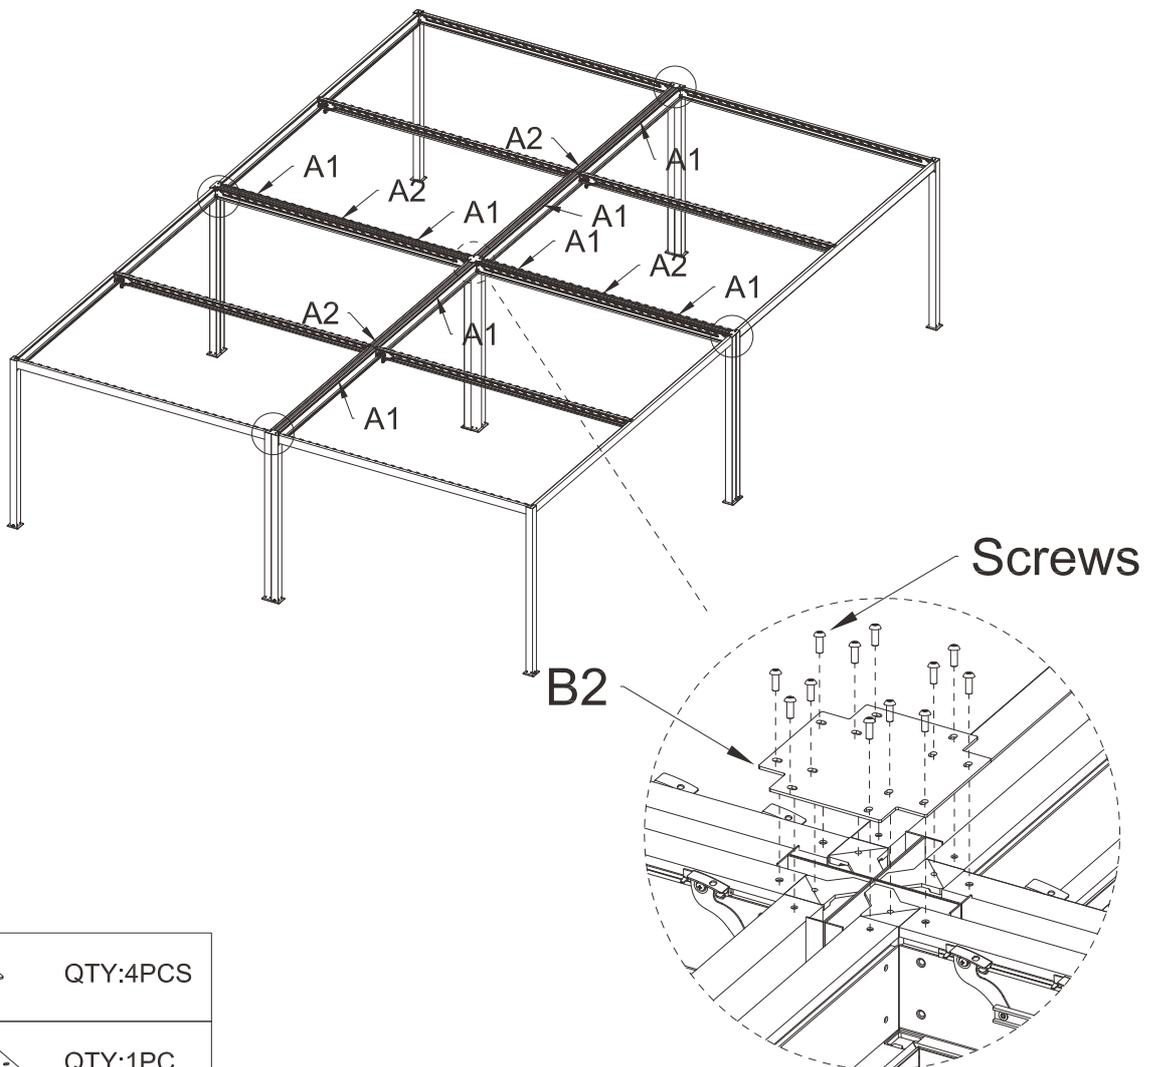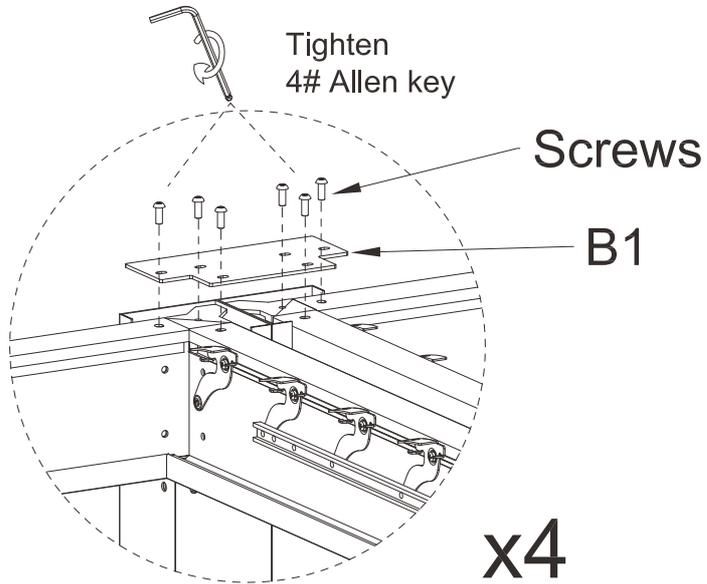


B1		QTY:4PCS
B2		QTY:1PC


4 Install the rain cover panel and apply waterproof sealant at the seams.

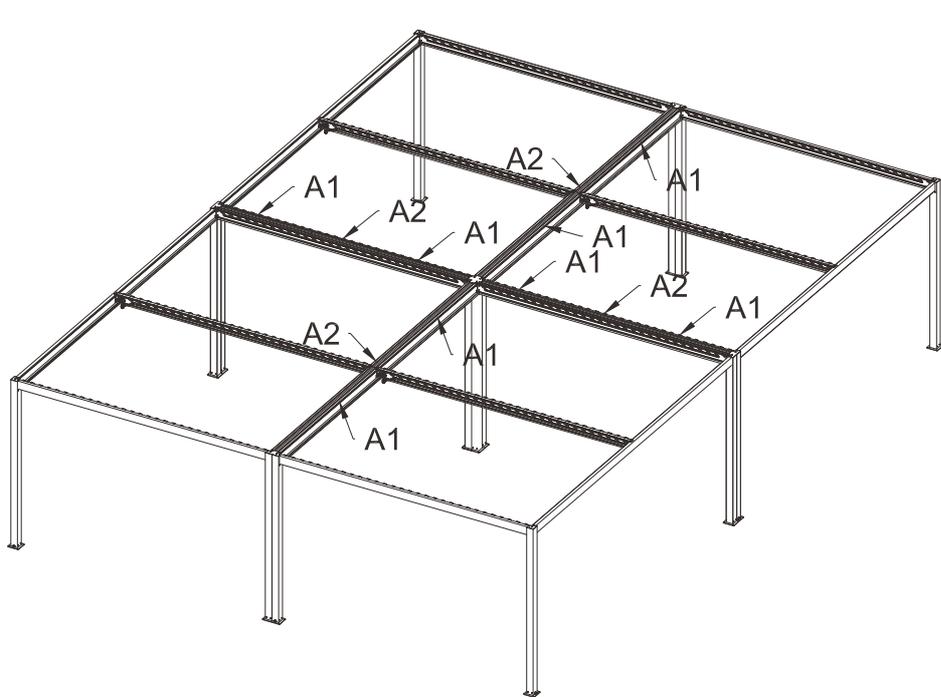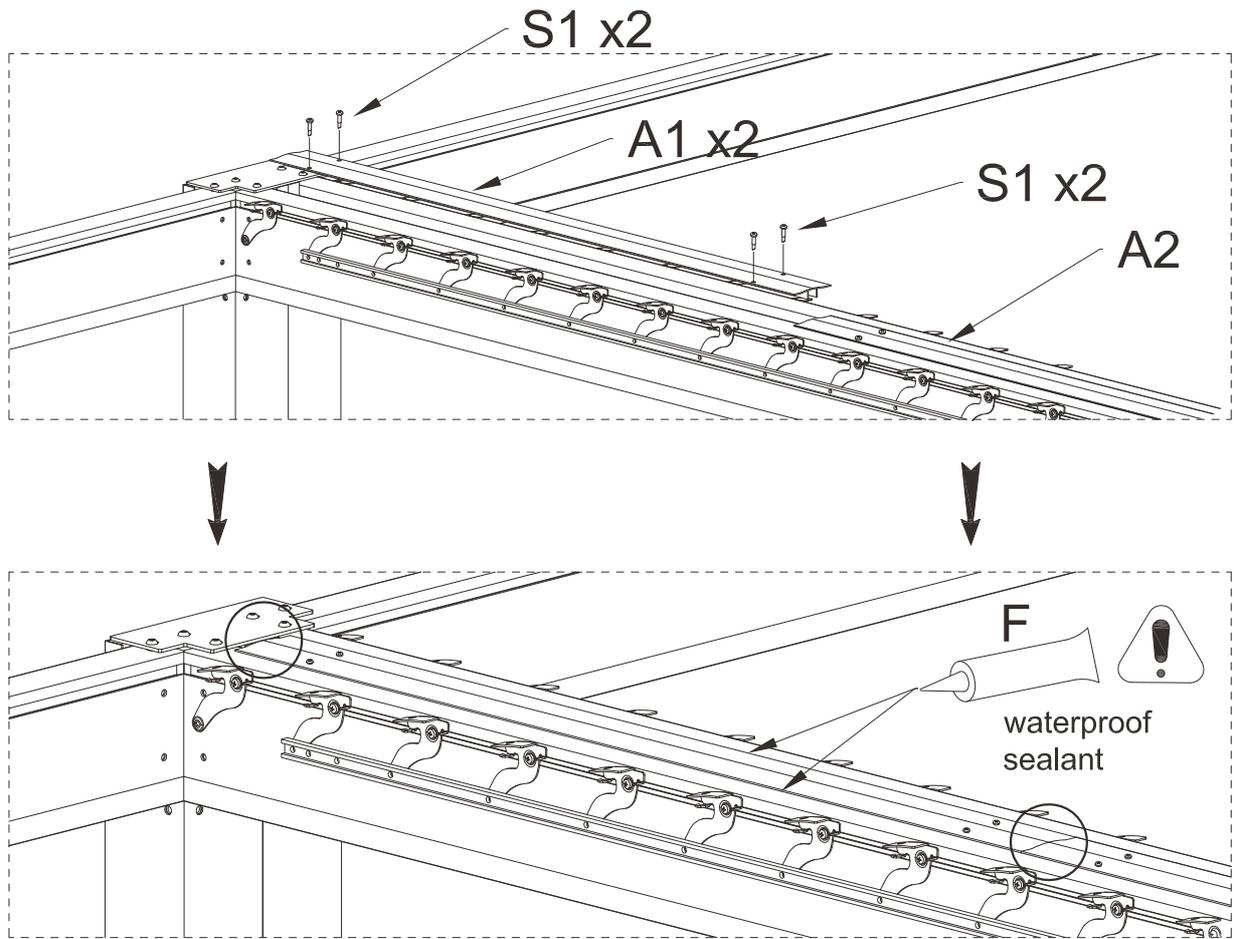

x4

<p>A1</p> 	<p>QTY:8PCS</p>	<p>S1</p>  <p>QTY:48PCS</p>
<p>A2</p> 	<p>QTY:4PCS</p>	<p>E</p> 

5 In the combined column, the water outlet of one or two columns may be blocked, and waterproof tape needs to be applied at the crossbeam drainage outlet for treatment.

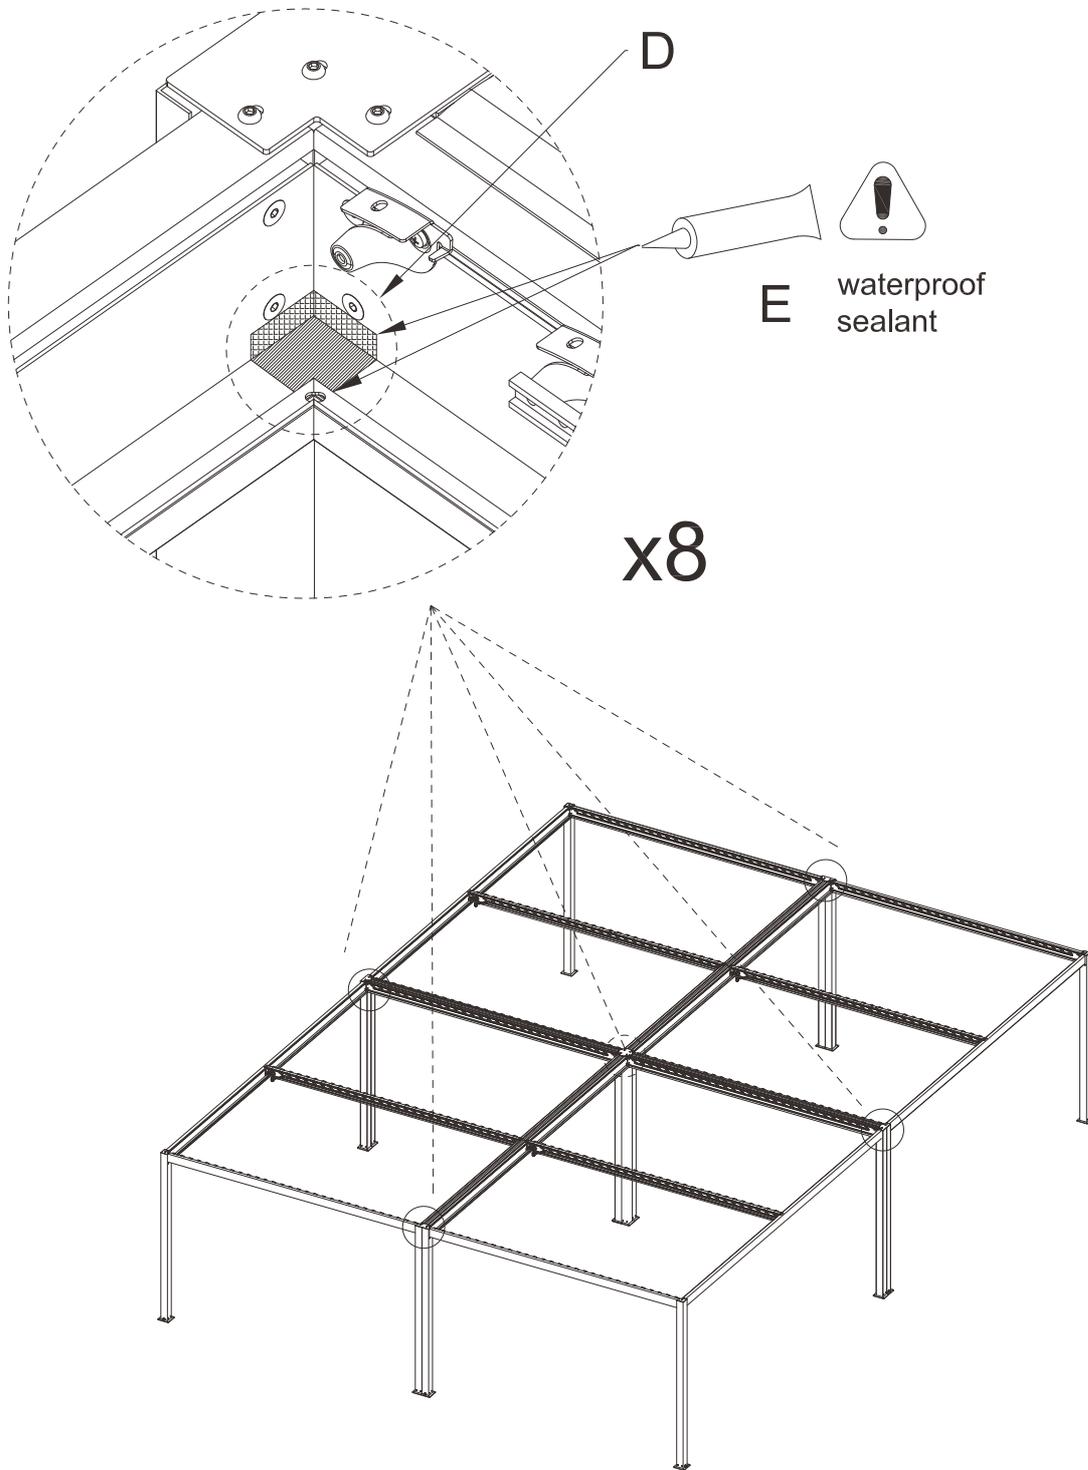

D		QTY:8PCS	E	
---	---	----------	---	---

Contact information

Austria



Belgium



Croatia



Denmark



Estonia



Finland



France



Germany



Ireland



Italy



Latvia



Lithuania



Nederland



Norway



Poland



Portugal



Spain



Sweden



Switzerland



UK

